

Digital Still Camera
Kamera Digital

Instruction Manual
Panduan Pengguna

Cyber-shot

DSC-WX350

©2014 Sony Corporation Printed in China



English

Learning more about the camera ("Help Guide")



"Help Guide" is an on-line manual. Refer to it for in-depth instructions on the many functions of the camera.
① Access the Sony support page.
<http://www.sony.net/SonyInfo/Support/>
② Select your country or region.
③ Search for the model name of your camera within the support page.
• Check the model name on the bottom of your camera.

Checking the supplied items


The number in parentheses indicates the number of pieces.

- Camera (1)
 - Rechargeable battery pack NP-BX1 (1)
 - Micro USB cable (1)
 - AC Adaptor AC-UB10C/UB10D (1)
 - Power cord (mains lead) (not supplied in the USA, Canada and China) (1)
 - Wrist strap (1)
 - Instruction Manual (this manual) (1)
 - Wi-Fi Connection/One-touch (NFC) Guide (1)
- This Guide describes the function using Wi-Fi.


Charging the battery pack

Turn off the camera while charging the battery.

For customers in the USA,
Canada and China

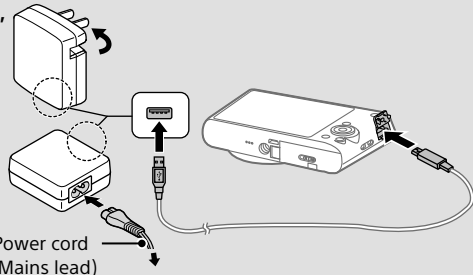

For customers in
countries/regions
other than the USA,
Canada and China

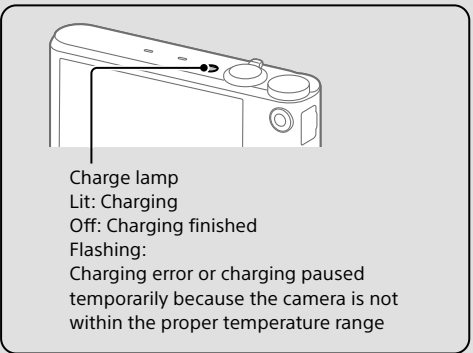


- 1 Connect the camera to the AC Adaptor (supplied), using the micro USB cable (supplied).
- 2 Connect the AC Adaptor to the wall outlet (wall socket).
• Be sure to use only genuine Sony brand battery packs, micro USB cable (supplied) and AC Adaptor (supplied).

Charging time (Full charge)

The charging time is approximately 230 min. using the AC Adaptor (supplied).

To charge by connecting to a computer

The battery pack can be charged by connecting the camera to a computer using a micro USB cable.

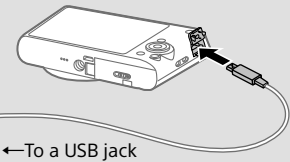


Battery life and number of images that can be recorded and played back

	Total usage time	Number of images
Shooting (still images)	Approx. 235 min.	Approx. 470 images
Actual shooting (movies)	Approx. 70 min.	—
Continuous shooting (movies)	Approx. 100 min.	—
Viewing (still images)	Approx. 330 min.	Approx. 6600 images

• The number is based on the CIPA standard.
(CIPA: Camera & Imaging Products Association)

Inserting a memory card (sold separately)

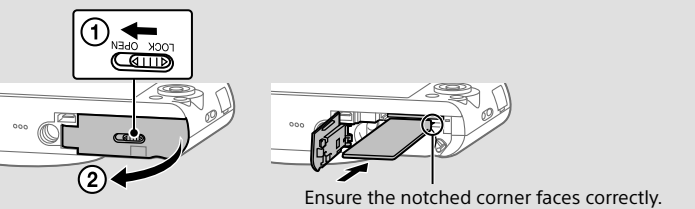


- 1 Open the cover.
- 2 Insert the memory card (sold separately).

To remove the memory card/battery pack

Memory card: Push the memory card in once to eject the memory card.
Battery pack: Slide the battery eject lever. Be sure not to drop the battery pack.

Setting the clock

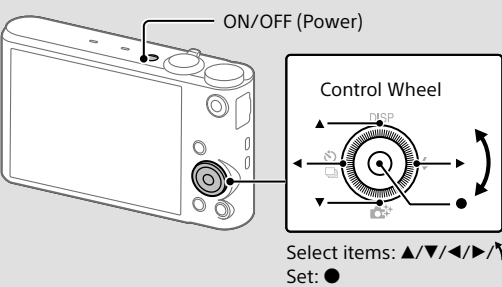


- 1 Press the ON/OFF (Power) button.
- 2 Check that [Enter] is selected on the screen, then press ● on the control wheel.
- 3 Select a desired geographic location by following the on-screen instructions, then press ●.
- 4 Set [Daylight Savings], [Date/Time] and [Date Format], then press ●.
- 5 Check that [Enter] is selected, then press ●.

To set the date and time again

Select MENU → [Setup] 4 → [Date/Time Setup] to open the date & time setting display.

Shooting still images/movies

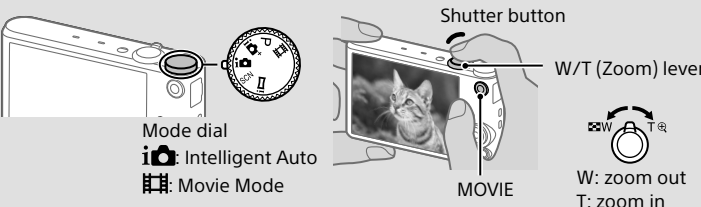


Shooting still images

- 1 Press the shutter button halfway down to focus.
- 2 Press the shutter button fully down to shoot an image.

Shooting movies

- 1 Press the MOVIE (Movie) button to start recording.
- 2 Press the MOVIE (Movie) button again to stop recording.

Viewing images

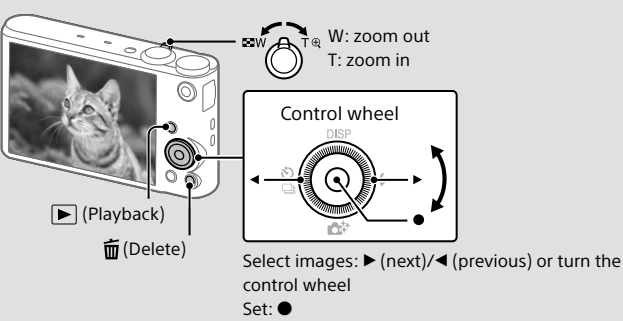

- 1 Press [Playback] button.


To select next/previous image

Select an image by pressing ► (next)/◄ (previous) on the control wheel or by turning the control wheel.
Press ● on the control wheel to view movies.

To delete an image

- ① Press [Delete] button.
- ② Select [Delete] with ▲ on the control wheel, then press ●.

Features of PlayMemories Home™

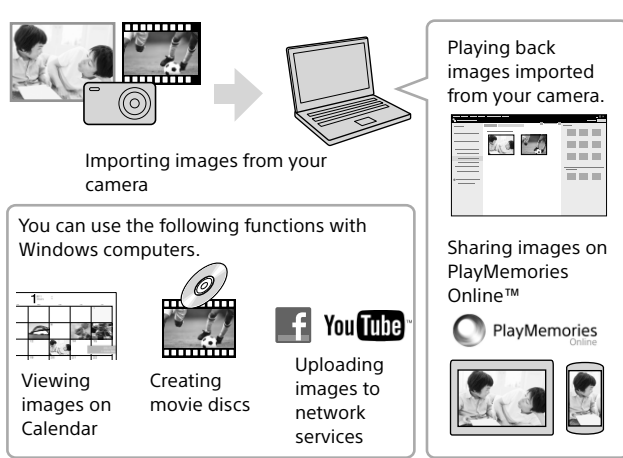

Downloading PlayMemories Home

You can download PlayMemories Home from the following URL:
www.sony.net/pm/

- For details on applications for Mac computers, visit the following URL:
<http://www.sony.co.jp/imsoft/Mac/>

Recommended computer environment

You can check the system requirements for software at the following URL:
www.sony.net/pcenv/



Notes on using the camera

On use and care

Avoid rough handling, disassembling, modifying, physical shock, or impact such as hammering, dropping, or stepping on the product. Be particularly careful of the lens.

On database files

When you insert a memory card without a database file into the camera and turn on the power, part of the memory card capacity is used to automatically create a database file. It may take some time until you can perform the next operation. If a database file error occurs, import all the images to a computer using PlayMemories Home, then format the memory card.

Notes on recording/playback

- To ensure stable operation of the memory card, we recommend that you use this camera to format any memory card being used with this camera for the first time. Note that formatting will erase all data recorded on the memory card. This data cannot be restored. Be sure to back up any important data to a computer or other storage location.
- Before you start recording, make a trial recording to make sure that the camera is working correctly.
- The camera is neither dust-proof, nor splash-proof, nor water-proof.
- Avoid exposing the camera to water. If water enters inside the camera, a malfunction may occur. In some cases, the camera cannot be repaired.
- Do not aim the camera at the sun or other bright light. It may cause the malfunction of the camera.
- Do not use the camera near a location that generates strong radio waves or emits radiation. Otherwise, the camera may not properly record or play back images.
- Using the camera in sandy or dusty locations may cause malfunctions.
- Do not shake or strike the camera. It may cause a malfunction and you may not be able to record images. Furthermore, the recording media may become unusable or image data may be damaged.
- Clean the flash surface before use. The heat of the flash emission may cause dirt on the flash surface to start smoking or burning. Wipe the flash surface with a soft cloth to remove dirt or dust, etc.

On camera's temperature

Your camera and battery may get hot due to continuous use, but it is not a malfunction.

On the overheat protection

Depending on the camera and battery temperature, you may be unable to record movies or the power may turn off automatically to protect the camera. A message will be displayed on the screen before the power turns off or you can no longer record movies. In this case, leave the power off and wait until the camera and battery temperature goes down. If you turn on the power without letting the camera and battery cool enough, the power may turn off again or you may be unable to record movies.

Note on wireless LAN

We assume no responsibility whatsoever for any damage caused by unauthorized access to, or unauthorized use of, destinations loaded on the camera, resulting from loss or theft.

Warning on copyright

Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws.

No compensation for damaged content or recording failure

Sony cannot compensate for failure to record or loss or damage of recorded content due to a malfunction of the camera or recording media, etc.

On moisture condensation

If the camera is brought directly from a cold to a warm location, moisture may condense inside or outside the camera. This moisture condensation may cause a malfunction of the camera.

If moisture condensation occurs

Turn off the camera and wait about an hour for the moisture to evaporate. Note that if you attempt to shoot with moisture remaining inside the lens, you will be unable to record clear images.

How to store the battery pack

To prevent staining the terminal, short-circuiting, etc., be sure to use a plastic bag, etc. to keep away from metal materials when carrying or storing.

Specifications

Camera

[System]

Image device: 7.82 mm (1/2.3 type) Exmor R™ CMOS sensor
Total pixel number of camera: Approx. 21.1 Megapixels
Effective pixel number of camera: Approx. 18.2 Megapixels
Lens: Sony G 20× zoom lens
f = 4.3 mm – 86 mm (25 mm – 500 mm (35 mm film equivalent))
F3.5 (W) – F6.5 (T)
While shooting movies (16:9): 27 mm – 540 mm*
While shooting movies (4:3): 33 mm – 660 mm*
* When [SteadyShot] is set to [Standard]
SteadyShot: Optical
File format:
Still images: JPEG (DCF, Exif, MPF Baseline) compliant, DPOF compatible
Movies (AVCHD format):
AVCHD format Ver. 2.0 compatible
Video: MPEG-4 AVC/H.264
Audio: Dolby Digital 2ch, equipped with Dolby Digital Stereo Creator
• Manufactured under license from Dolby Laboratories.
Movies (MP4 format):
Video: MPEG-4 AVC/H.264
Audio: MPEG-4 AAC-LC 2ch
Recording media: Memory Stick PRO Duo™ media, Memory Stick Micro™ media, SD cards, microSD memory cards
Flash: Flash range (ISO sensitivity (Recommended Exposure Index) set to Auto):
Approx. 0.2 m to 4.3 m (7 7/8 in to 14 ft 1 3/8 in) (W)
Approx. 2.0 m to 2.4 m (6 ft 6 3/4 in to 7 ft 10 1/2 in) (T)

[Input and Output connectors]

HDMI connector: HDMI micro jack
Multi/Micro USB Terminal*: USB communication
USB communication: Hi-Speed USB (USB 2.0)
* Supports Micro USB compatible device.

[Screen]

LCD screen: 7.5 cm (3.0 type) TFT drive
Total number of dots: 460 800 dots

[Power, general]

Power: Rechargeable battery pack NP-BX1, 3.6 V
AC Adaptor AC-UB10C/UB10D, 5 V
Power consumption (during shooting): Approx. 1.0 W
Operating temperature: 0 °C to 40 °C (32 °F to 104 °F)
Storage temperature: –20 °C to +60 °C (–4 °F to +140 °F)
Dimensions (CIPA compliant):
96 mm × 54.9 mm × 25.7 mm (3 7/8 in × 2 1/4 in × 1 1/16 in) (W/H/D)
Mass (CIPA compliant) (including NP-BX1 battery pack, Memory Stick PRO Duo media):
Approx. 164 g (5.8 oz)
Microphone: Stereo
Speaker: Monaural
Exif Print: Compatible
PRINT Image Matching III: Compatible

[Wireless LAN]

Supported standard: IEEE 802.11 b/g/n
Frequency: 2.4GHz

Supported security protocols: WEP / WPA-PSK/WPA2-PSK
Configuration method: WPS (Wi-Fi Protected Setup) / manual
Access method: Infrastructure Mode
NFC: NFC Forum Type 3 Tag compliant

AC Adaptor AC-UB10C/UB10D

Power requirements: AC 100 V to 240 V, 50 Hz/60 Hz, 70 mA
Output voltage: DC 5 V, 0.5 A
Operating temperature: 0 °C to 40 °C (32 °F to 104 °F)
Storage temperature: –20 °C to +60 °C (–4 °F to +140 °F)
Dimensions:
Approx. 50 mm × 22 mm × 54 mm (2 in × 7/8 in × 2 1/4 in) (W/H/D)

Rechargeable battery pack NP-BX1

Battery type: Lithium-ion battery
Maximum voltage: DC 4.2 V
Nominal voltage: DC 3.6 V
Maximum charge voltage: DC 4.2 V
Maximum charge current: 1.89 A
Capacity: 4.5 Wh (1 240 mAh)

Design and specifications are subject to change without notice.

Trademarks

- Memory Stick and are trademarks or registered trademarks of Sony Corporation.
- "AVCHD Progressive" and "AVCHD Progressive" logotype are trademarks of Panasonic Corporation and Sony Corporation.
- Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- Microsoft, Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Mac is a registered trademark of Apple Inc. in the United States and other countries.
- iOS is a registered trademark or trademark of Cisco Systems, Inc.
- Android, Google Play are trademarks of Google Inc.
- Wi-Fi, the Wi-Fi logo, Wi-Fi PROTECTED SET-UP are registered trademarks of the Wi-Fi Alliance.
- iPhone and iPad are trademarks of Apple Inc., registered in the U.S. and other countries.
- The N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.
- DLNA and DLNA CERTIFIED are trademarks of Digital Living Network Alliance.
- SDXC logo is a trademark of SD-3C, LLC.
- Facebook and the "f" logo are trademarks or registered trademarks of Facebook, Inc.
- YouTube and the YouTube logo are trademarks or registered trademarks of Google Inc.
- In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers.
However, the ™ or ® marks may not be described in this manual.

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

<http://www.sony.net/>

Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call your Sony dealer regarding this product.
Model No. DSC-WX350
Serial No. _____
Model No. AC-UB10C/AC-UB10D
Serial No. _____

WARNING

To reduce fire or shock hazard, do not expose the unit to rain or moisture.

IMPORTANT SAFETY INSTRUCTIONS
-SAVE THESE INSTRUCTIONS
DANGER
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS

If the shape of the plug does not fit the power outlet, use an attachment plug adaptor of the proper configuration for the power outlet.

CAUTION

Battery pack

- If the battery pack is mishandled, the battery pack can burst, cause a fire or even chemical burns.
Observe the following cautions.
- Do not disassemble.
 - Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it.
 - Do not short circuit and do not allow metal objects to come into contact with the battery terminals.
 - Do not expose to high temperature above 60°C (140°F) such as in direct sunlight or in a car parked in the sun.
 - Do not incinerate or dispose of in fire.
 - Do not handle damaged or leaking lithium ion batteries.
 - Be sure to charge the battery pack using a genuine Sony battery charger or a device that can charge the battery pack.
 - Keep the battery pack out of the reach of small children.
 - Keep the battery pack dry.
 - Replace only with the same or equivalent type recommended by Sony.
 - Dispose of used battery packs promptly as described in the instructions.

AC Adaptor

Use the nearby wall outlet (wall socket) when using the AC Adaptor. Disconnect the AC Adaptor from the wall outlet (wall socket) immediately if any malfunction occurs while using the apparatus.

The power cord (mains lead), if supplied, is designed specifically for use with this camera only, and should not be used with other electrical equipment.

For Customers in Europe

Notice for the customers in the countries applying EU Directives

Manufacturer: Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan
For EU product compliance: Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany



Hereby, Sony Corporation, declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. For details, please access the following URL:
<http://www.compliance.sony.de/>

Notice

If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.
This product has been tested and found compliant with the limits set out in the EMC regulation for using connection cables shorter than 3 meters (9.8 feet).

The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit.

Disposal of waste batteries and electrical and electronic equipment (applicable in the European Union and other European countries with separate collection systems)



This symbol on the product, the battery or on the packaging indicates that the product and the battery shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these products and batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery and the electrical and electronic equipment will be treated properly, hand over these products at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product or battery.

For Customers in Singapore

Complies with
IDA Standards
DB00353

For customers who purchased their camera from a store in Japan that caters to tourists

Note

Some certification marks for standards supported by the camera can be confirmed on the screen of the camera.
Select MENU → [Setup] 6 → [Certification Logo].
If display is not possible due to problems such as camera failure, contact your Sony dealer or local authorized Sony service facility.

Mempelajari lebih lanjut tentang kamera ("Panduan Help")

"Panduan Help" adalah panduan pengguna online. Untuk petunjuk lengkap tentang berbagai fungsi kamera, lihat petunjuk tersebut.

- ① Mengakses halaman pendukung Sony. <http://www.sony.net/SonyInfo/Support/>
- ② Pilih negara atau wilayah Anda.
- ③ Cari nama model kamera di halaman dukungan tersebut.

- Lihat nama model di bagian bawah kamera.

Memeriksa item yang tersedia


- Angka dalam tanda kurung menunjukkan jumlah.
- Kamera (1)
 - Unit baterai isi ulang NP-BX1 (1)
 - Kabel micro USB (1)
 - Adaptor AC AC-UB10C/UB10D (1)
 - Kabel daya (tidak tersedia di Amerika Serikat, Kanada dan China) (1)
 - Tali kamera (1)
 - Panduan Pengguna (panduan ini) (1)
 - Wi-Fi Connection/One-touch (NFC) Guide (1)
- Panduan ini menjelaskan fungsi menggunakan Wi-Fi.

Mengisi daya unit baterai

Matikan kamera selama baterai sedang diisi.

Untuk pelanggan di Amerika Serikat, Kanada dan China

Untuk pelanggan di negara/kawasan selain Amerika Serikat, Kanada dan China

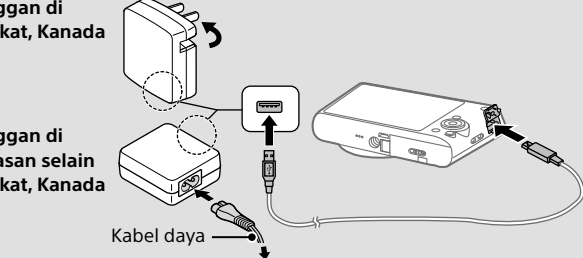

1 Sambungkan kamera ke Adaptor AC (tersedia), menggunakan kabel micro USB (tersedia).

2 Sambungkan Adaptor AC ke stopkontak.


- Pastikan hanya menggunakan unit baterai, kabel micro USB (tersedia), dan Adaptor AC (tersedia) asli merek Sony.

Waktu pengisian daya (Hingga penuh)

Waktu pengisian daya sekitar 230 menit menggunakan Adaptor AC (tersedia).

Untuk mengisi dengan menghubungkan ke komputer

Unit baterai dapat diisi daya dengan menyambungkan kamera ke komputer menggunakan kabel micro USB.

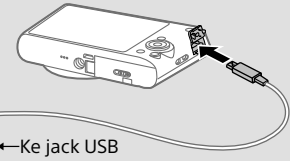


Masa pakai baterai dan jumlah gambar yang dapat disimpan dan diputar

	Total waktu penggunaan	Jumlah gambar
Pemotretan (gambar foto)	Sekitar 235 menit	Sekitar 470 gambar
Pemotretan aktual (film)	Sekitar 70 menit	—
Pemotretan berkelanjutan (film)	Sekitar 100 menit	—
Tampilan (gambar foto)	Sekitar 330 menit	Sekitar 6600 gambar

- Angka berdasarkan standar CIPA. (CIPA: Camera & Imaging Products Association)

Memasukkan kartu memori (dijual terpisah)

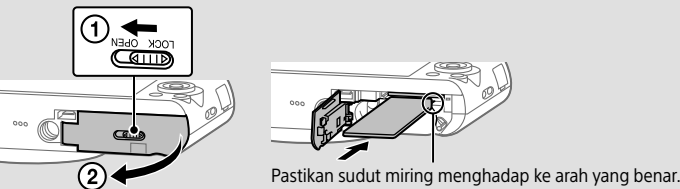


- 1 Buka penutup.
- 2 Masukkan kartu memori (dijual terpisah).

Untuk mengeluarkan kartu memori/unit baterai

Kartu memori: Dorong kartu memori dengan sekali tekan untuk mengeluarkan kartu memori tersebut.

Unit baterai: Geser tuas pelepas baterai. Pastikan agar unit baterai tidak terjatuh.

Menetapkan jam

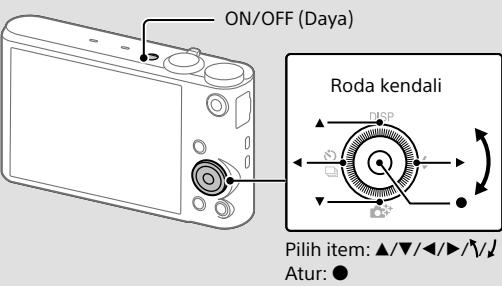


- 1 Tekan tombol ON/OFF (Daya).
- 2 Pastikan bahwa [Masuk] dipilih pada layar, lalu tekan ● pada roda kendali.
- 3 Pilih lokasi geografis yang diinginkan dengan mengikuti petunjuk pada layar, lalu tekan ●.
- 4 Tetapkan [Penghmtn Siang Hari], [Tanggal/Jam] dan [Format Tanggal], lalu tekan ●.
- 5 Pastikan bahwa [Masuk] dipilih, lalu tekan ●.

Untuk mengatur tanggal dan waktu kembali

Pilih MENU → (Pengaturan) 4 → [Pengaturan Tgl/Jam] untuk membuka tampilan pengaturan tanggal & waktu.

Memotret gambar foto/merekam film

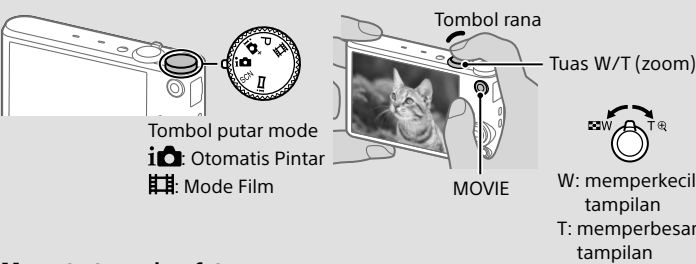


Memotret gambar foto

- 1 Tekan separuh tombol rana untuk memfokuskan gambar.
- 2 Tekan sepenuhnya tombol rana untuk memotret gambar.

Merekam film

- 1 Tekan tombol MOVIE (Film) untuk memulai perekaman.
- 2 Tekan kembali tombol MOVIE (Film) untuk menghentikan perekaman.

Melihat gambar

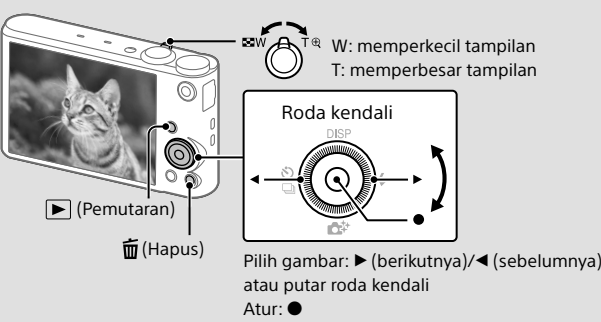

- 1 Tekan tombol (Pemutaran).

Untuk memilih gambar berikut/sebelum

Pilih gambar dengan menekan (berikutnya)/ (sebelumnya) pada roda kendali atau dengan memutar roda kendali.

Tekan ● pada roda kendali untuk melihat film.

Untuk menghapus sebuah gambar

- ① Tekan tombol (Hapus).
- ② Pilih [Hapus] dengan pada roda kendali, lalu tekan ●.

Fitur di PlayMemories Home™



Mengunduh PlayMemories Home

Anda bisa mengunduh PlayMemories Home dari URL berikut: www.sony.net/pm/

- Untuk informasi lebih detail mengenai aplikasi untuk komputer Mac, kunjungi URL berikut: <http://www.sony.co.jp/imsoft/Mac/>

Environment komputer yang dianjurkan

Anda dapat memeriksa persyaratan sistem untuk perangkat lunak di URL berikut. www.sony.net/pcenv/



Catatan tentang penggunaan kamera

Mengenai penggunaan dan pemeliharaan

Jangan tangani produk dengan kasar, jangan bongkar, modifikasi, benturkan, atau biarkan terkena benturan lain, misalnya hantaman palu, terjatuh, maupun terinjak. Tangani secara hati-hati, terutama lensa.

Mengenai file database

Bila anda memasukkan kartu memori tanpa file database ke dalam kamera dan menghidupkan power, sebagian kapasitas kartu memori digunakan untuk membuat file database secara otomatis. Diperlukan beberapa saat hingga anda bisa menjalankan operasi berikutnya. Bila muncul kesalahan file database, impor semua gambar ke komputer dengan menggunakan PlayMemories Home, lalu formatlah kartu memori.

Catatan tentang perekaman/pemutaran

- Untuk menjamin pengoperasian kartu memori, kami menganjurkan agar anda menggunakan kamera ini untuk memformat kartu memori manapun yang digunakan dengan kamera ini untuk pertama kalinya. Ingatlah bahwa proses format akan menghapus semua data yang direkam pada kartu memori. Data ini tidak dapat dipulihkan. Pastikan untuk mem-backup semua data penting ke komputer atau lokasi penyimpanan lainnya.
- Sebelum memulai perekaman, buat rekaman uji coba untuk memastikan kamera berfungsi dengan benar.
- Kamera ini tidak anti debu, anti percikan air, maupun kedap air.
- Pastikan kamera tidak terkena air. Kegagalan fungsi dapat terjadi jika air masuk ke dalam kamera. Dalam beberapa kondisi, kamera tidak dapat diperbaiki.
- Jangan arahkan kamera ke matahari atau cahaya terang lainnya. Tindakan tersebut dapat mengakibatkan kegagalan fungsi pada kamera.
- Jangan menggunakan kamera dekat lokasi yang menghasilkan gelombang radio yang kuat atau memancarkan radiasi. Bila tidak, kamera tidak dapat merekam atau memutar ulang gambar.
- Bila kamera digunakan di tempat berpasir atau berdebu dapat menyebabkan kegagalan fungsi.
- Jangan goyangkan atau benturkan kamera. Tindakan tersebut dapat mengakibatkan kegagalan fungsi dan Anda tidak dapat merekam gambar. Selain itu, media perekaman mungkin tidak dapat digunakan atau data gambar dapat rusak.
- Bersihkan permukaan flash sebelum digunakan. Panas dari pancaran blitz dapat

menyebabkan kotoran di permukaan flash mengeluarkan asap atau terbakar. Bersihkan permukaan flash dengan kain lembut untuk membersihkan debu atau kotoran, dll.

Mengenai suhu kamera

Kamera dan baterai dapat menjadi panas bila digunakan terus-menerus, namun hal tersebut bukan kegagalan fungsi.

Tentang perlindungan terhadap panas berlebihan

Tergantung pada suhu kamera dan baterai, Anda mungkin tidak dapat merekam film atau daya dapat nonaktif secara otomatis untuk melindungi kamera. Pesan akan ditampilkan di layar sebelum daya nonaktif atau Anda tidak dapat lagi merekam film. Jika demikian, biarkan daya nonaktif. Tunggu hingga suhu kamera dan baterai menurun. Jika Anda mengaktifkan daya tanpa membiarkan kamera dan baterai menjadi cukup dingin, daya mungkin akan kembali nonaktif atau Anda mungkin tidak dapat merekam film.

Catatan mengenai LAN nirkabel

Kami tidak bertanggung jawab atas kerusakan apapun yang disebabkan oleh akses yang tidak terotorisasi ke, atau penggunaan yang tidak terotorisasi pada tujuan yang masuk ke kamera, yang mengakibatkan kehilangan atau kecurian.

Peringatan tentang hak cipta

Program televisi, film, rekaman video, dan materi lainnya mungkin dilindungi hak cipta. Perekaman materi tersebut tanpa izin dapat melanggar ketentuan undang-undang hak cipta.

Tidak ada kompensasi untuk konten yang rusak atau kegagalan perekaman

Sony tidak akan mengganti kegagalan perekaman atau kerusakan maupun hilangnya konten yang direkam akibat kegagalan fungsi pada kamera atau media perekaman, dll.

Mengenai pengembunan

Bila kamera dibawa langsung dari tempat yang dingin ke hangat, kelembaban dapat mengembun di dalam atau di luar kamera. Pengembunan ini dapat menyebabkan kegagalan fungsi kamera.

Bila terjadi pengembunan

Matikan kamera dan tungguhlah sekitar satu jam agar embun menguap. Ingatlah bahwa bila anda mencoba memotret padahal masih ada embun di dalam lensa, anda mungkin tidak dapat merekam gambar yang jelas.

Cara menyimpan baterai

Untuk mencegah unit kotor, korslet, dll., pastikan untuk menggunakan kantong plastik, dll. untuk menjauhkan dari benda logam saat dibawa atau disimpan.

Spesifikasi

Kamera

[Sistem]

Peralatan gambar: 7,82 mm (jenis 1/2,3) Sensor Exmor R™ CMOS
Jumlah total piksel kamera: Sekitar 21,1 Megapiksel
Jumlah piksel efektif kamera: Sekitar 18,2 Megapiksel
Lensa: Pembesaran lensa Sony G 20x
f = 4,3 mm – 86 mm (25 mm – 500 mm (ekivalen dengan film 35 mm))
F3,5 (W) – F6,5 (T)
Saat sedang merekam film (16:9): 27 mm – 540 mm*
Saat sedang merekam film (4:3): 33 mm – 660 mm*
* Bila SteadyShot) diatur ke [Standar]

SteadyShot: Optik

Format file:

Gambar foto: Memenuhi persyaratan JPEG (DCF, Exif, MPF Baseline), kompatibel dengan DPOF
Film (Format AVCHD):
Kompatibel dengan bentuk AVCHD Ver. 2.0
Video: MPEG-4 AVC/H.264
Audio: Dolby Digital 2 saluran, dilengkapi Dolby Digital Stereo Creator

- Diproduksi di bawah lisensi dari Dolby Laboratories.

Film (Format MP4):

Video: MPEG-4 AVC/H.264

Audio: MPEG-4 AAC-LC 2 saluran

Media perekaman: Memory Stick PRO Duo™, Memory Stick Micro™, kartu SD, kartu memori microSD

Flash: Jangkauan flash (sensitivitas ISO [Indeks Pencahayaana yang Disarankan] diatur ke Otomatis):
Sekitar 0,2 m hingga 4,3 m (W)
Sekitar 2,0 m hingga 2,4 m (T)

[Konektor Input dan Output]

Soket HDMI: Soket micro HDMI
Terminal Multi/Micro USB*: Komunikasi USB
Komunikasi USB: Hi-Speed USB (USB 2.0)
* Mendukung peralatan yang kompatibel dengan Micro USB.

[Layar]

Layar LCD: 7,5 cm Drive TFT (jenis 3,0)
Jumlah total titik: 460 800 titik

[Daya, umum]

Daya: Baterai isi ulang NP-BX1, 3.6 V
Adaptor AC AC-UB10C/UB10D, 5 V
Pemakaian daya (saat pemotretan berlangsung): Sekitar 1,0 W
Suhu pengoperasian: 0 °C hingga 40 °C
Suhu penyimpanan: -20 °C hingga +60 °C

PERHATIAN

Unit baterai

Bila baterai salah ditangani, baterai dapat meledak, menyebabkan kebakaran atau bahkan luka bakar kimia. Perhatikan dengan cermat hal-hal berikut ini.

- Jangan membongkar.
- Jangan menghancurkan baterai dan baterai jangan terkena kejut atau tekanan seperti dipalu, terjatuh atau terinjak.
- Jangan terkena hubungan singkat dan kutub baterai jangan tersentuh benda-benda logam.
- Jangan terkena suhu tinggi di atas 60 °C seperti di bawah sinar matahari langsung atau di dalam mobil yang diparkir di bawah matahari.
- Jangan membakar atau membuang ke dalam api.
- Jangan menggunakan baterai ion lithium yang rusak atau bocor.
- Pastikan untuk mengisi baterai dengan menggunakan pengisi baterai Sony yang asli atau peralatan yang dapat mengisi baterai.
- Jauhkan baterai dari jangkauan anak kecil.
- Jagalah baterai agar tetap kering.
- Ganti hanya dengan jenis yang sama atau yang ekuivalen yang dianjurkan oleh Sony.
- Buanglah baterai yang sudah digunakan segera seperti dijelaskan dalam instruksi.

Adaptor AC

Gunakan stopkontak dinding terdekat untuk menyambungkan Adaptor AC. Lepaskan segera Adaptor AC dari stopkontak dinding bila terjadi gangguan fungsi saat menggunakan perangkat.

Kabel daya, jika tersedia, dirancang khusus hanya untuk digunakan dengan kamera ini, jangan gunakan dengan peralatan elektronik lain.

Bagi pelanggan yang telah membeli kamera mereka dari toko di Jepang yang melayani wisatawan

Catatan

Beberapa tanda sertifikasi untuk standar yang didukung oleh kamera dapat dikonfirmasi pada layar kamera.
Pilih MENU → (Pengaturan) 6 → [Logo Sertifikasi].
Jika tampilan tidak memungkinkan karena masalah seperti kegagalan kamera, hubungi penjual Sony atau fasilitas layanan Sony resmi setempat.

Dimensi (sesuai dengan CIPA):
96 mm × 54,9 mm × 25,7 mm (P/L/T)
Berat (sesuai dengan CIPA) (termasuk unit baterai NP-BX1, Memory Stick PRO Duo):
Sekitar 164 g
Mikrofon: Stereo
Speaker: Monaural
Exif Print: Kompatibel
PRINT Image Matching III: Kompatibel

[LAN nirkabel]

Standar yang didukung: IEEE 802.11 b/g/n
Frekuensi: 2,4GHz
Protokol keamanan yang didukung: WEP/WPA-PSK/WPA2-PSK
Metode konfigurasi: WPS (Wi-Fi Protected Setup) / manual
Metode akses: Mode Infrastruktur
NFC: Memenuhi persyaratan NFC Forum Type 3 Tag

Adaptor AC AC-UB10C/UB10D

Persyaratan daya: AC 100 V hingga 240 V, 50 Hz/60 Hz, 70 mA
Tegangan keluar: DC 5 V, 0,5 A
Suhu pengoperasian: 0 °C hingga 40 °C
Suhu penyimpanan: -20 °C hingga +60 °C
Dimensi:
Sekitar 50 mm × 22 mm × 54 mm (P/L/T)

Baterai isi ulang NP-BX1

Tipe baterai: Baterai lithium-ion
Tegangan maksimum: DC 4,2 V
Tegangan nominal: DC 3,6 V
Tegangan pengisian maksimum: DC 4,2 V
Arus pengisian maksimum: 1,89 A
Kapasitas: 4,5 Wh (1 240 mAh)

Desain dan spesifikasi dapat berubah tanpa pemberitahuan.

Merek dagang

- Memory Stick dan merupakan merek dagang atau merek terdaftar milik Sony Corporation.
- "AVCHD Progressive" dan logo "AVCHD Progressive" adalah merek dagang dari Panasonic Corporation dan Sony Corporation.
- Simbol Dolby dan double-D merupakan merek dagang milik Dolby Laboratories.
- Istilah HDMI dan HDMI High-Definition Multimedia Interface, dan Logo HDMI adalah merek dagang atau merek dagang terdaftar dari HDMI Licensing LLC di Amerika Serikat dan negara lainnya.
- Microsoft, Windows, dan Windows Vista merupakan merek dagang atau merek milik Microsoft Corporation di Amerika Serikat dan/atau negara lainnya.
- Mac merupakan merek dagang terdaftar milik Apple Inc. di Amerika Serikat dan negara lainnya.
- iOS adalah merek dagang terdaftar atau merek dagang dari Cisco Systems, Inc.
- Android dan Google Play adalah merek dagang dari Google Inc.
- Wi-Fi, logo Wi-Fi dan Wi-Fi PROTECTED SET-UP adalah merek dagang terdaftar dari Wi-Fi Alliance.
- iPhone dan iPad merupakan merek dagang milik Apple Inc., yang terdaftar di AS dan negara lainnya.
- Tanda N merupakan merek dagang atau merek dagang terdaftar milik NFC Forum, Inc. di Amerika Serikat dan di negara lainnya.
- DLNA dan DLNA CERTIFIED adalah merek dagang dari Digital Living Network Alliance.
- Logo SDXC merupakan merek dagang milik SD-3C, LLC.
- Facebook dan logo "f" merupakan merek dagang atau merek terdaftar milik Facebook, Inc.
- YouTube dan logo YouTube merupakan merek dagang atau merek terdaftar milik Google Inc.
- Selain itu, sistem dan nama produk yang digunakan dalam panduan ini secara umum adalah merek dagang atau merek dagang terdaftar dari masing-masing pengembang maupun produsen. Namun, tanda ™ atau ® tidak digunakan di semua kasus dalam panduan ini.

Informasi tambahan tentang produk ini dan jawaban atas pertanyaan yang sering diajukan dapat ditemukan di situs Web Customer Support.

<http://www.sony.net/>

PERINGATAN

Untuk mengurangi bahaya kebakaran atau kejut, unit jangan terkena hujan atau lembab.

PETUNJUK KESELAMATAN PENTING
-SIMPAN PETUNJUK INI

BAHAYA

UNTUK MENGURANGI RISIKO KEBAKARAN ATAU SENGATAN LISTRIK, IKUTI PETUNJUK INI DENGAN CERMAT