
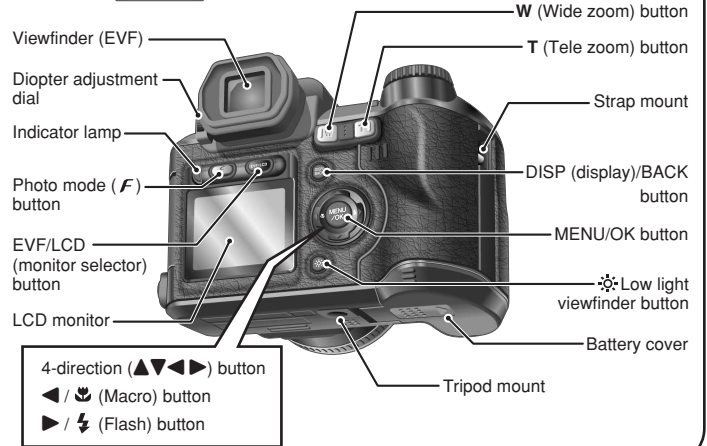
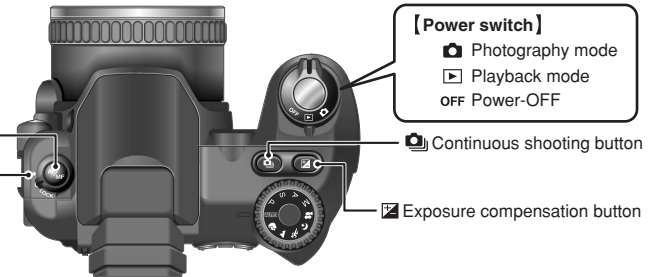


FinePix S5100/FinePix S5500

Quickstart

Camera Controls

- [Mode dial]**
- | | |
|------------------|---------------------------------|
| AUTO Auto | P Programmed Auto |
| Portrait | S Shutter-priority Auto |
| Landscape | A Aperture-priority Auto |
| Sports | M Manual |
| Night scene | M Movie |

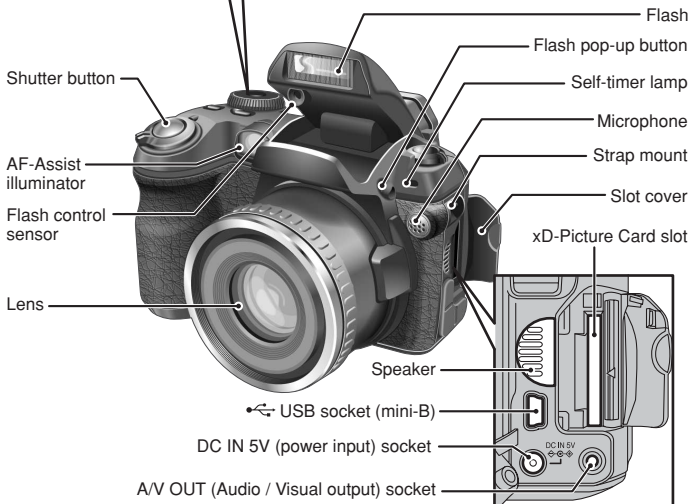


- 4-direction (▲▼◀▶) button
 ◀ / (Macro) button
 ▶ / (Flash) button


BL00417-200(1) E

Picture Taking

A. Loading the batteries

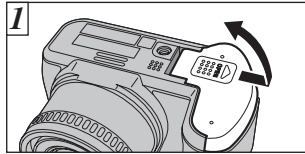


1. Check that the camera is turned off (indicator lamp is off) before opening the battery cover.

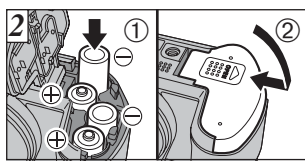


2. Load the batteries correctly as indicated by the polarity icons. Press on the battery cover to push the batteries down. Slide the battery cover closed.

B. Setting up the camera

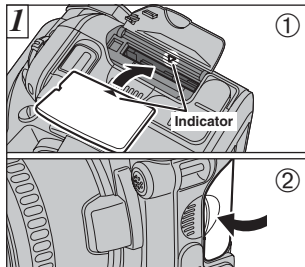


1. Align the indicators on the xD-Picture Card slot and **xD-Picture Card** and then push the card firmly all the way into the slot. Close the slot cover.

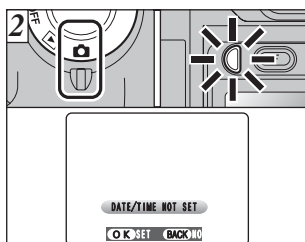


2. Set the Power switch to "☺". *A confirmation screen appears. Press the "MENU/OK" button to set the date and time.

Refer to Owner's Manual for more detailed instructions

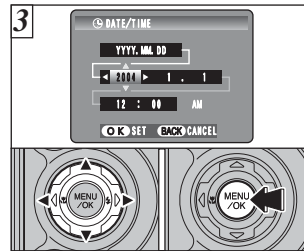

3. You can select your preferred date format. Press "◀" or "▶" to select the date order, Year, Month, Day, Hour or Minute. Press "▲" or "▼" to correct the setting. Press the "MENU/OK" button after you complete the setting. *Refer to owner's manual for date/time setup.


C. Taking pictures

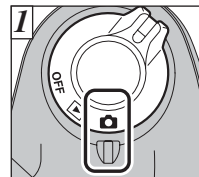

1. Set the Power switch to "☺" and set the Mode dial to "AUTO".
 2. Press the shutter button down halfway to adjust the focus.
 3. Press the shutter button down fully to take a picture. The camera makes a "Click" sound and takes the picture.



D. Viewing a picture

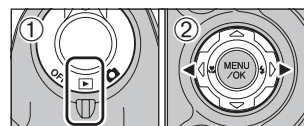


Set the Power switch to "▶". Press the "◀" or "▶" to move through your images.

Still images that can be viewed on the FinePix S5100/FinePix S5500

You can use this camera to view still images recorded on the FinePix S5100/ FinePix S5500 or still images (excluding some uncompressed images) recorded on a FUJIFILM digital camera that supports **xD-Picture Card**.

Viewing images on your PC

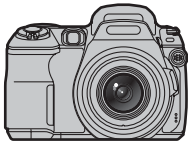

A. Install Software

B. Connect a Camera to PC

C. Save Images



A. Install Software

Do not connect the camera to your PC until the software installation is completed.


1. Turn on your PC and start up Windows.
 - Users of Windows 2000 Professional or Windows XP should log in by using a system administrator account (e.g. "Administrator").
2. Quit all other active applications until no applications are shown in the taskbar.
3. Load the enclosed CD-ROM into the CD-ROM drive. The installer starts up automatically.
4. The Setup screen appears.
Click the [Installing FinePixViewer] button.




5. After installation completed, press [Restart] button.

B. Connect the Camera to your PC

1. Insert an xD-Picture Card into the camera.
2. Set the "USB MODE" setting in the "SET-UP" menu to digital camera "⇄". (Refer to "USING THE SET-UP SCREEN" in the owner's manual.)

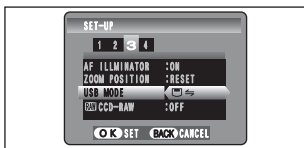

3. Turn your camera off.
4. If you have one, plug the AC power adapter connector into the "DC IN 5V" socket on the camera and then plug the adapter into the power outlet, otherwise be sure your battery is fresh and charged.
5. Use the included USB cable (mini-B) to connect the camera to your PC.

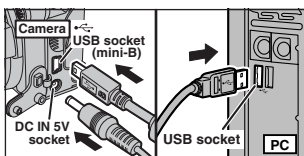

6. Turn the camera on.
7. **Windows 98/98 SE/Me/2000 Professional**
FinePixViewer starts up automatically.

Windows XP

- ① The "Found New Hardware" help message appears in the bottom-right corner of your screen. This message will close when the settings are completed. No action is required.
- ② Specify the settings in the "AutoPlay" dialog box.
- ③ Select "Viewing images using FinePixViewer" and then select the "Always do the selected action" checkbox.



- ④ Click the [OK] button to launch FinePixViewer.



C. Save Images

1. The Save image Wizard starts up. Click the [NEXT] button.
2. Check that the files are downloaded from the camera to your PC and that a folder with the date is created.
Ex. \My Documents \ My Pictures \ 2004_0312 Image

D. View Images

1. Click the [Show List of Images] button.



2. Select "Preview" in the View menu to display an enlarged image.

For more information

Refer to "How to use FinePixViewer" in the HELP menu, or chapter 5 and 6 in the Owner's Manual, or visit Fujifilm "Q&A Search" in the following website.

(<http://home.fujifilm.com/products/digital/>)

For Macintosh users, refer to chapter 5 and 6 in the Owner's Manual.