

Tips: Silicone Version marked on package means the cover packed inside already. Feel free to open it and gain the surprise joy.



Caution before use!

1. Voltage requirements, please charge this camera no more than 5V 1A/2A adapter after receiving it. E.g. USB of PC also OK.
 2. Storage the camera in dry and clean environment, packaged well when idle. Wipe printer head dirty, press printer head and push back cover tightly if have lines on paper.
 3. Avoid moisture, direct sunlight, high temperatures environment for pictures' storage.
 4. This camera adopts thermal tech, so do not print blurry overexposed images.
 5. Wrong feeding of paper will print blankly, make sure you have paper the right way.
 6. Sticking out the paper outside of the camera a little before printing.
 7. Free of waste, press OK to enable print mode, a printer icon will show up on upper right.
 8. Select different printing densities to create different styles on SET menu
 9. Delete: Enter Play Back. Hold the OK button for a few seconds.
 10. Transfer or clean up data in SD card timely to avoid excessive data or camera stuck.
 11. Reset slot is near by the SD Card slot. Use a needle to press it if necessary.
- Contact us whenever you have any question here- **Have a question for HKUSOA?** .

Tips: Please install it slightly and smoothly, not violently!
Attention Direction of Paper Installation! Or it print blank.

Q: How to feed the paper?



Push the back cover of the camera upwards with your hand, Open the camera inner



Install the paper rolls around the roller, Pull small part of the paper out of the head
Change the paper installing direction if print blank.