 
 


Digital Cameras User Manual

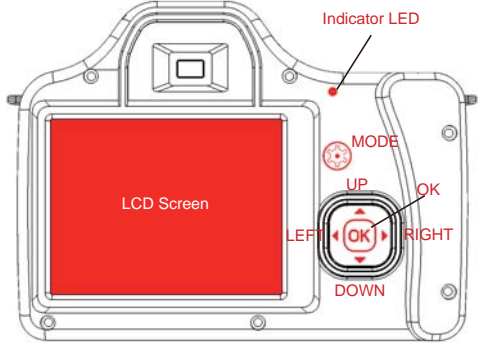

Know Your Digital Cameras

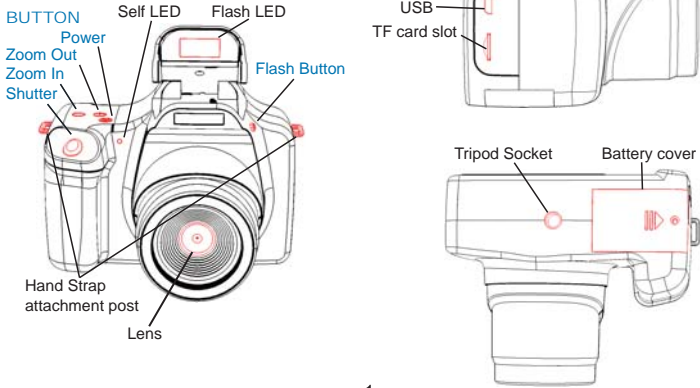

Start to use

NOTE: Batteries and TF card are not included in package
Please format the memory card before using the camera.
Please insert the standard memory card and check the compatibility or the card.
Do not take out or insert the memory card when recording, otherwise, it would damage the card or cause the date loss! Some memory card may cause the camera crash or irregular work

1.Charge The Battery

Install the battery in the machine properly, contact the camera with the charger via the standard USB cable. Also can contact the camera with the computer for charging.

2.Installing and using TF Card

You must insert and use TF memory card: recorder will store all recorded images and video on the card. Max. card size is 32 GB.

Check small Diagram on base of recorder for correct orientation of TF card before installing.

- 1.Push the TF card into the slot until it is completely inserted and latched.
- 2.To remove / replace the card, lightly press in the inserted card and it will be ejected.
- 3.The TF card has to be formatted first: Press OK button and then press Right button to enter Setup Menu. Press Up and Down buttons to select 'Format' option. Press OK

button twice to select 'Yes' option. The memory card will be formatted automatically.
NOTE: All the previous DATA in card will be deleted when TF card is formatted.

3.Power ON / OFF the camera

- 1.Power ON: press the Power button for 2 to 3 seconds to turn the recorder ON.
- 2.Power OFF: press the Power button for 2 to 3 seconds to power OFF.
- Auto Power OFF: When recorder has been left idle for 1 minute, the recorder will turn OFF automatically. The automatic power OFF delay time can be set at 1,3, or 5 minutes. In Video or Camera Mode, press OK button, then press Right button to enter Setup mode, select Power Save and make adjustment if necessary (see Section 9 Setup the recorder).
- 3.Low power: When the batteries become exhausted, the LCD display will display low battery icon and the Auto Power feature will turn the recorder OFF


4.Selecting the MODE of the camera

When activated,the camera is set in the Camera mode
Press the MODE button to change or select desired mode:
Camera mode(default mode)-taking still photos,images
Video mode-recording video clips
Playback mode-playing back recorded video or displaying still photos

5. Setting Date and Time & other settings :

In Video or Camera mode ,press OK button ,then Right button to enter Setup Menu . Press Up and Down buttons to select 'Date & Time' option. Then press OK button to change the date and time, use the Direction buttons: Up or Down to adjust, Right button to move the cursor, OK button to confirm, then OK button to Exit setup mode.


To leave date/ time unaltered, press OK button and then LEFT button to exit setup mode.

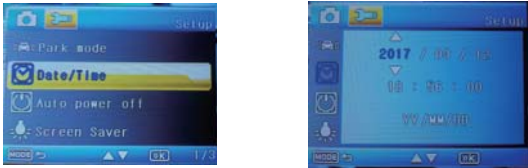

To change other setting like Auto power off / Screen Saver / Beep Sound / Language / Frequency / Format / Default Setting, please refer to above steps.

6. Camera mode:

 Preview mode

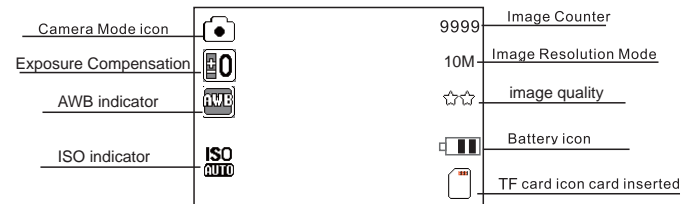


Shooting Pictures

1. Press / hold the Power button to turn the Camera ON
2. Press the Shutter button to take a still picture

7. Video mode:

 Preview mode

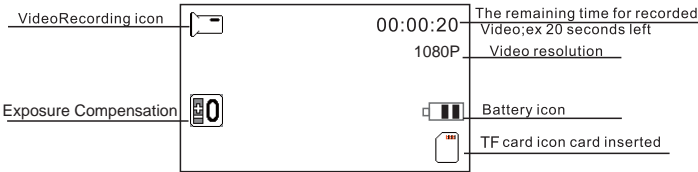

Recording the Video clip

1. Press / hold the Power button and turn the Camera ON
 2. Press the Mode button to select the Video mode
 3. Press the Shutter button to start recording video
 4. To stop recording, press the Shutter button again.
- Note that if the memory card is full, recorder will automatically stop recording.

8. Playback mode:

- 1.Press / hold the Power button to turn the Camera ON
 - 2.Press the Mode button twice to select the Playback mode.
- You can view still images or video by pressing Up or Down button.

Playing recorded video



- 1.Select desired video record (see "film recorder" icon on the LCD screen)
- 2.Press the Shutter button to start playing recorded video, press Shutter button again to stop playing.

Press OK button to open the menu, you will see more options.

9 Changing the menu setting of video/photo/playback

- 1.Press OK button to open the menu.
- 2.Press Down buttons to select desired menu option.
- 3.Press OK button to enter submenu.
- 4.Press Up or Down button to select desired submenu.
- 5.Press OK button to confirm the selection , then press Left button to exit the menu.