


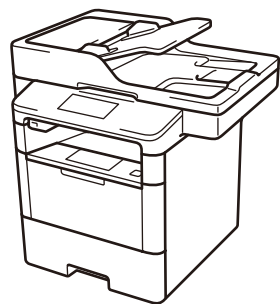


Unpack the machine and check the components




Drum Unit and Toner Cartridge Assembly
(pre-installed in models
DCP-L5500D / DCP-L5500DN /
DCP-L5600DN / DCP-L6600DW /
MFC-L5700DN / MFC-L5750DW /
MFC-L5755DW / MFC-L5900DW /
MFC-L6700DW / MFC-L6800DW /
MFC-L6900DW (For Oceania))

Drum Unit (pre-installed in model
MFC-L6900DW only
(Except for Oceania))

Inbox Toner Cartridge
(model MFC-L6900DW only
(Except for Oceania))

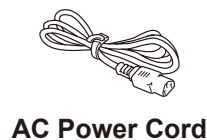

AC Power Cord

 

Telephone Line Cord
(For MFC models)

NOTE:

- The available connection interfaces vary depending on the model.
- You must purchase the correct interface cable for the interface you want to use.

USB cable

We recommend using a USB 2.0 cable (Type A/B) that is no more than 2 metres long.

Network cable

(Except for DCP-L5500D)
Use a straight-through Category 5 (or greater) twisted-pair cable.

- The illustrations in this Quick Setup Guide show the MFC-L6900DW.




Watch our Video FAQs for help with setting up your Brother machine:
solutions.brother.com/videos.



Quick Setup Guide



Product Safety Guide

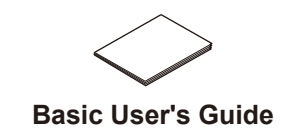

Basic User's Guide
or Reference Guide
(only for certain models)




Installation CD-ROM



Telephone Line Cord Adapter
(Australia only) (For MFC models)

1 Remove the packing materials and install the drum unit and toner cartridge assembly


DCP-L5500D / DCP-L5500DN / DCP-L5600DN / DCP-L6600DW / MFC-L5700DN / MFC-L5750DW / MFC-L5755DW / MFC-L5900DW / MFC-L6700DW / MFC-L6800DW / MFC-L6900DW (For Oceania)

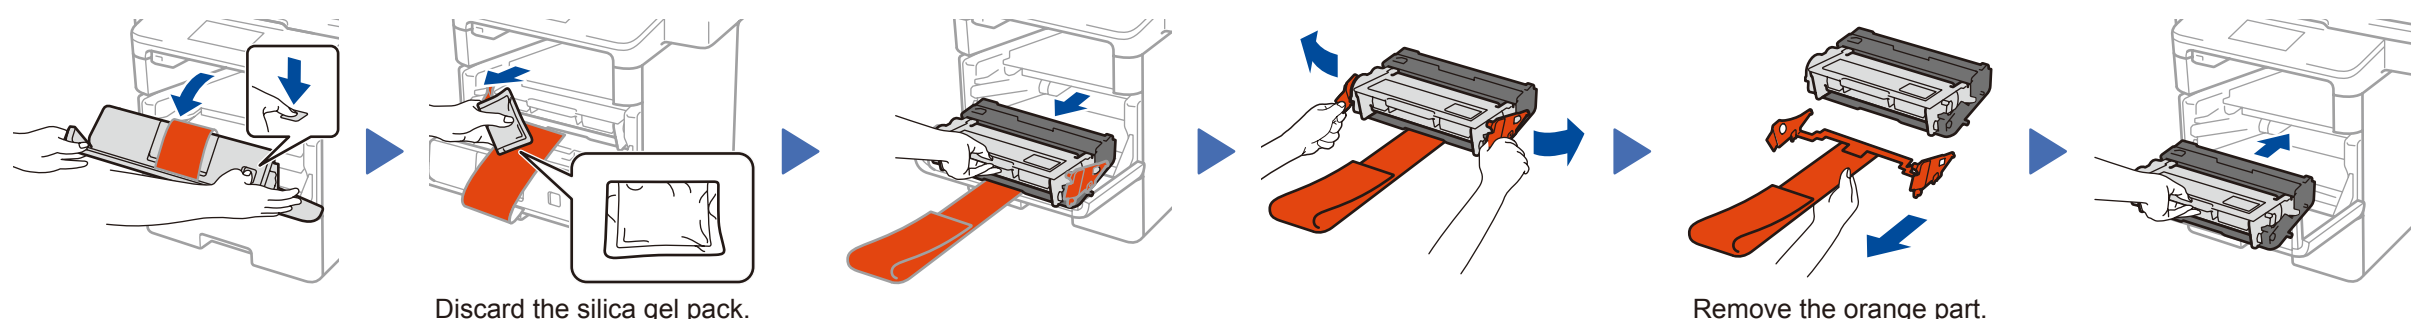

Discard the silica gel pack.

Remove the orange part.


MFC-L6900DW ONLY (Except for Oceania)

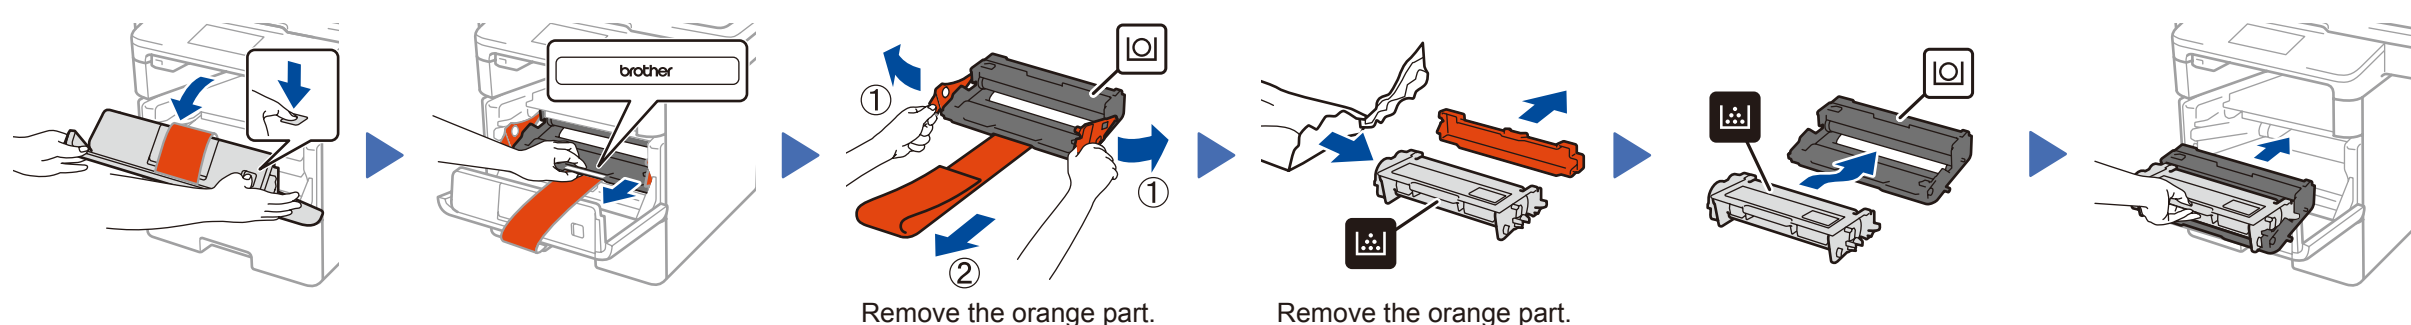

Remove the orange part.


Remove the orange part.

2 Load paper in the paper tray

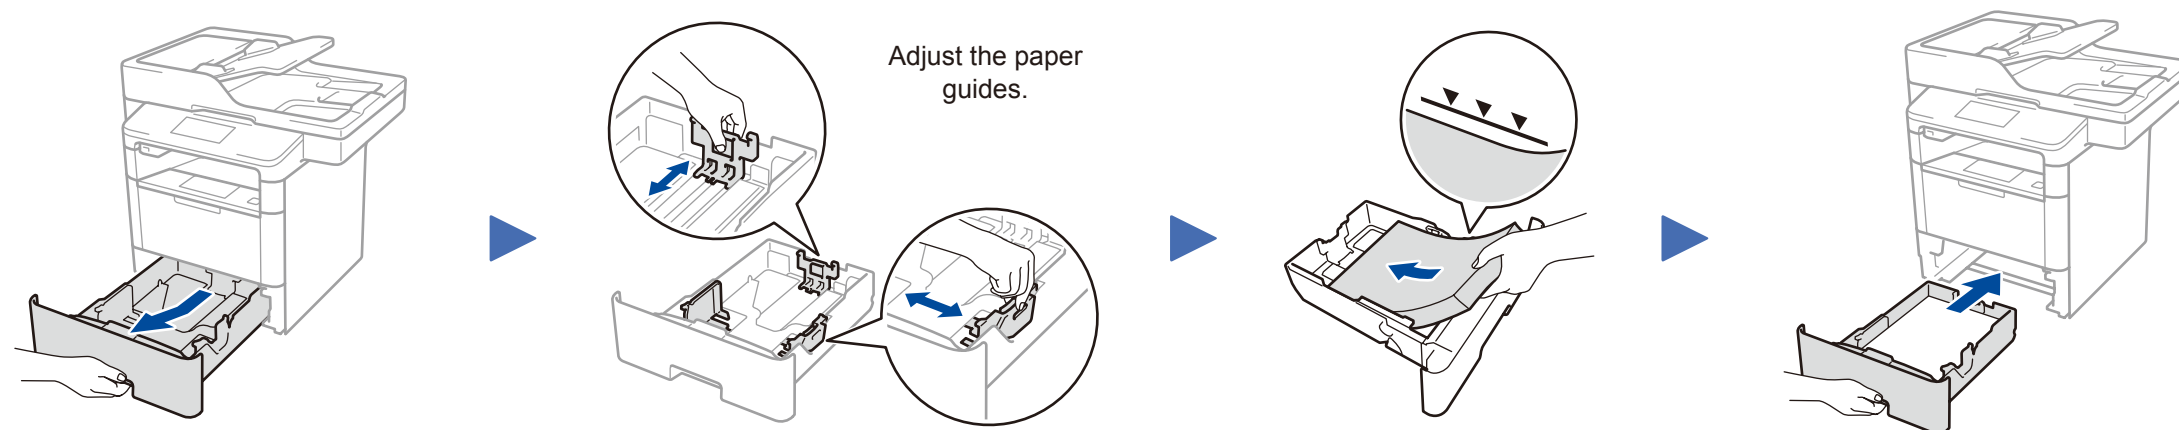

Adjust the paper guides.

3 Connect the power cord and turn the machine on

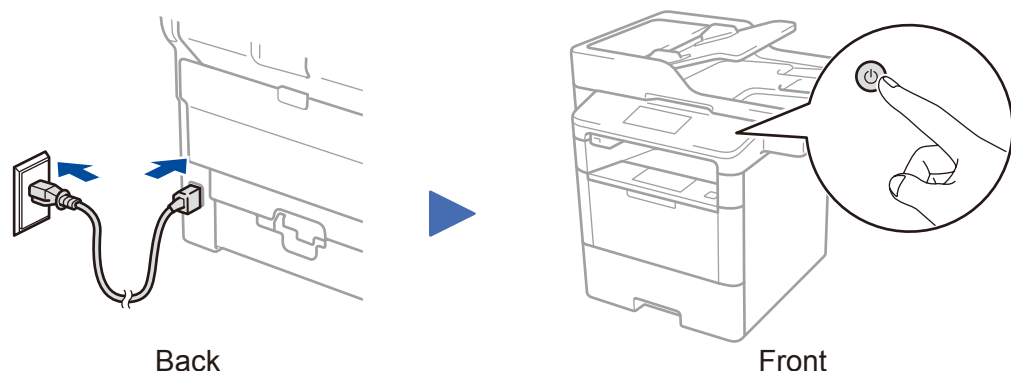

Back



Front

4 Select your country/language (Initial setup only)

After turning the machine on, you may be required to set your country or language (depending on your machine).
If required, follow the on-screen instructions.

5 Select your language (if needed) (Only for certain models)


- On the machine's Touchscreen, press [Settings] > [All Settings] > [Initial Setup] > [Local Language].
- Press your language.
- Press [OK].

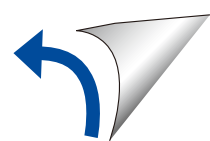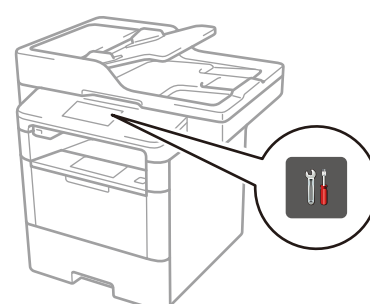

6 Connect your machine and install software

Brother regularly updates firmware to add features and fix identified problems. To check for the latest firmware, visit solutions.brother.com/up1.


Windows® computer with CD-ROM drive

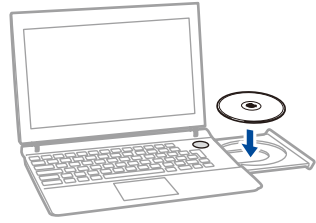

NOTE:


If the Brother screen does not appear automatically, click **(Start) > Computer (My Computer)**.
(For Windows® 8: click the **(File Explorer)** icon on the taskbar, and then go to **Computer (This PC)**.)
Double-click the CD-ROM icon, and then double-click **start.exe**.

■ For DCP-L5500D

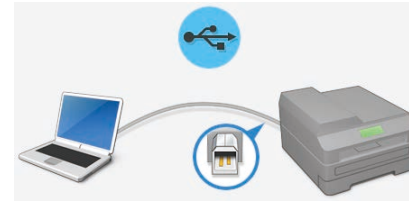

■ For other models

Choose your Connection Type:

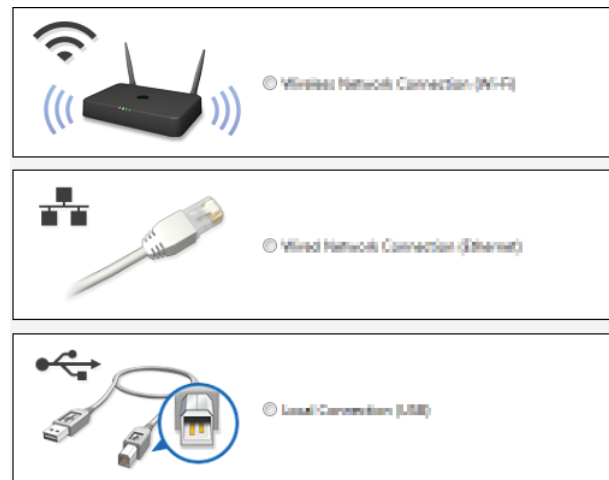

Macintosh/Windows® computer without CD-ROM drive



Download the full driver and software package from the Brother Solutions Center.
(Macintosh) solutions.brother.com/mac
(Windows®) solutions.brother.com/windows

Follow the on-screen instructions to continue installation.

Finish

NOTE:

If connection is unsuccessful, see **? Cannot set up your machine?** below.

 


Print and scan using your mobile device (not available for DCP-L5500D)



Download "Brother iPrint&Scan" to start using your machine with mobile devices.

solutions.brother.com/ips



AirPrint is available for OS X and iOS users.
For more information, see the *AirPrint Guide* on your model's **Manuals** web page.
solutions.brother.com/manuals



Cannot set up your machine?



Wired network



USB



Wireless network

Disconnect the cable.

Restart your machine, computer and/or mobile device.



Repeat **6**.

Go to [WiFi](#) Alternate wireless configuration method (Setup Wizard).



Alternate wireless configuration method (Setup Wizard)

1. Restart your wireless access point/router.

2. Find the SSID and Network key.




3. Press **WiFi** > [Setup Wizard] > [Yes].



4. Select the SSID.

5. Enter the Network key.

The LCD displays [Connected].

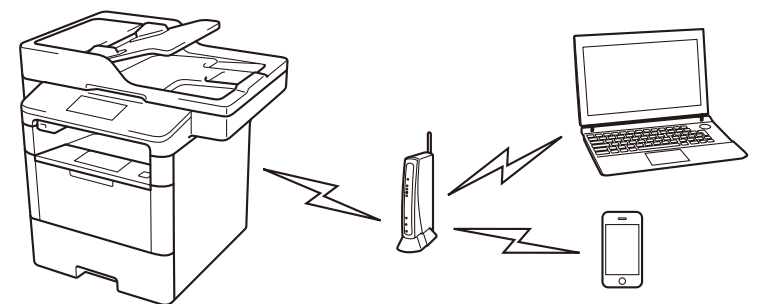

To use with your computer >> Step **6** *Connect your machine and install software*

To use with your mobile device >> [Print and scan using your mobile device \(not available for DCP-L5500D\)](#)

