



Product Information

Product Name: Retro Camera

Product Function: Photo/Video

Maximum Expansion: 64GB

Input: 5V==2A

Main Material: ABS

Screen Size: 1.54-inch IPS HD Screen

Charging Time: Approximately 1-3 hours

Features

1. Fully automatic photo mode with auto-focus, color adjustment, and lighting adjustment. No need to adjust parameters, making it easy to operate.
2. You can frame your shots using the LCD display and save photos on a SD card.
3. Retro and minimalist design.



Product Information

Product Name: Retro Camera

Product Function: Photo/Video

Maximum Expansion: 64GB

Input: 5V==2A

Main Material: ABS

Screen Size: 1.54-inch IPS HD Screen

 
Charging Time: Approximately 1-3 hours

Features


1. Fully automatic photo mode with auto-focus, color adjustment, and lighting adjustment. No need to adjust parameters, making it easy to operate.
2. You can frame your shots using the LCD display and save photos on a SD card.
3. Retro and minimalist design.

Shooting

1. Turn on the power.
2. Hold the camera.
3. Determine the composition as needed.
4. The camera will auto-focus when taking a photo. After taking the photo, the image will be saved on the memory card.

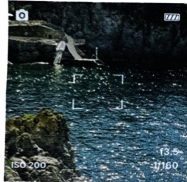

(Focusing - White)

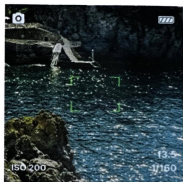 

(Focus Completed - Green)

Charging and Transferring Files to Computer




1. You can charge the camera using a 5V charger with a USB interface. Turn off the camera before charging.
2. Connect to a computer USB interface to read photos and videos.

Warning


1. The built-in 3.7V lithium battery cannot be removed or replaced. If damaged, please contact the service center for repair.
2. Regularly check the charger's cord, plug, casing, and other components for damage. If any damage is found, stop using it until it has been properly repaired.
3. The charger is not a toy. Only use the recommended charger (5V--2A) for toys.
4. The charger should be used by adults or under adult supervision.
5. Do not clean this product with liquids.
6. This product contains small parts and is not suitable for children under 3 years old.
7. Discarding this toy improperly may harm the environment. Please recycle it appropriately.
8. This manual contains important information. Please keep it for future reference.

Shooting

1. Turn on the power.
2. Hold the camera.
3. Determine the composition as needed.
4. The camera will auto-focus when taking a photo. After taking the photo, the image will be saved on the memory card.

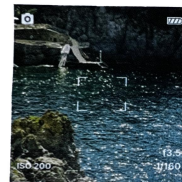


(Focusing - White)

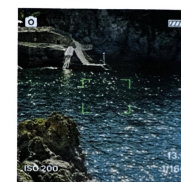

(Focus Completed - Green)

 Charging and Transferring Files to Computer




1. You can charge the camera using a 5V charger with a USB interface. Turn off the camera before charging.
2. Connect to a computer USB interface to read photos and videos.

Warning

1. The built-in 3.7V lithium battery cannot be removed or replaced. If damaged, please contact the service center for repair.
2. Regularly check the charger's cord, plug, casing, and other components for damage. If any damage is found, stop using it until it has been properly repaired.
3. The charger is not a toy. Only use the recommended charger (5V--2A) for toys.
4. The charger should be used by adults or under adult supervision.
5. Do not clean this product with liquids.
6. This product contains small parts and is not suitable for children under 3 years old.
7. Discarding this toy improperly may harm the environment. Please recycle it appropriately.
8. This manual contains important information. Please keep it for future reference.

 Component Names

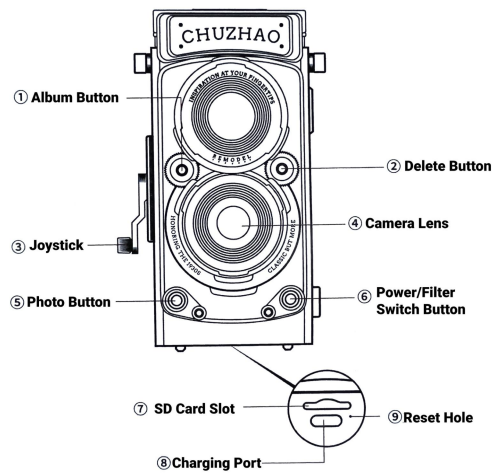

Product List



Name Introduction

①Album Button

Click this button to enter the album. Click the photo button to exit the album.

②Delete Button

In the shooting interface, briefly press the delete button to switch between auto-focus and fixed-focus shooting. The default is auto-focus. In the album interface, briefly press the delete button to select the photo or video you want to delete, then press the photo button to confirm deletion. Long press the delete button to bring up the format option, and click the photo button to format the memory card. Note: Formatting the memory card will erase all data on the card. Please proceed with caution.

③Joystick

Turn the joystick to start recording. When you stop turning the joystick, the recording will pause after 6 seconds.

④Camera Lens

Do not block the camera lens when taking photos. Confirm the composition before taking a photo.

⑤Photo Button

After turning on the camera, click this button to take a photo. Long press to start recording, and click again to stop recording.

⑥Power/Filter Switch Button

Long press this button to turn on the camera. Long press in standby mode to turn off the camera. In shooting mode, briefly press the power button to switch between black & white and color modes.

⑦SD Card Slot

Insert the SD card into the card slot in the correct direction. When properly installed, the SD card should be flush with the body (Note: SD card needs to be purchased separately).

⑧Charging Port


You can charge the camera using a 5V charger with a USB interface. Connect to a computer USB interface to read photos and videos.

⑨Reset Hole

If the camera malfunctions, do not disassemble it yourself. Gently press the reset button with a pin to reset the camera.

- ❖ If the camera does not function properly, press the reset button to reset the camera.
- ❖ Turn off the camera before charging.
- ❖ If the camera is not operated for a while after being turned on, it will automatically shut down. If the camera shuts down automatically, turn it on again to use.

Component Names

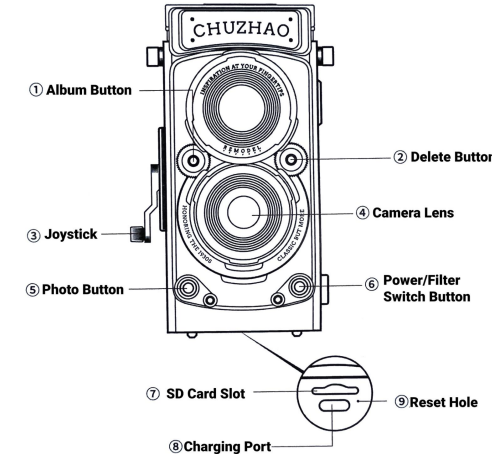

Product List



Name Introduction

①Album Button

Click this button to enter the album. Click the photo button to exit the album.

②Delete Button

In the shooting interface, briefly press the delete button to switch between auto-focus and fixed-focus shooting. The default is auto-focus. In the album interface, briefly press the delete button to select the photo or video you want to delete, then press the photo button to confirm deletion. Long press the delete button to bring up the format option, and click the photo button to format the memory card. Note: Formatting the memory card will erase all data on the card. Please proceed with caution.

③Joystick

Turn the joystick to start recording. When you stop turning the joystick, the recording will pause after 6 seconds.

④Camera Lens

Do not block the camera lens when taking photos. Confirm the composition before taking a photo.

⑤Photo Button

After turning on the camera, click this button to take a photo. Long press to start recording, and click again to stop recording.

⑥Power/Filter Switch Button

Long press this button to turn on the camera. Long press in standby mode to turn off the camera. In shooting mode, briefly press the power button to switch between black & white and color modes.

⑦SD Card Slot

Insert the SD card into the card slot in the correct direction. When properly installed, the SD card should be flush with the body (Note: SD card needs to be purchased separately).

⑧Charging Port

You can charge the camera using a 5V charger with a USB interface. Connect to a computer USB interface to read photos and videos.

⑨Reset Hole

If the camera malfunctions, do not disassemble it yourself. Gently press the reset button with a pin to reset the camera.

- ❖ If the camera does not function properly, press the reset button to reset the camera.
- ❖ Turn off the camera before charging.
- ❖ If the camera is not operated for a while after being turned on, it will automatically shut down. If the camera shuts down automatically, turn it on again to use.