1. Double click the installer to begin.

ATTENTION:Before installation, please ensure printer is connected and turned on!

2. Follow the installation steps until you receive this message.

)evice Driver Installation Wizard

Completing the Device Driver Installation Wizard
The drivers were successfully installed on this computer. You can now connect your device to this computer. If your device came with instructions, please read them first.
Driver Name Status
< Back Filitigh Cancel

3. After installation, to check the printer is connected successfully:

Go to "Control panel" -> "Devices and Printers"

(Right click on "This PC", choose "Properties", then click on "Control panel"-> "Devices and Printers")



-> Right click on "D520" -> "Printer Properties"-> Click on "Print Test Page"

		Securit	у	Devic	e Settings	About
		General	Sharing	Ports	Advanced	Color Management
		3	D520 Print	er		
		Location:				
	~	Comment:				
	See what's printing	Model:	D520 Printe	er		
	Set as default printer	Features Color: No			D	
	Printing preferences	2 Double-sig	led: No		Paper available: 76mm x 130mm	
	Prin ar properties	Staple: No			70mm x 130mm	^
	Create shortcut	Speed: Unl				
Pe	move device	Maximum	resolution: 30	00 dpi		~
	roubleshoot					
п	oubleshoot			Prefei	rences	Print Test Page
	operties					

4. Set as default printer:

Right click on "D520" -> choose "Set as default printer"



5. Select the paper type

(1)Right click on "D520" -> choose "Printer Preferences" -> go to "Page Setup"



(2)You can choose the size you need in "Paper Name".

yout	Page Setup	Graphics (Option			
	Settings					
	[Paper Name:	76mm x 130mm		~	
			4 x 4 (101.6mm x 101.6mm) 4 x 6 (101.6mm x 152.4m) 4*6		^	
	Rotate		76mm x 130mm			
		í				
	Media Settin	gs	_			
		Тур	e			
		Gap		nm)		

(3) If the size you need is not listed, then click "New" to create needed size.

Page Setup Gra	phics Option					
Settings						
Paper	Name: 4 x 6	(101.6mm)	x 152.4mm)	8	~	
	Ν	lew	Edit	Delete		
Rotate						
			Portrait			
	AB	-D	○ Landscap	e		
	1234		O Portrait 18			
			○ Landscap	e 180		
Media Settings						
	Type:	Labe	With Gaps	~		
	Gap or Mar	k Height:	0.12	in		
			St. 23			

(4) Input the size of "Width", "Length" and "Name", then click "Ok" to archive.

	×
New_4*6-1	
Label ~	
inch 🗸	
4 in	
6 in	
0.00 in	
0.00 in	
Cancel	
	Label ~ inch ~ 4 in 6 in 0.00 in 0.00 in

(5) Then choose the size you create in "Paper Name".

🚽 D52	0 Printer Printing Pref	erences		
Layout	Page Setup Graphic	s Option		
	Settings			
	Paper Nan	ne: New_4*6-1	~	
		4 x 6 (101.6mm x 4*6	152.4mm)	
	Rotate	New_ New_2.25*1.25 New_2.25*1.25-1 New_4*6		
		New_4*6-1		
	Media Settings	_		
		Туре	nm)	
		Gap		
		Gap		

- 6. Set up Print speed and Darkness
- (1) Right click on "D520" -> choose "Printer Preferences"-> go to "Option"

· · · · · · · · · · · · · · · · · · ·	B D520 Printer Printing Preferences	×
	Layout Page Setup Graphic Option	
	Command	
See what's printing	Study gap label Adjust the sensor	
🔍 🗸 Set as default printer	Settings	
D5: Printing preferences 24	Print Speed: 5 V Print Density: 8 V	
Printer properties	Adjustment	-
Create shortcut	Horizontal: 0.00 in Vertical: 0.00 in	
Remove device	Media Handling Post-Print: None V	-
Troubleshoot	Occurrence: After Every Page	
Properties	After-print: 0.00 in	
	Size units	

(2) You can change the printing speed (from "Print Speed") and the Darkness (from "Print Density") of your printing

(Larger number means higher Darkness)

yout Page Setup Graphics Option	Layout Page Setup Graphics Option
Command Study gap label Adjust the sensor	Command Study gap label Adjust the sensor
Settings	Settings
Print Speed: 5 V Print Density: 8 V	Print Speed: 5 V Print Density: 8 V
Adjustment 2 3	Adjustment 2
Horizontal:	Horizontal: 0.00 in Vertical: 0.00 3 5
Media Handling	Media Handling 6 7
Post-Print: None 🗸	Post-Print: None 8
Occurrence: After Every Page V	Occurrence: After Every Page 10
After-print: 0.00 in	After-print: 0.00 in 12 13 Size units 15
Size units	Size units

(3)You can change Size units

Page Setup Gr	opines	Option					
Command							
2	Study	/ gap label	1	(1) Ad	ljurt the se	ensor	
Settings					13		
Print Sp	eed:	5	~	Print Densit	N: 8	~	
Adjustment					· _		
Adjustment					22	- 50	
Horizor	ntal:	0.00	n	Vertical:	0.00	in	
Media Handling	1						-
	P	ost-Print:	None	9	~		
	0	ccurrence:	Afte	r Every Page	- V		
	4	fter-print:	0.00		in		
Size units		nor print.		8			
) inch			C) mm		

(4)Click "Adjust the sensor" to adjust your printer sensor, then click "Study gap label" to let your printer learn the gap label.

If your printer flashes the blue light, it means that the learning has failed, then you need to repeat the above 2 button clicks again.



7. Choose file (PDF file) to print.



(1) Click "Print"



(2)Select Printer "D520"

int		
Printer:	D520 Printer	ĸ
	Adobe PDF	ho
Copies:	D520 Printer	
_	Fax	
Pages t	Microsoft Print to PDF	
Pages t All	Microsoft XPS Document Writer	
	OneNote for Windows 10	

(3)Before click Print, check the preview and print size. Then click "Print"

