

Quick Start Guide

EN

 
K22

K23




1. Product Description

1.1 Packing List

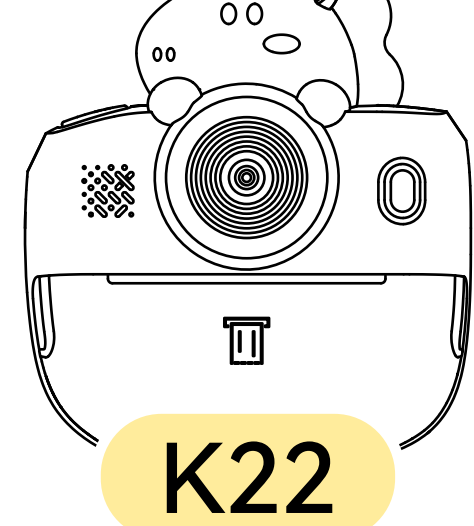


K22

 
Photo Printer×1

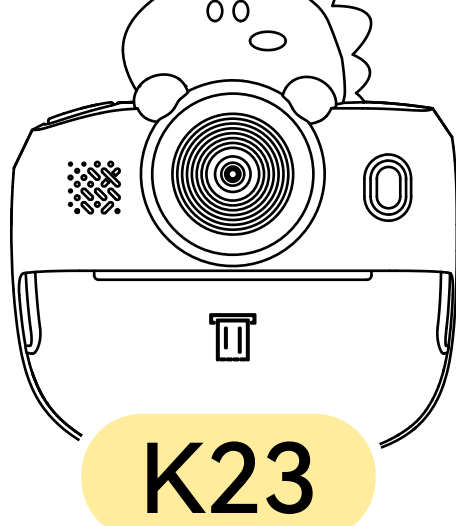


K23

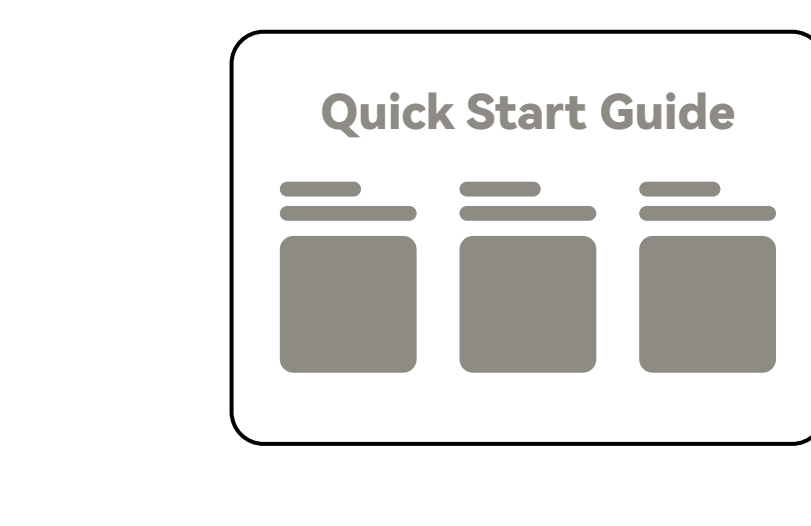 

Quick Start Guide×1

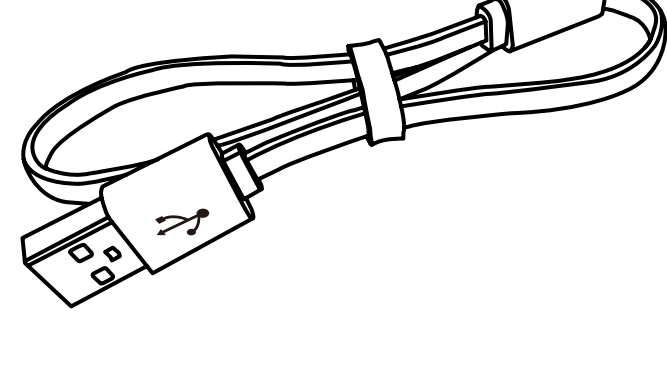 


Type-C Cable×1

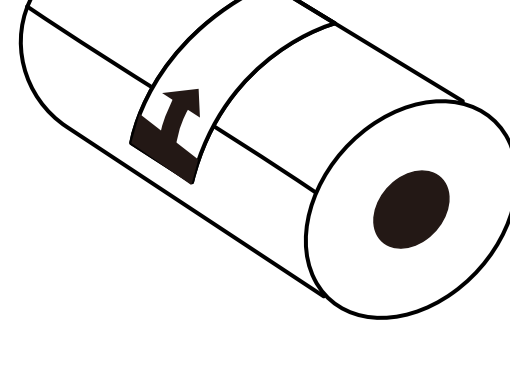 



Paper Roll

! The paper roll has been placed in the printer!

 1.2 Parts Description

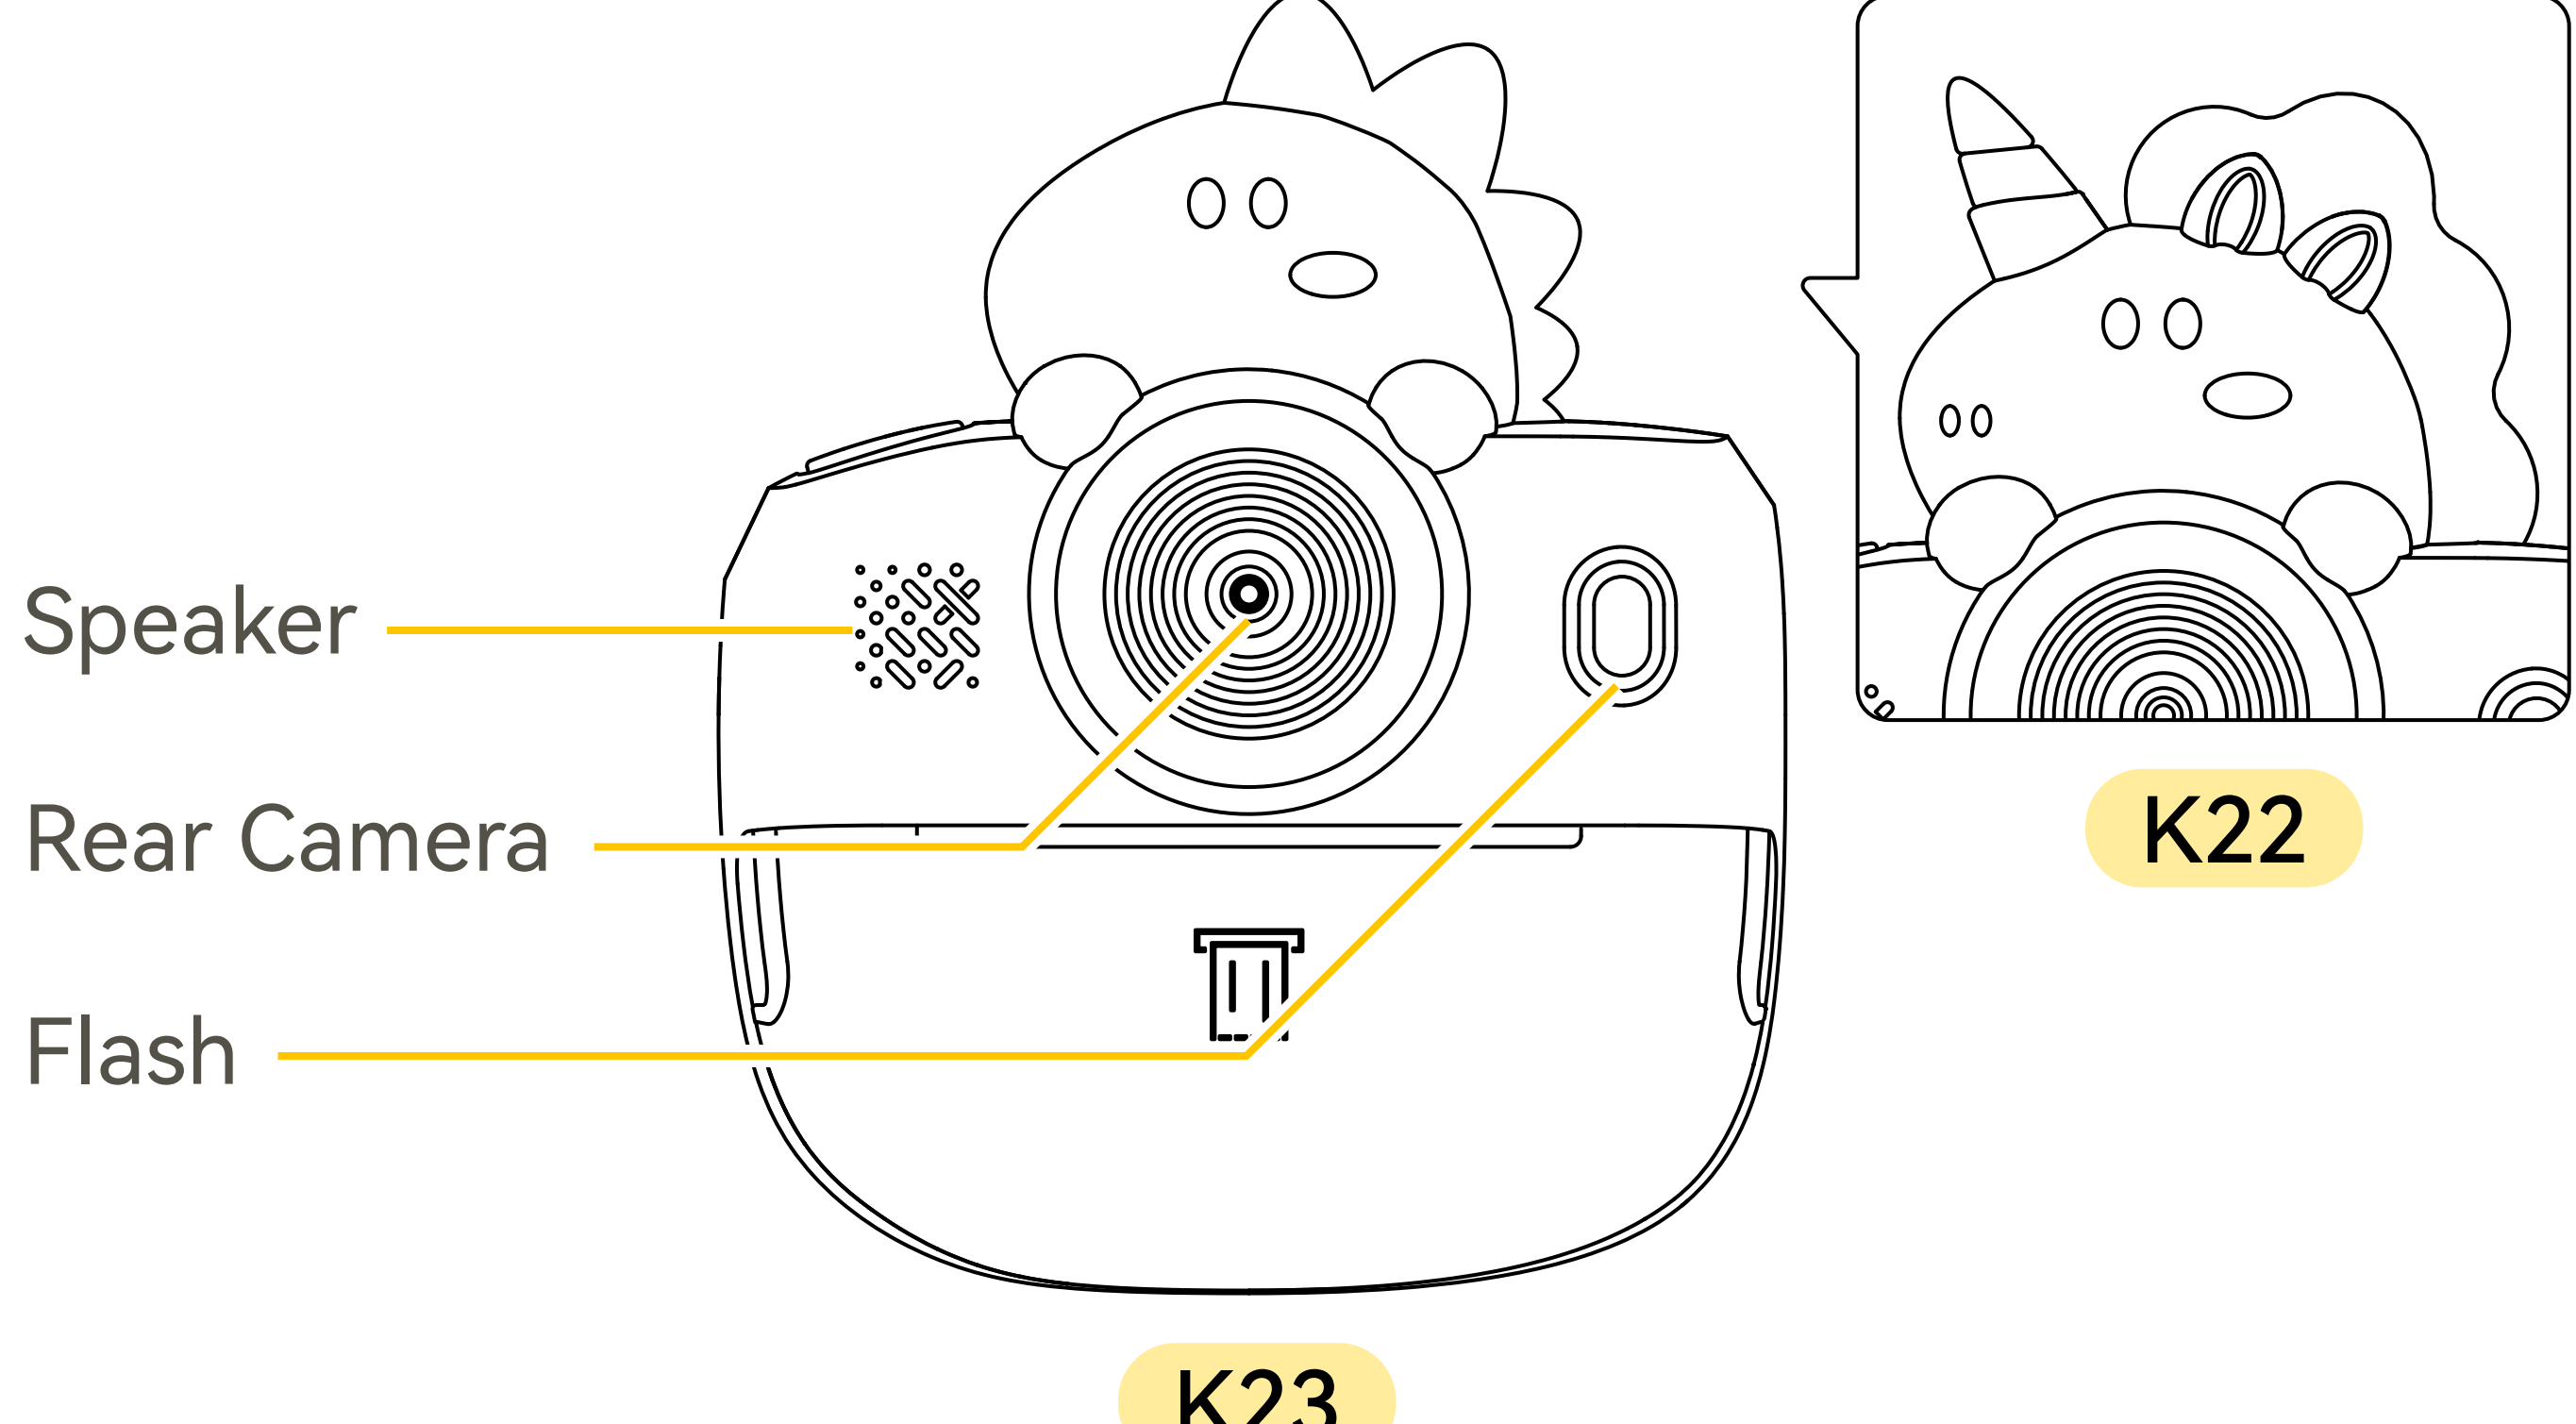


K23

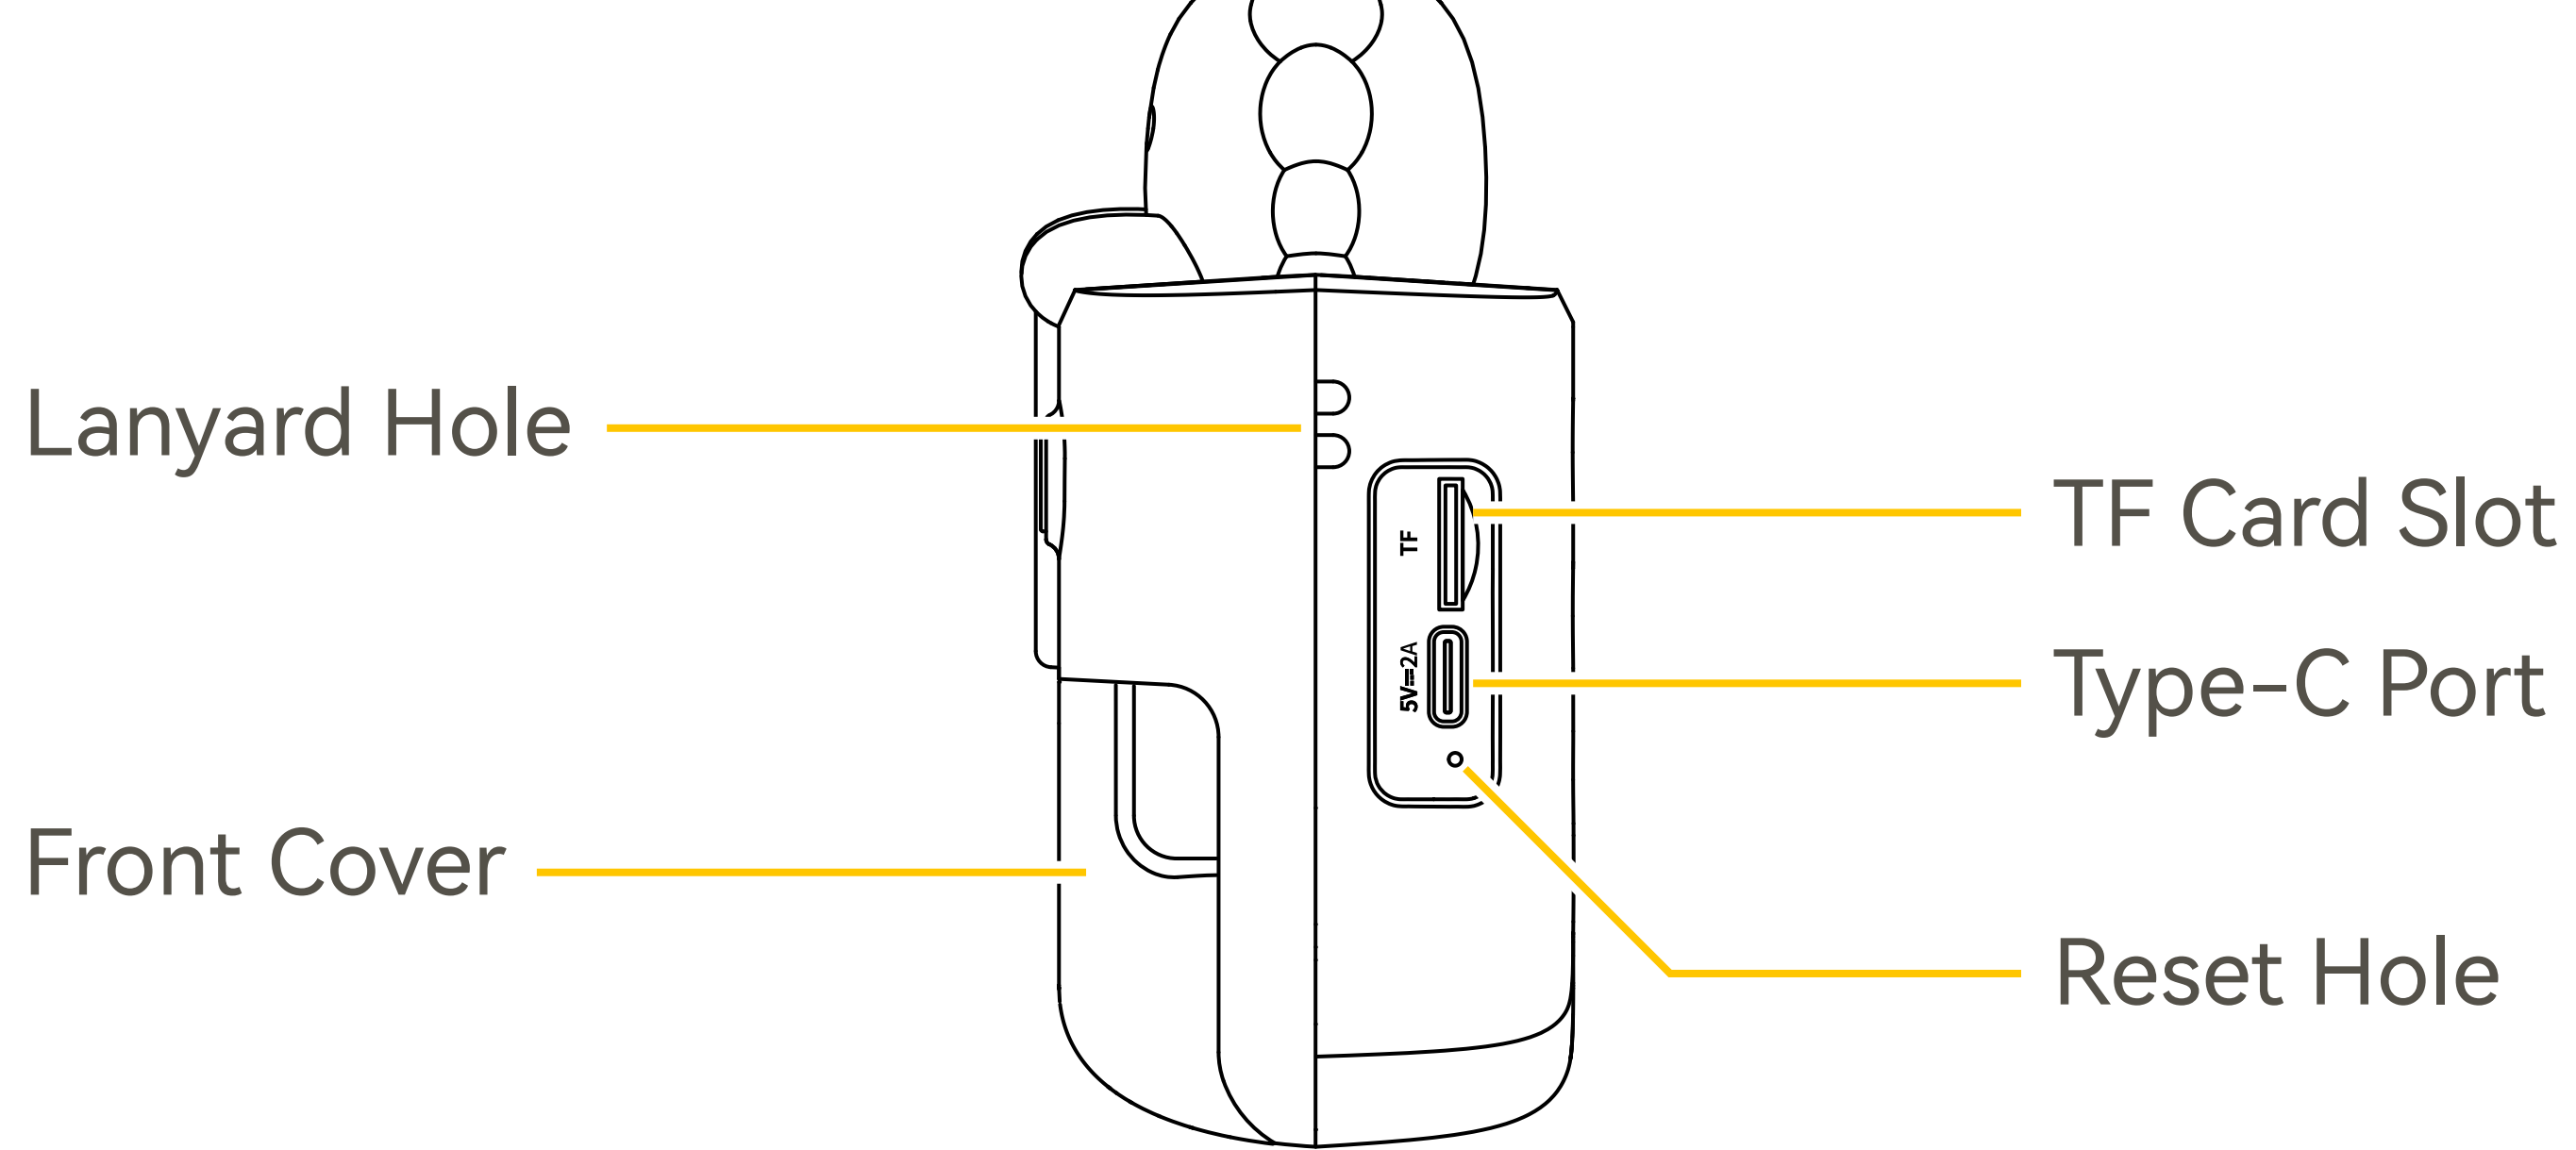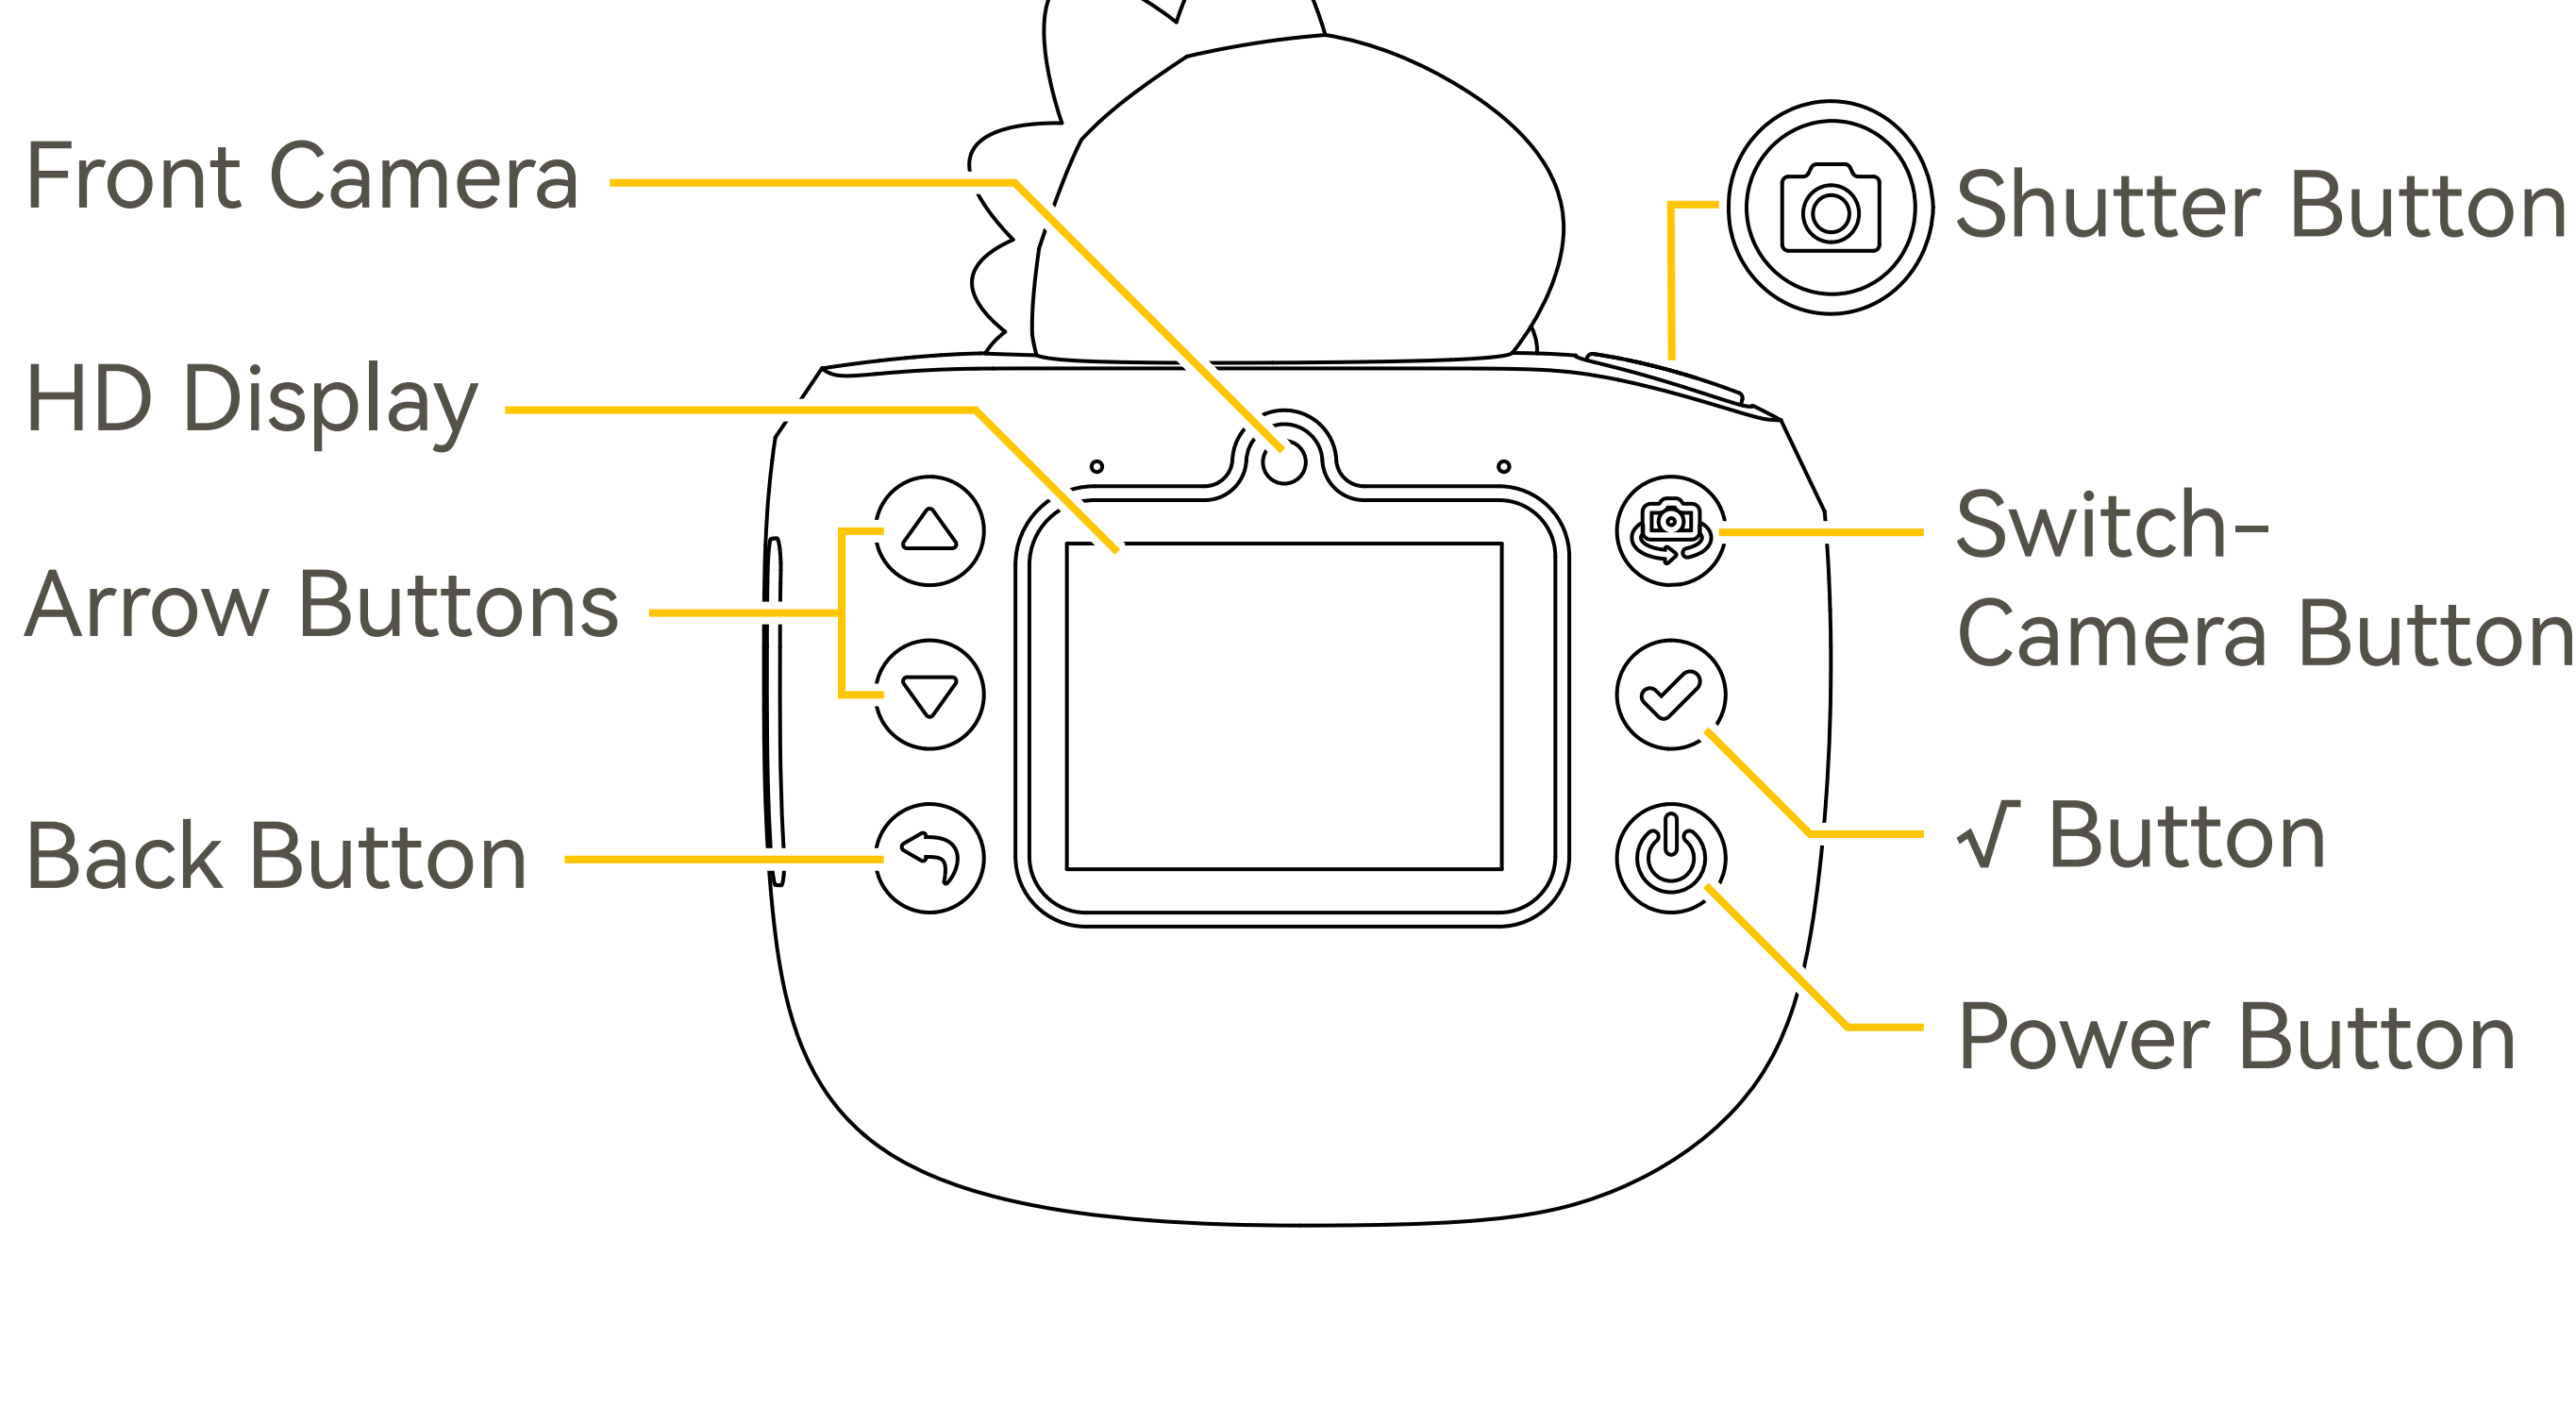  


2. Quick Use

 
1 Open Front Cover

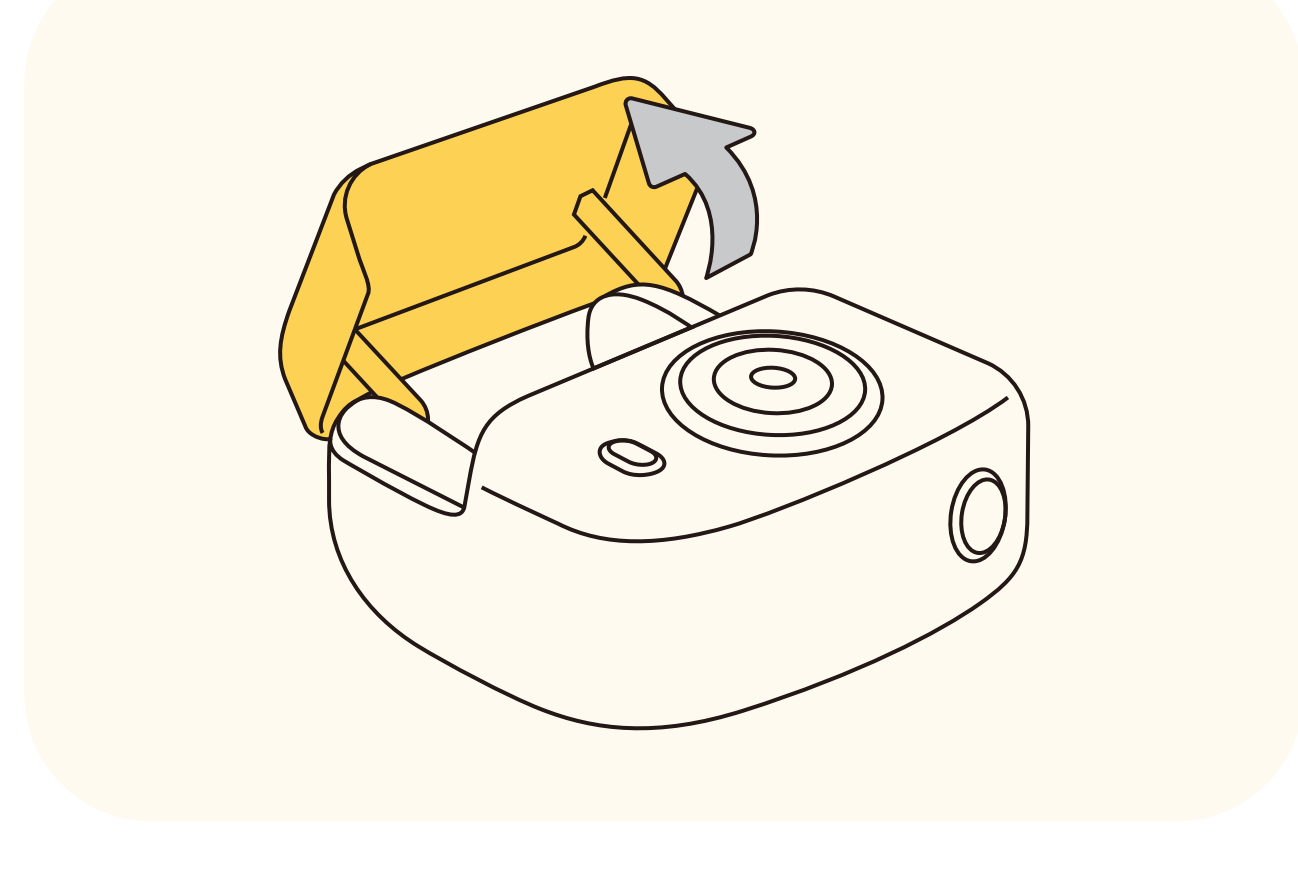


2 Tear the Protective Film

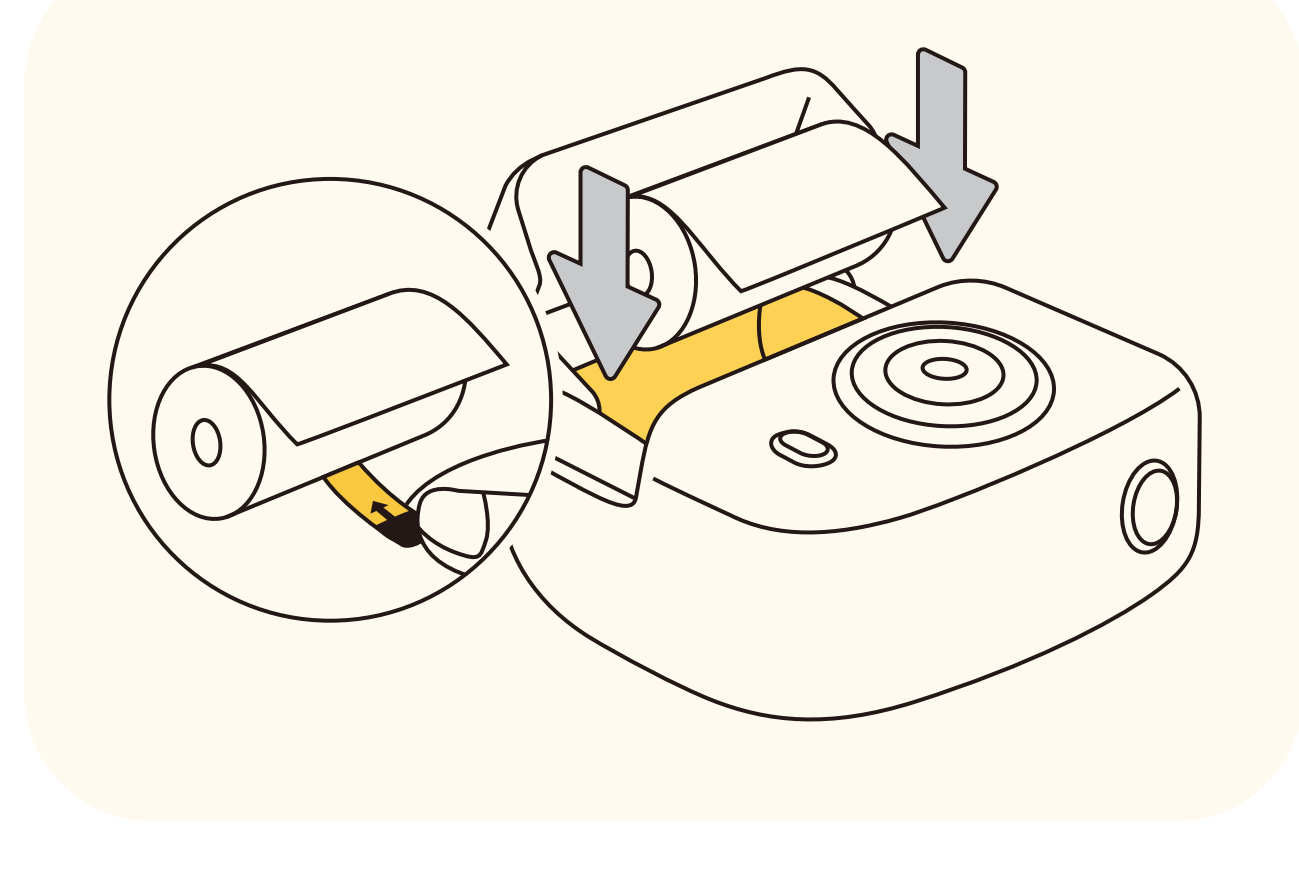 

 
3 Pull the paper out of the slot and close Front Cover

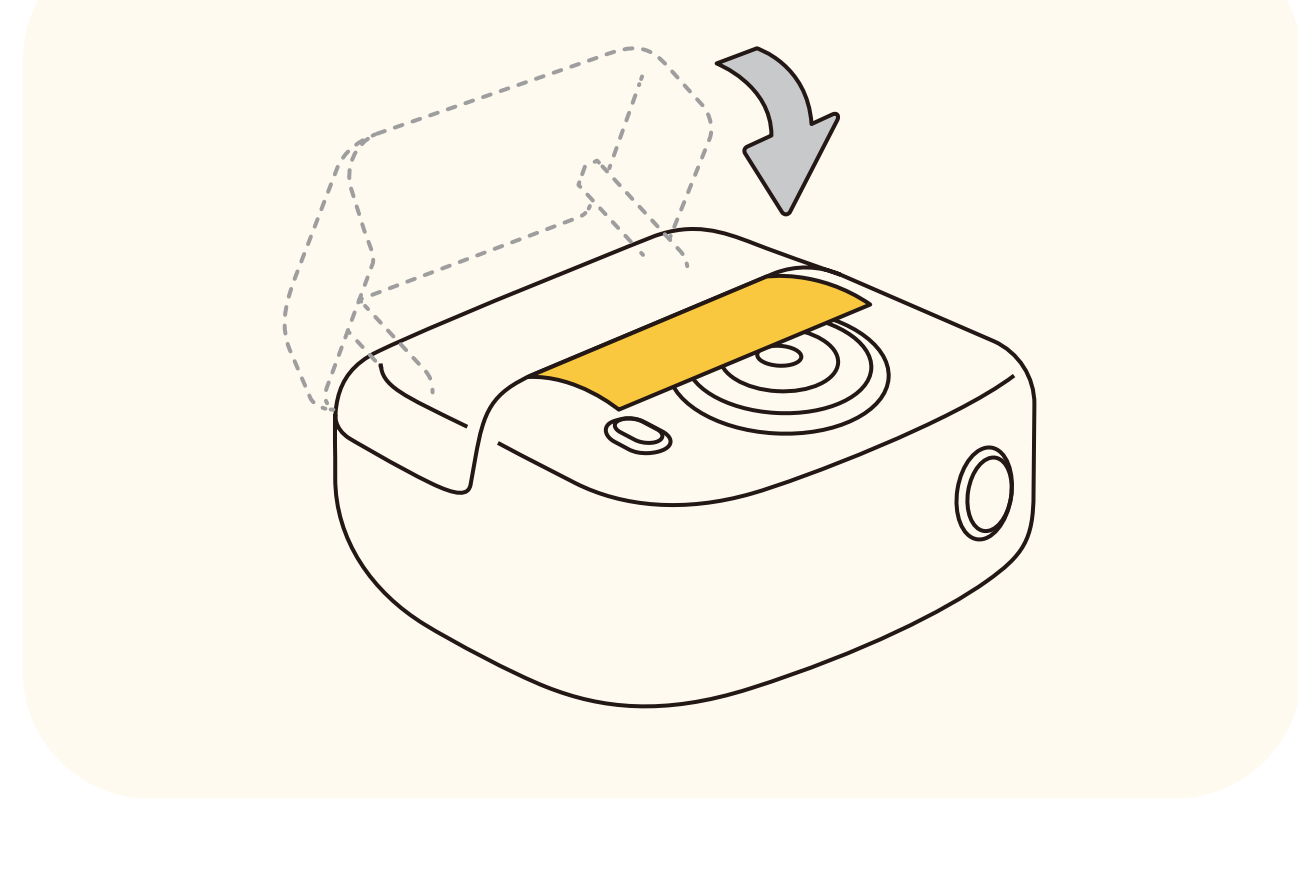

 4 Long press Power Button for 3s to power on

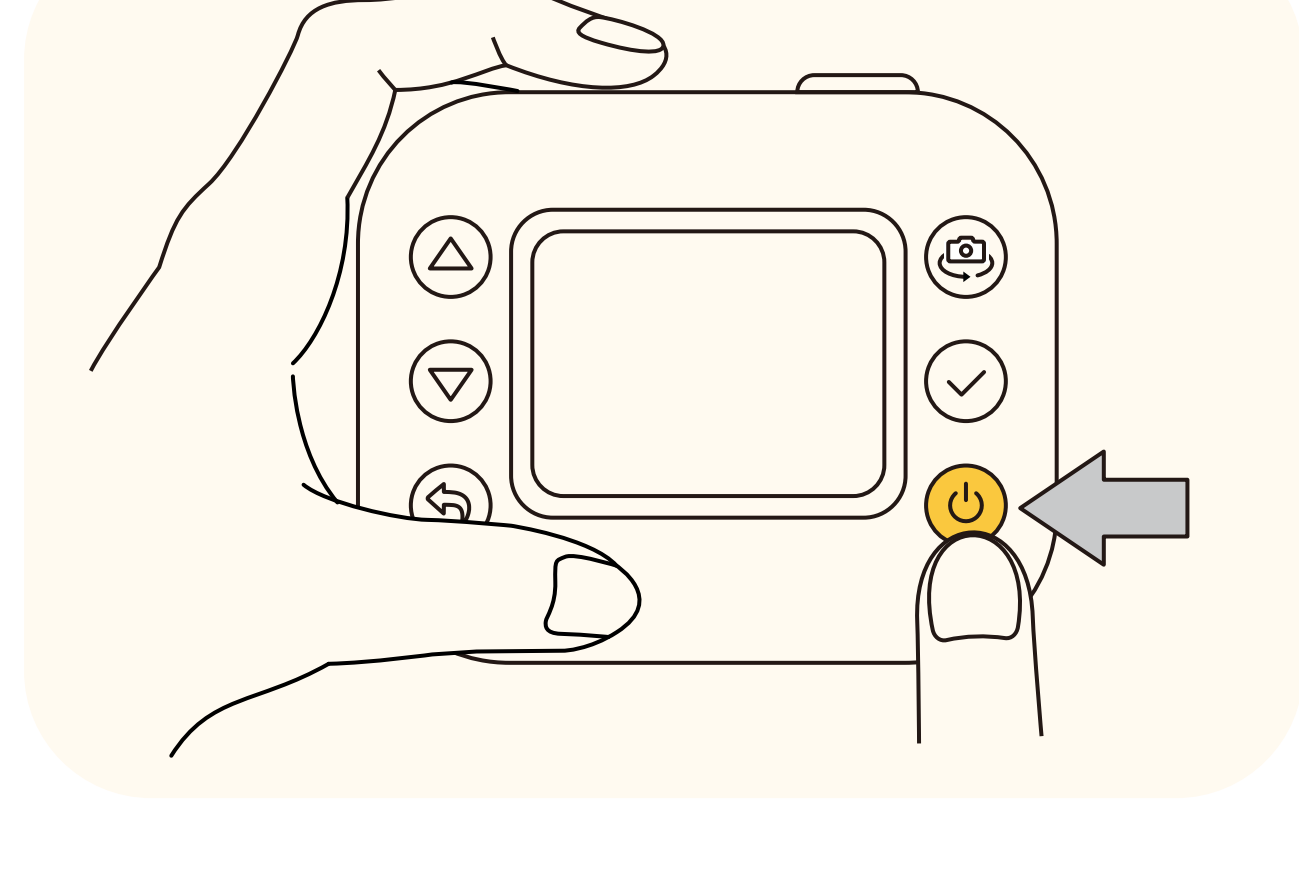

 5 Press Shutter Button and wait for auto printing

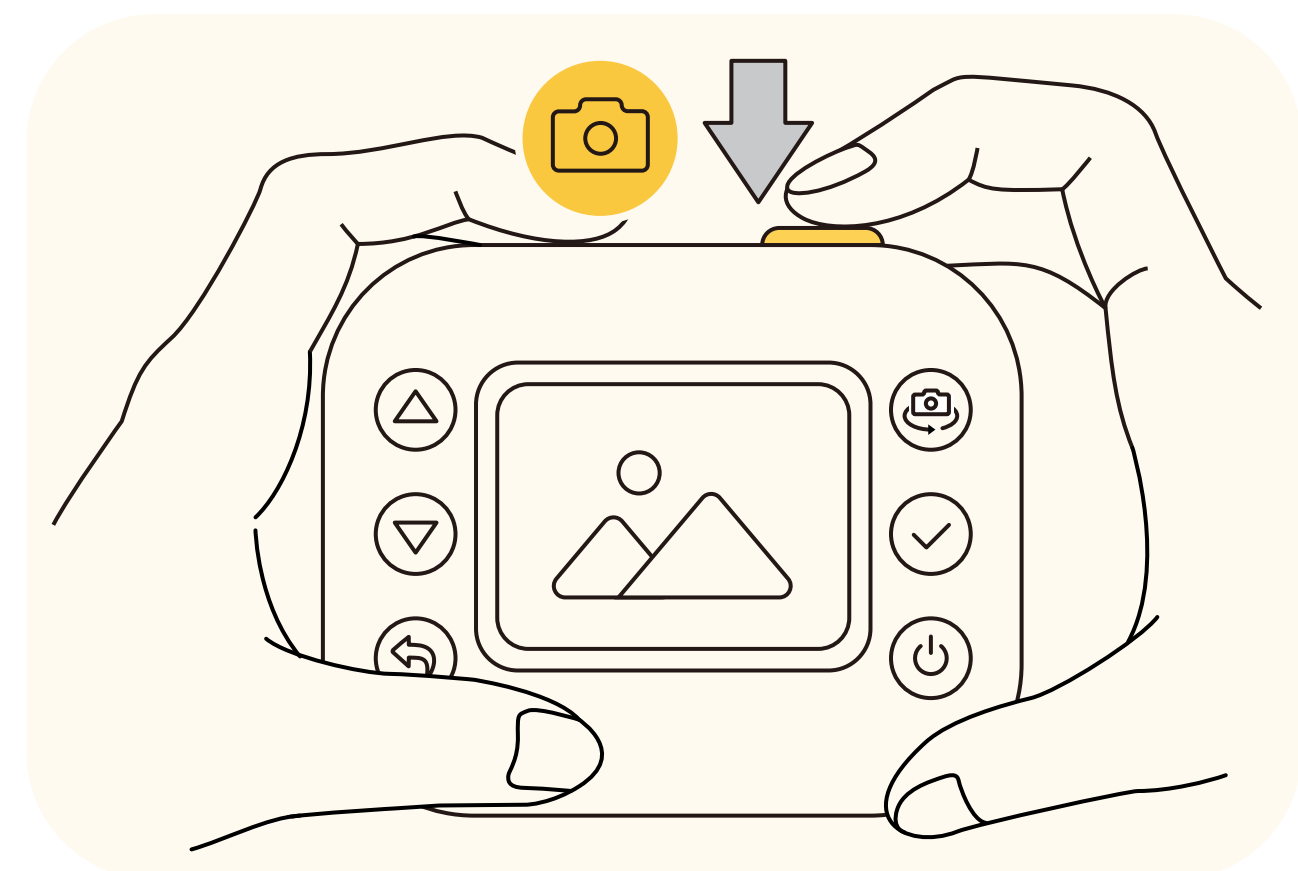


6 Tear the paper along Paper Exit after auto printing




3. Replace the Paper Roll

 1 Open Front Cover

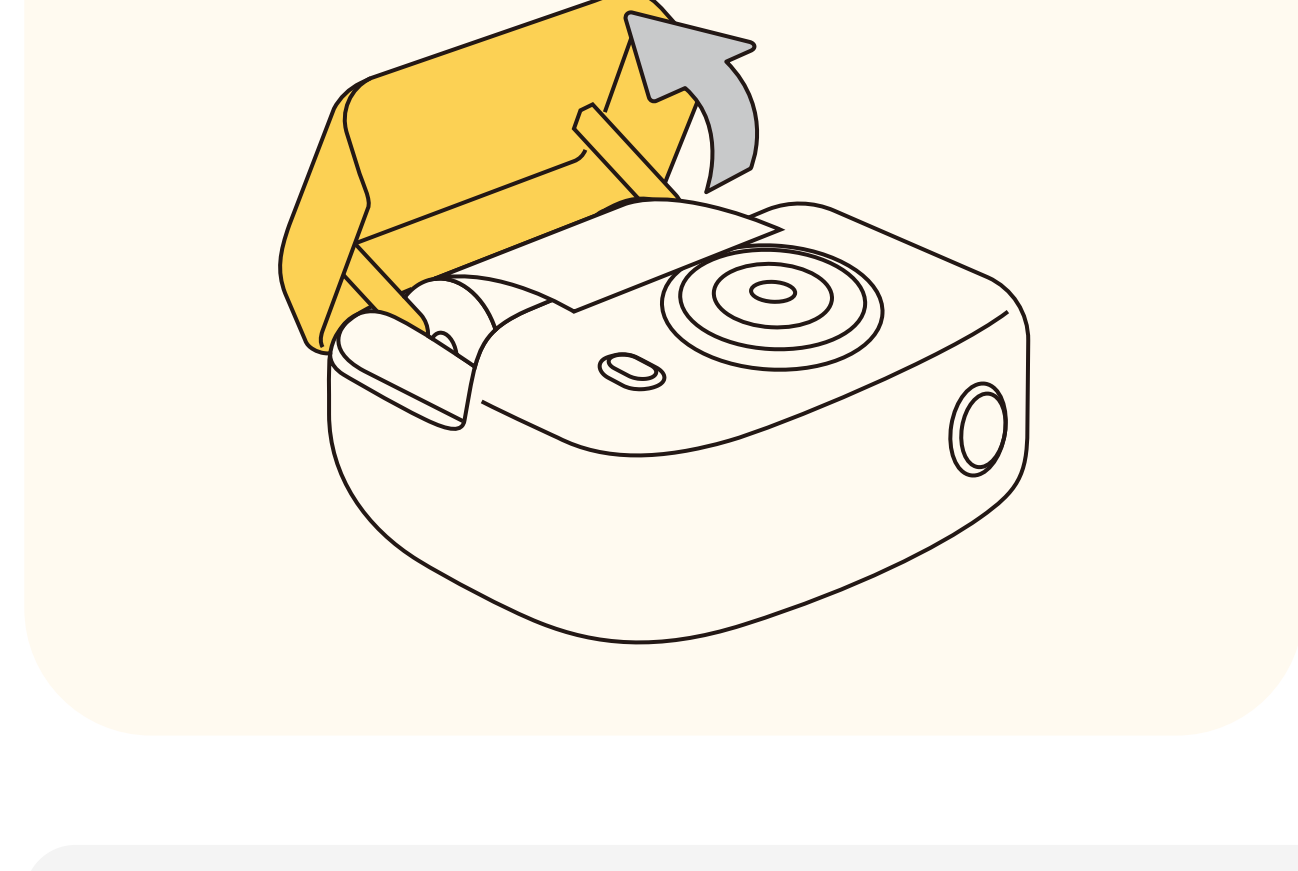


2 Remove the paper roll to be replaced

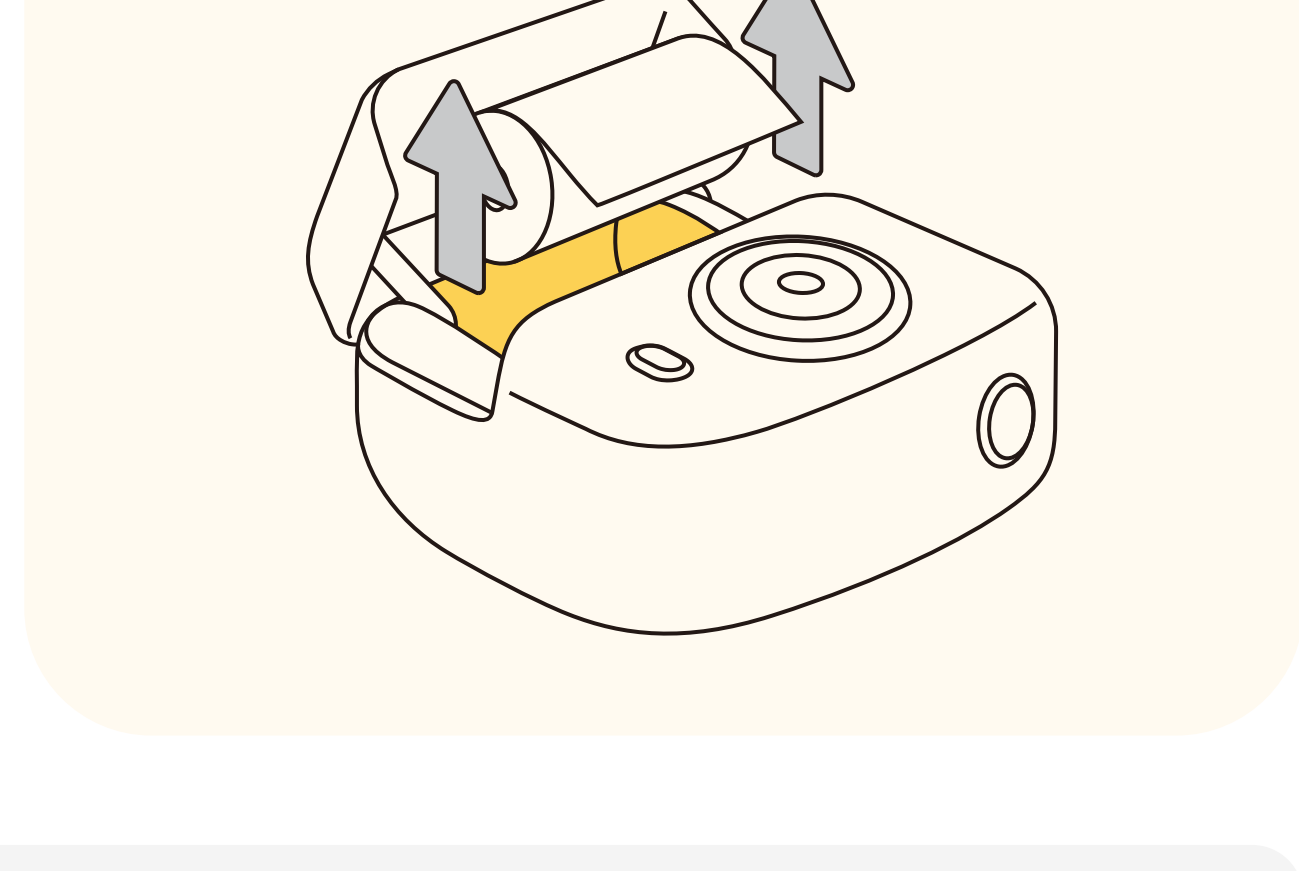 


! Some paper rolls include tubes. Remove the paper tube after running out.

 3 Take a new paper roll, tear off the protective film

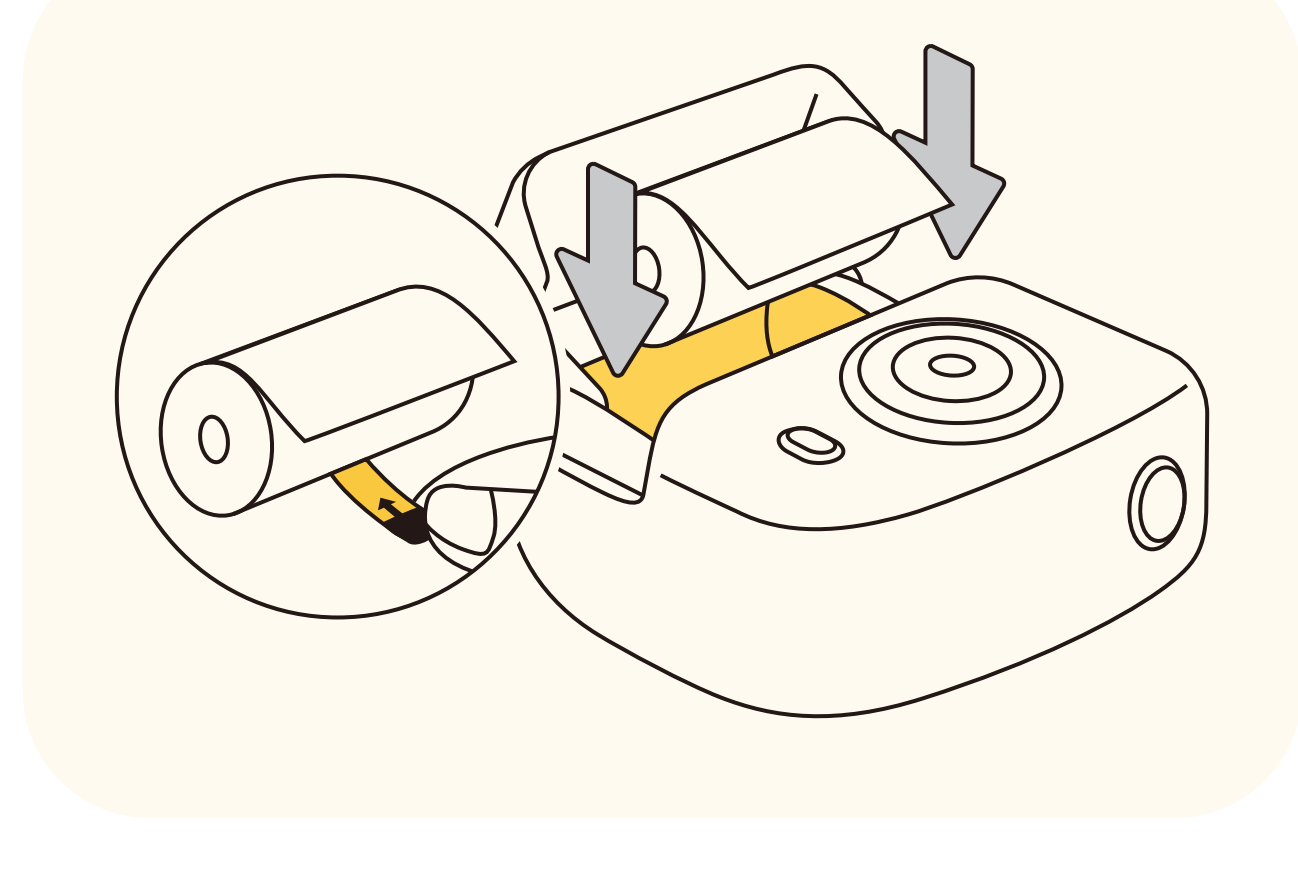


  4 Pull the paper roll out of the outlet and close Front Cover

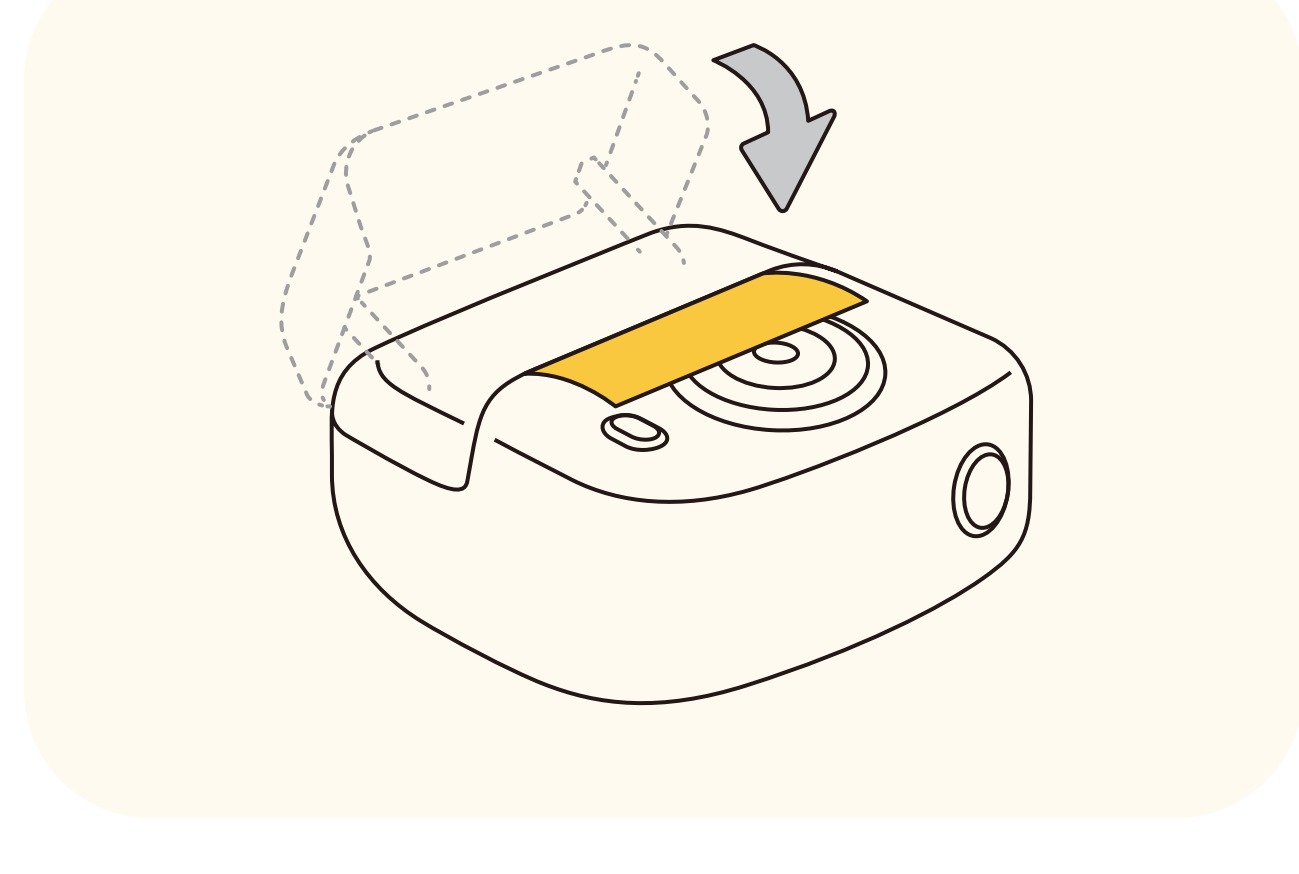





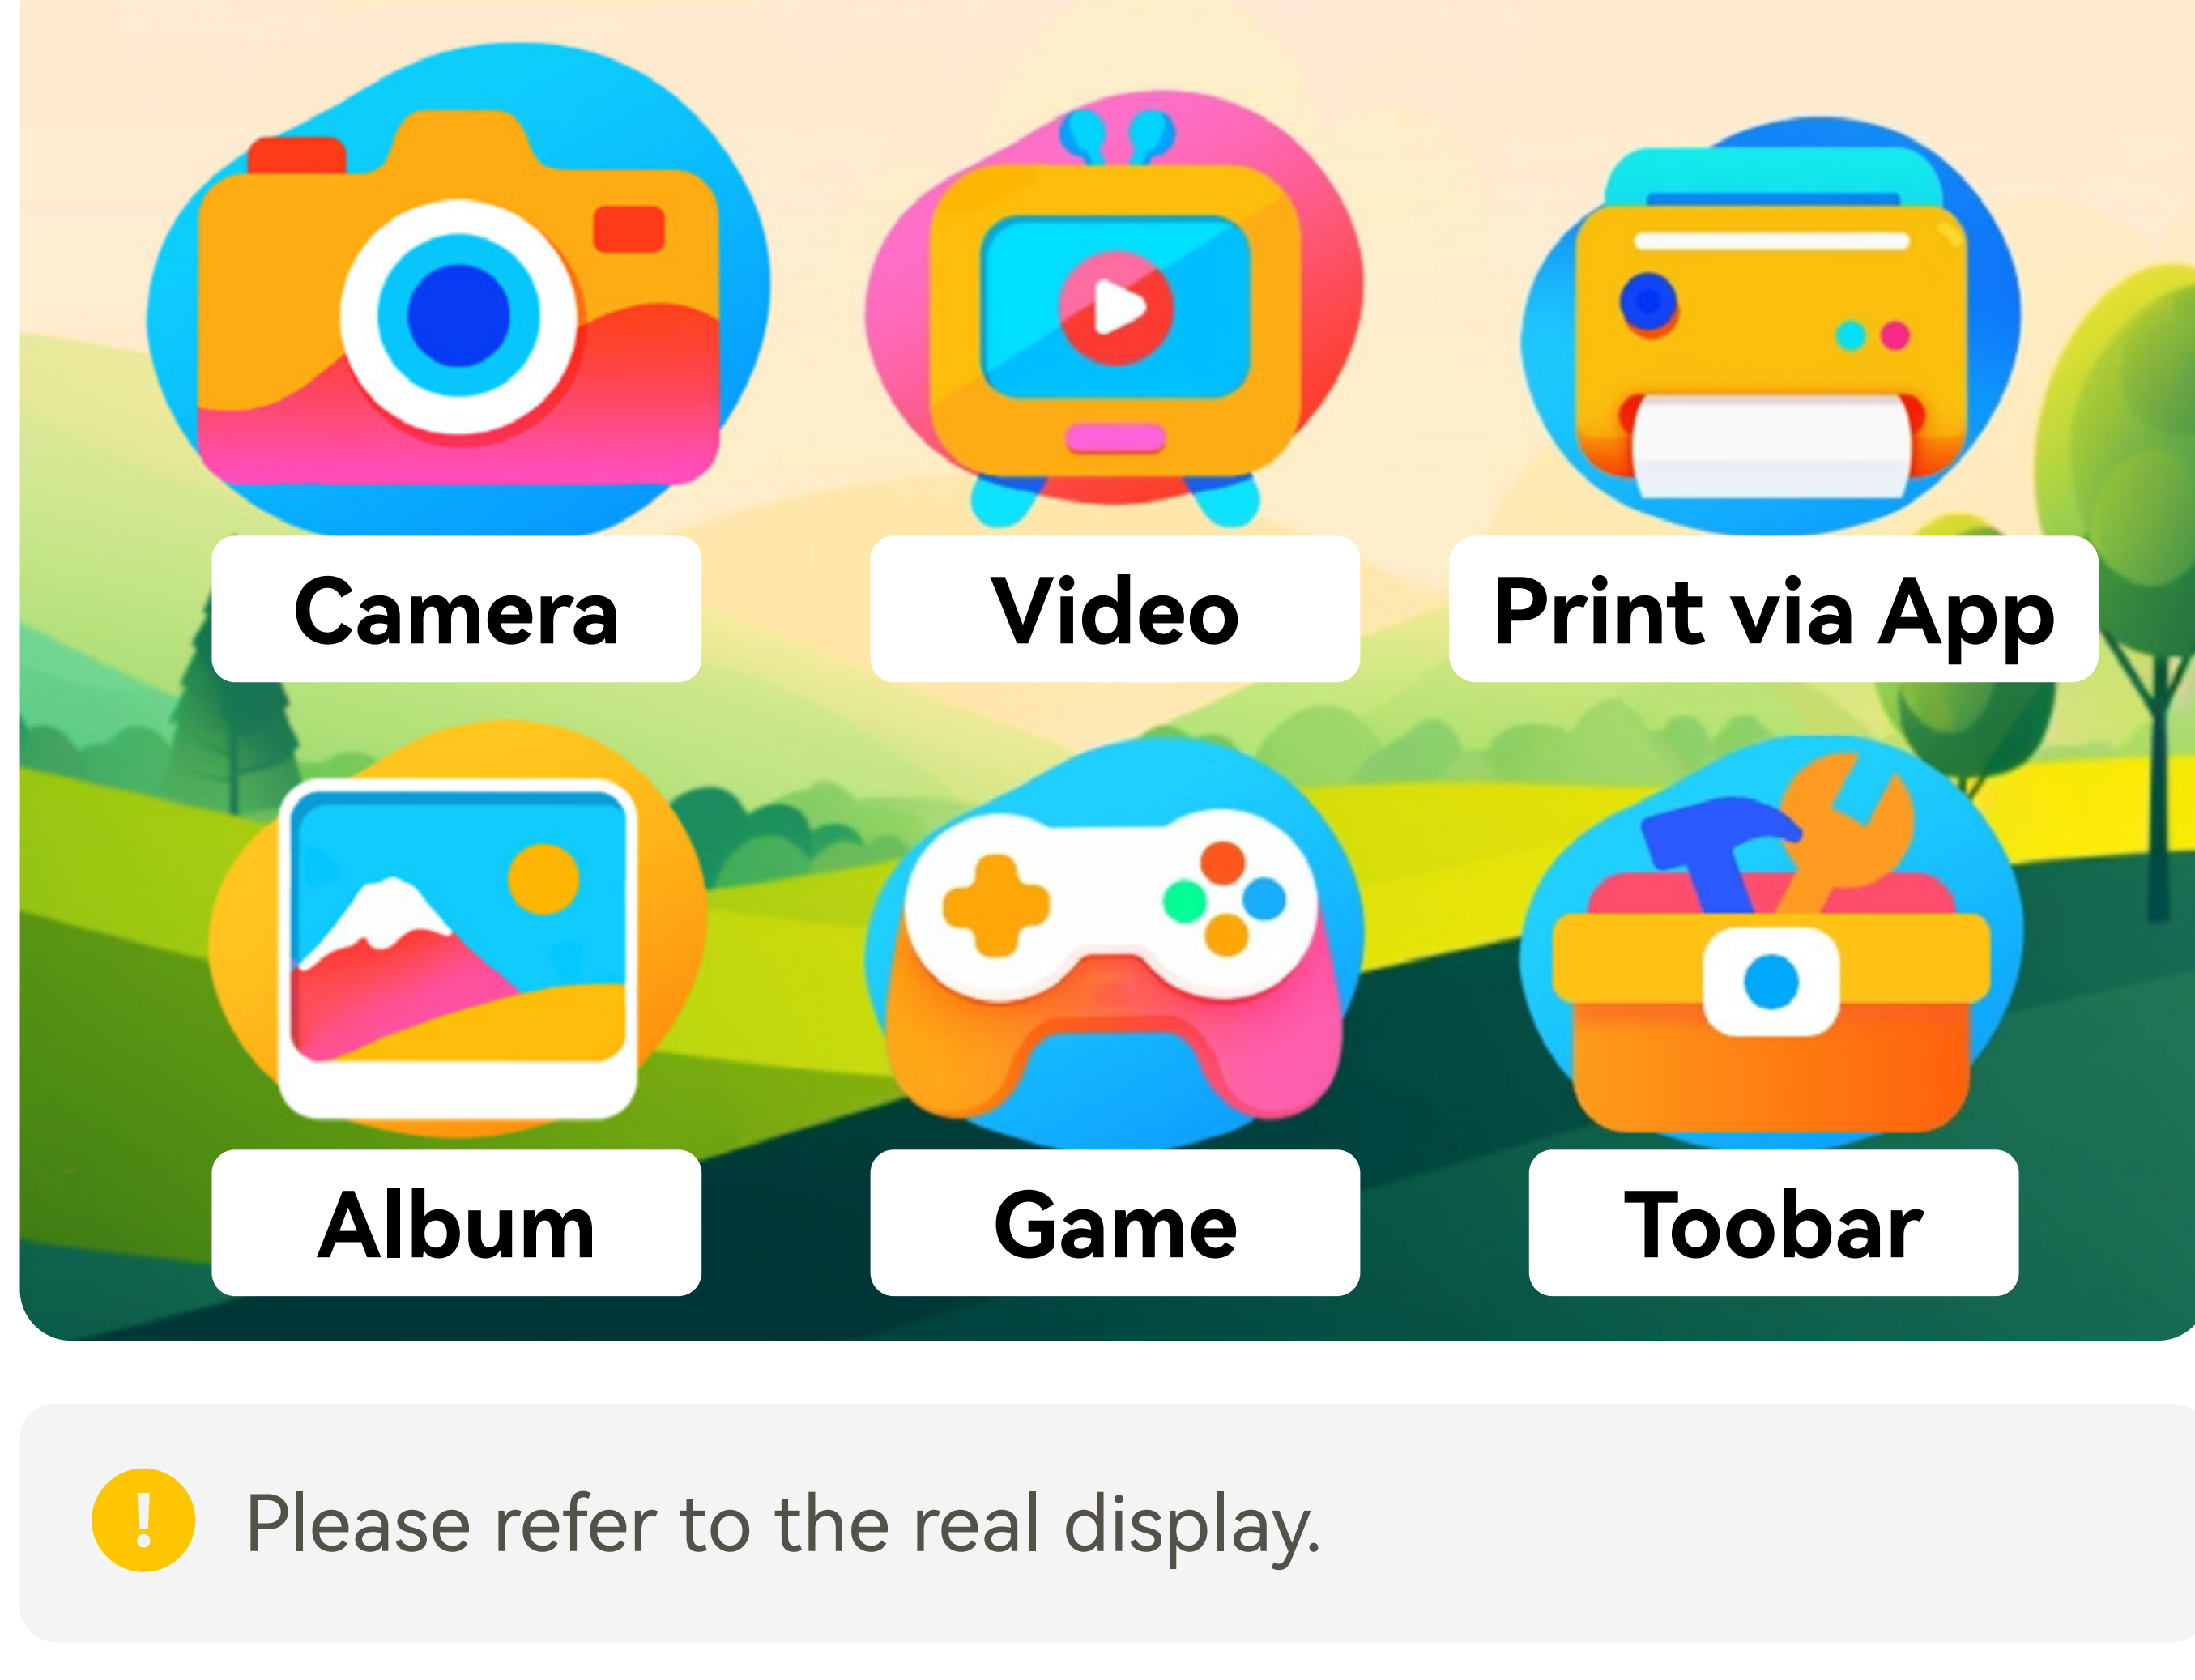


4. Function Description

4.1 Camera Function









! Please refer to the real display.





- Long press  for 3s to power on
- Press  to turn on/ off Flash
- Use   to choose function you need and press  Button to confirm
- Press  for returning to the previous page
- Press  to switch between Front and Back Cameras

- Press  to confirm the function you need

Take Picture



- Press  to turn on/ off the instant-take and-print-picture
- Press  to take picture/ instantly take and print picture
- Press   to switch among continuous shooting, timer, fun photo frame, and filters; Long press to adjust the focus
- Press  to switch between Front and Back Cameras
- Press  to turn on/ off Flash

Take Video






- Press  to start/ stop recording
- Press   to switch filters
- Press  to turn on/ off Flash

Print via App




- Scan the QR code to download App. Please stay on this page when printing

- Press   to flip




Album

- Press  to play or pause the video
- Press  to print the picture; play/ pause the video
- Press   to flip among pictures and videos
- Press  to delete this item or all items

Games





 
- Press  to enter the game
- Press   to choose a game

Toolbar


- Press  to use the toolbar
- Press   to change Music, or to enter Tomato Clock, Timer or Settings

4.2 Toolbar Instruction

Tomato Clock

- Press  to start/ pause/ resume
- Press  to set the time to focus/ rest
- Press   to adjust time
- Press  for returning to Settings

Timer

- Press  to start/ pause timing
- Return then stop timing

Music

- Press  to play/ pause music
- Press   to change music

Settings

Instant-take and-print-picture

Turn on/ off Print

Flash

Turn on/ off flash

Print density

Select print density among degree 1-7

Print mode

Choose dot matrix print/ greyscale print

Eye Comfort

Switch on/ off Eye Comfort

Picture size

Choose clarity by saving a picture of 1M/ 3M/ 5M/ 8M/ 12M/ 20M/ 48M

5. Print via App

5.1 Download App

Method 1


Search for the "Phocol" app on App Store® or Google Play™ to download and install it.



Method 2

Scan the QR code.

 You can scan the code using your cell phone's camera, the built-in QR code scanning feature of your browser, or a dedicated scanning app.

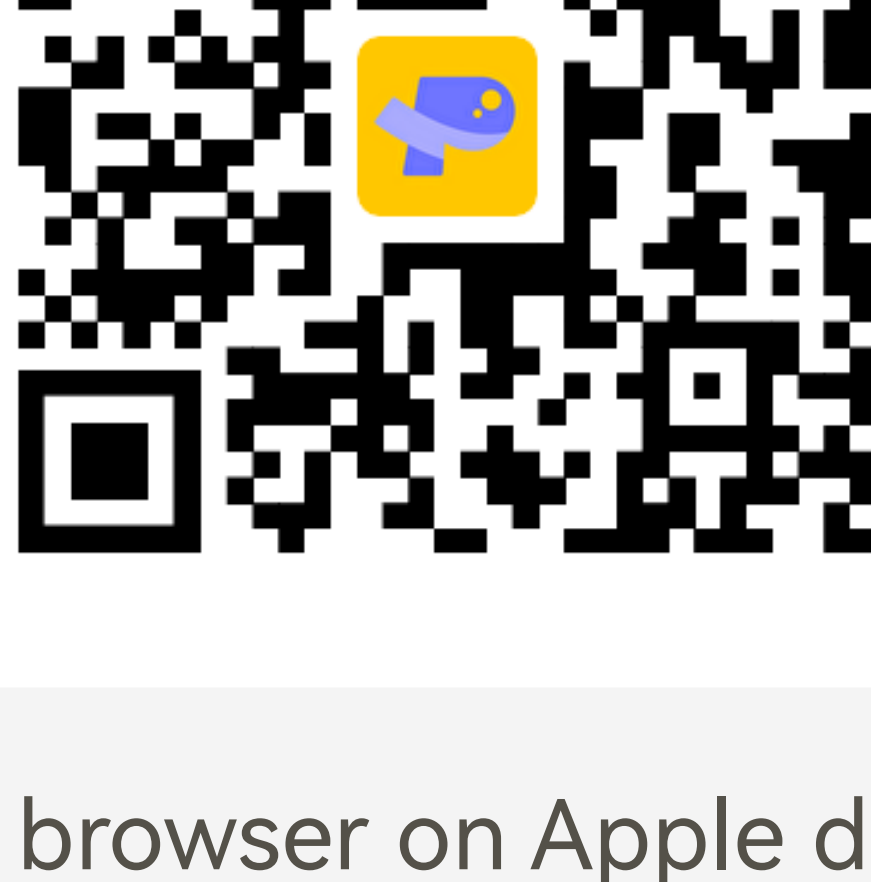


! As the Safari browser on Apple devices does not support QR code scanning, please use your device's built-in QR code scanner instead.

5.2 Connect Printer


1 Long press Power Button for 3s to power on



 
2 Open "Phocol" app

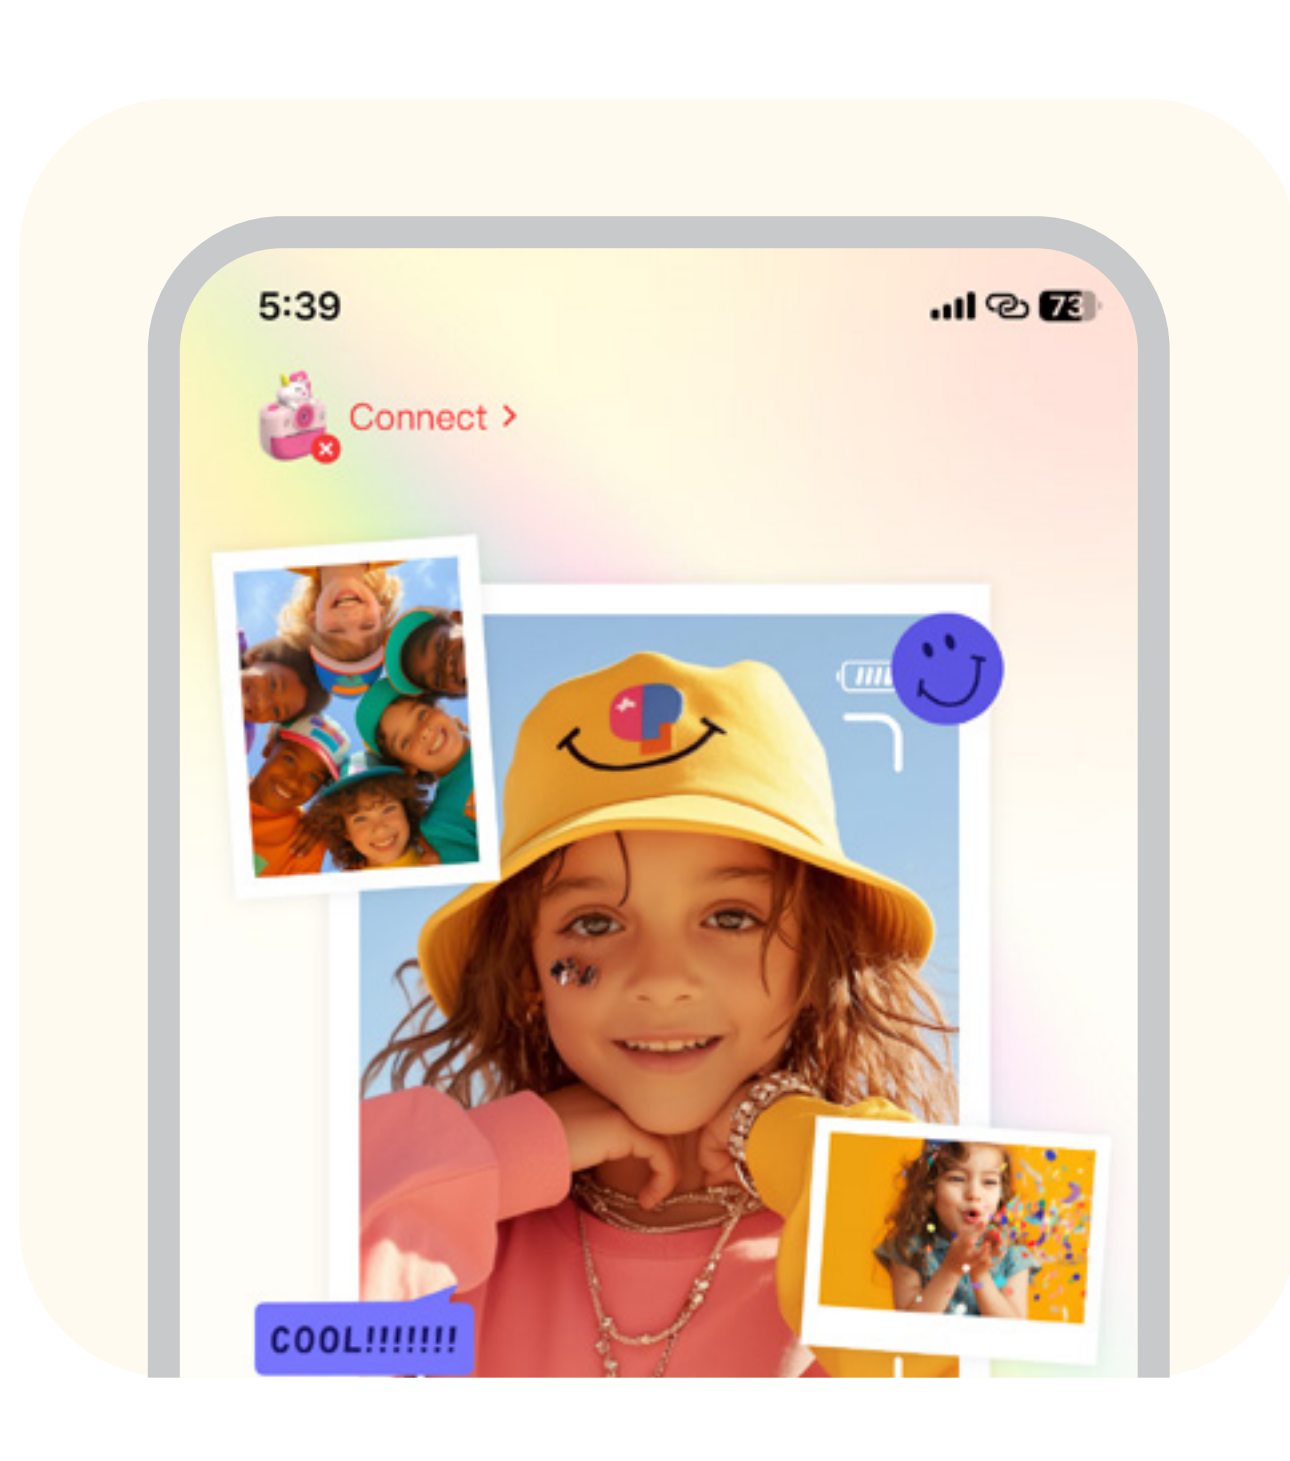

 
3 Turn on Bluetooth of your device and click the Connect Button

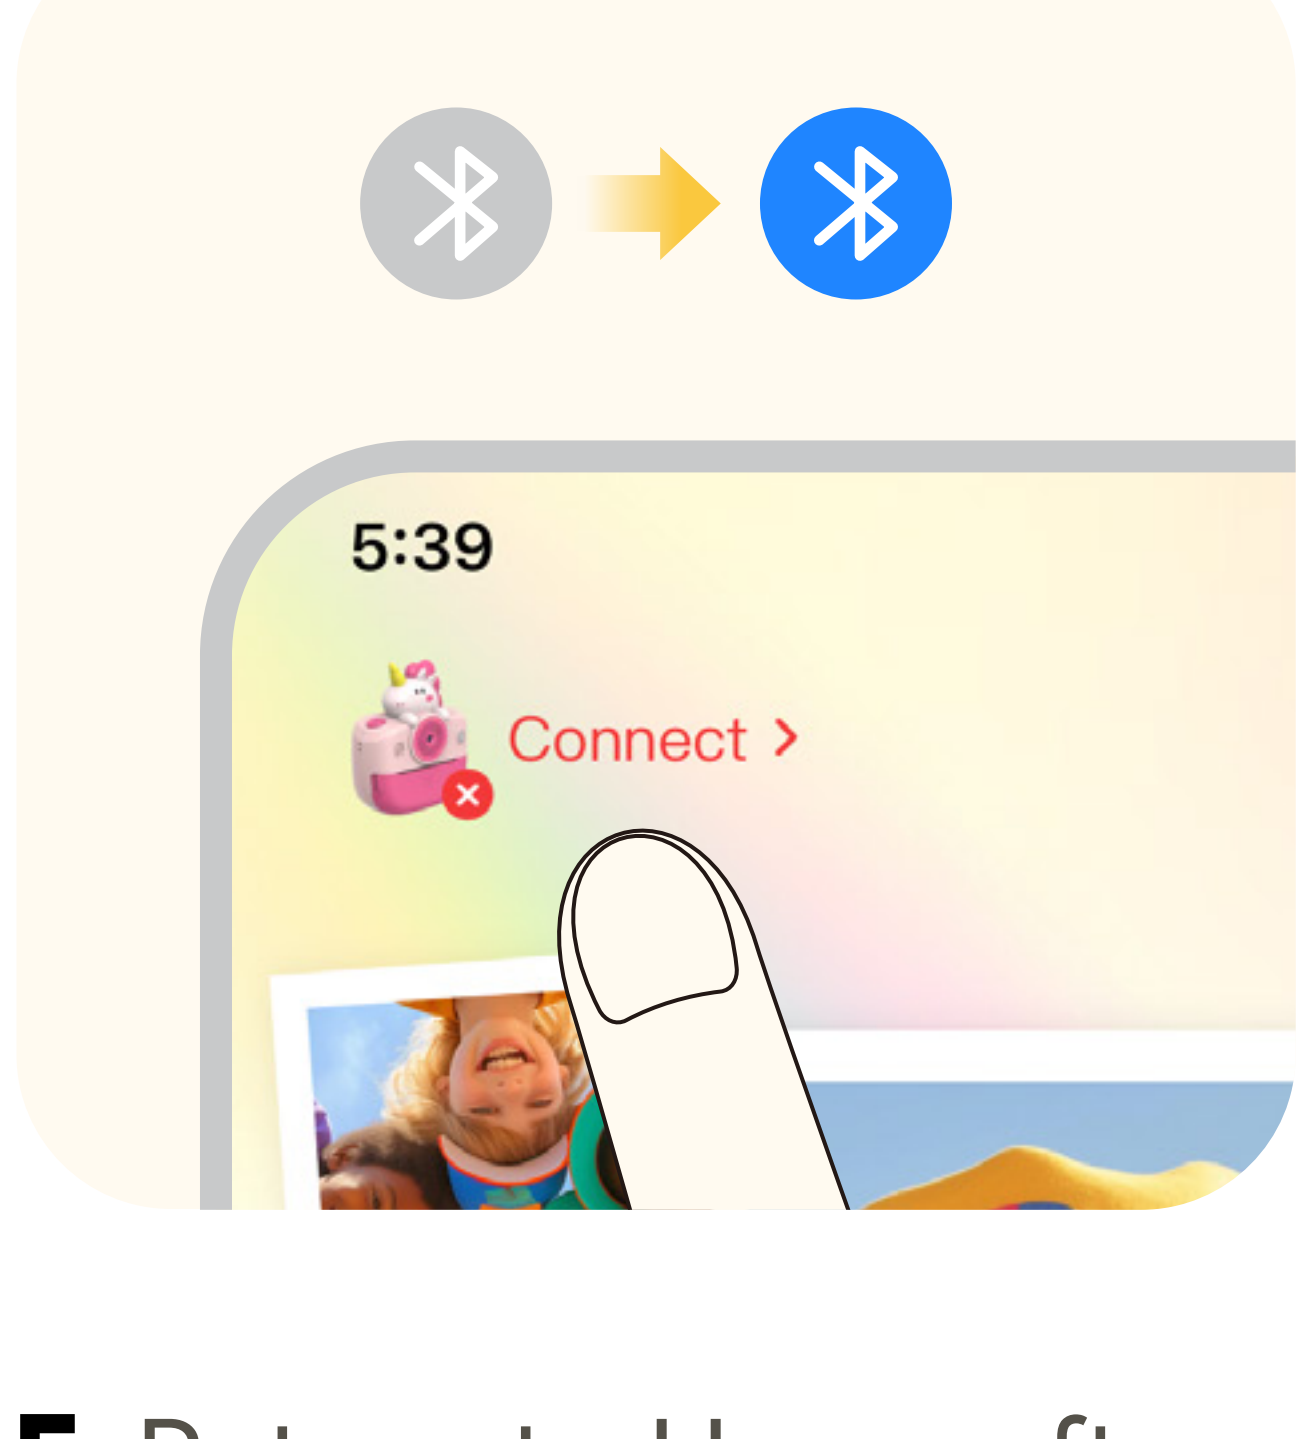


4 Select the Printer to connect

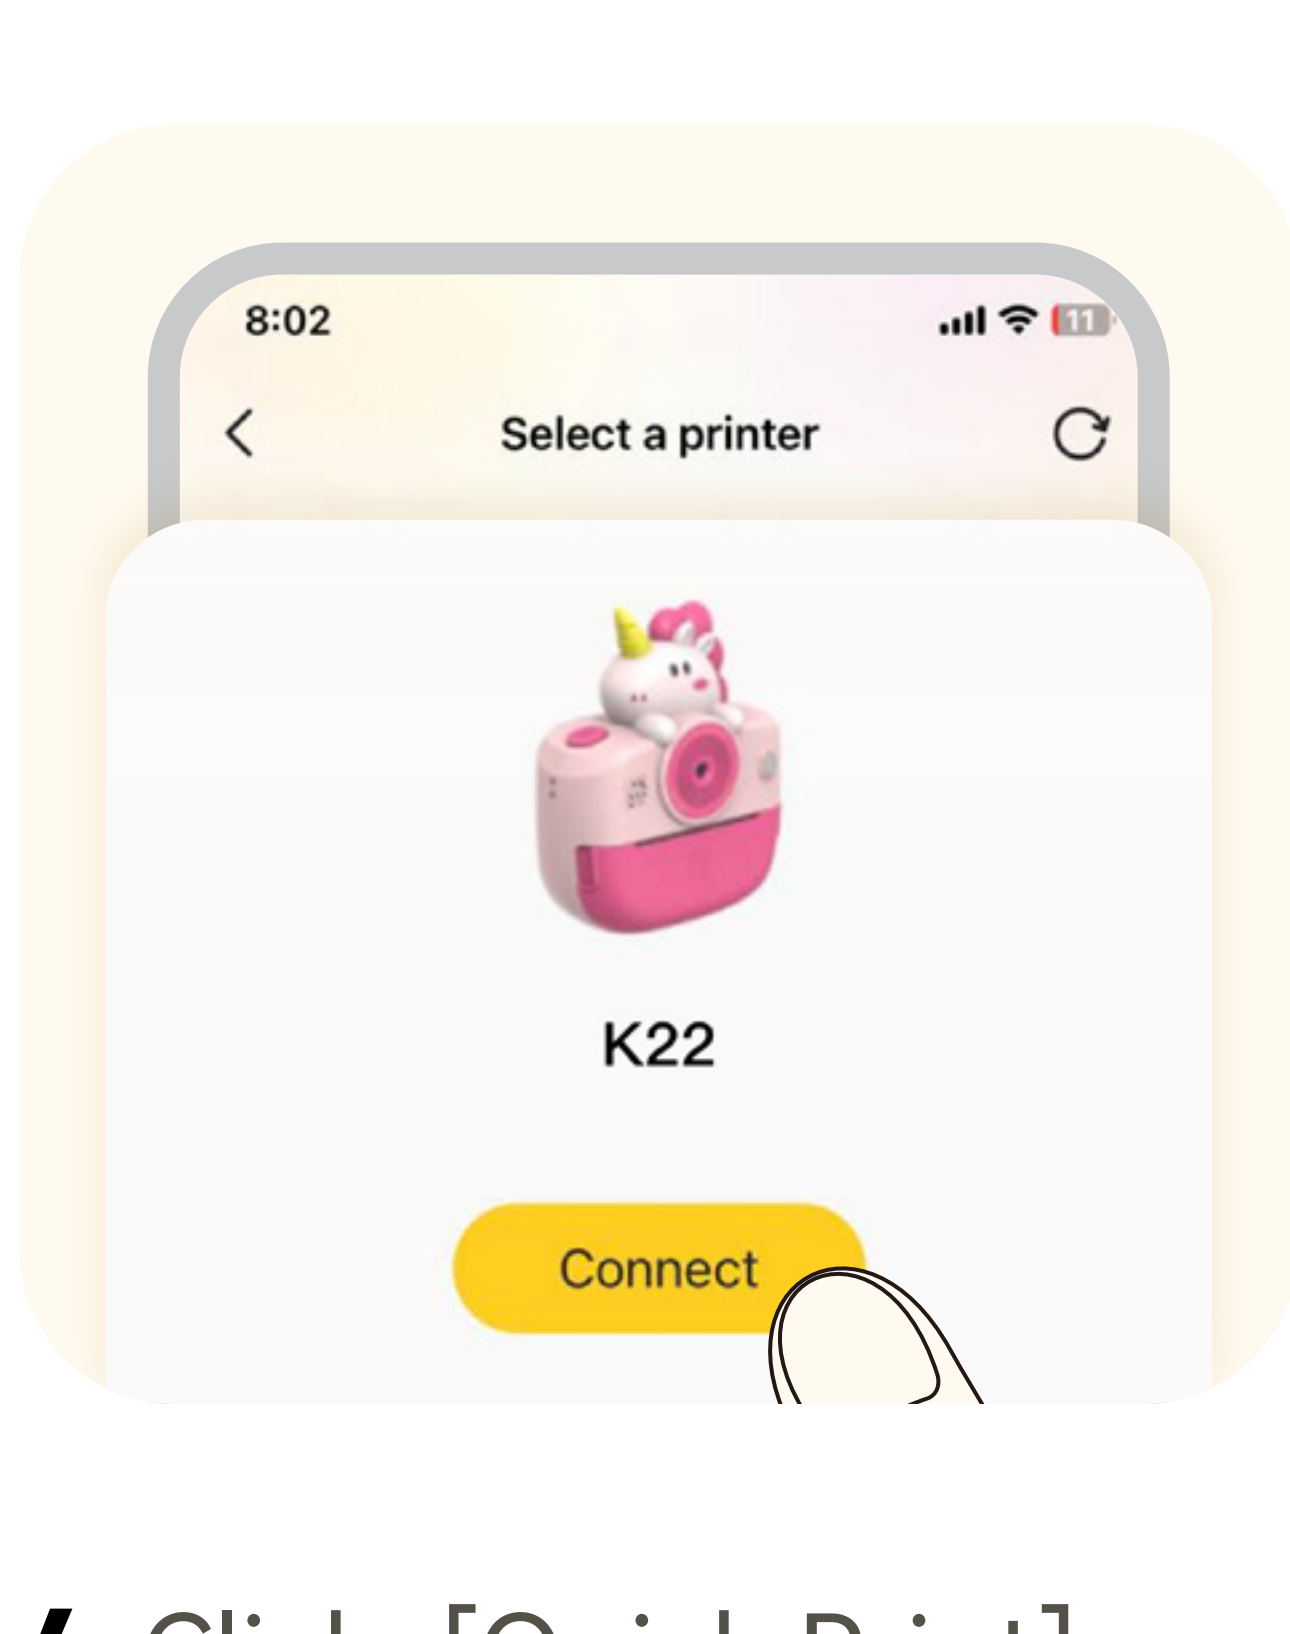 

 
5 Return to Home after successful connection

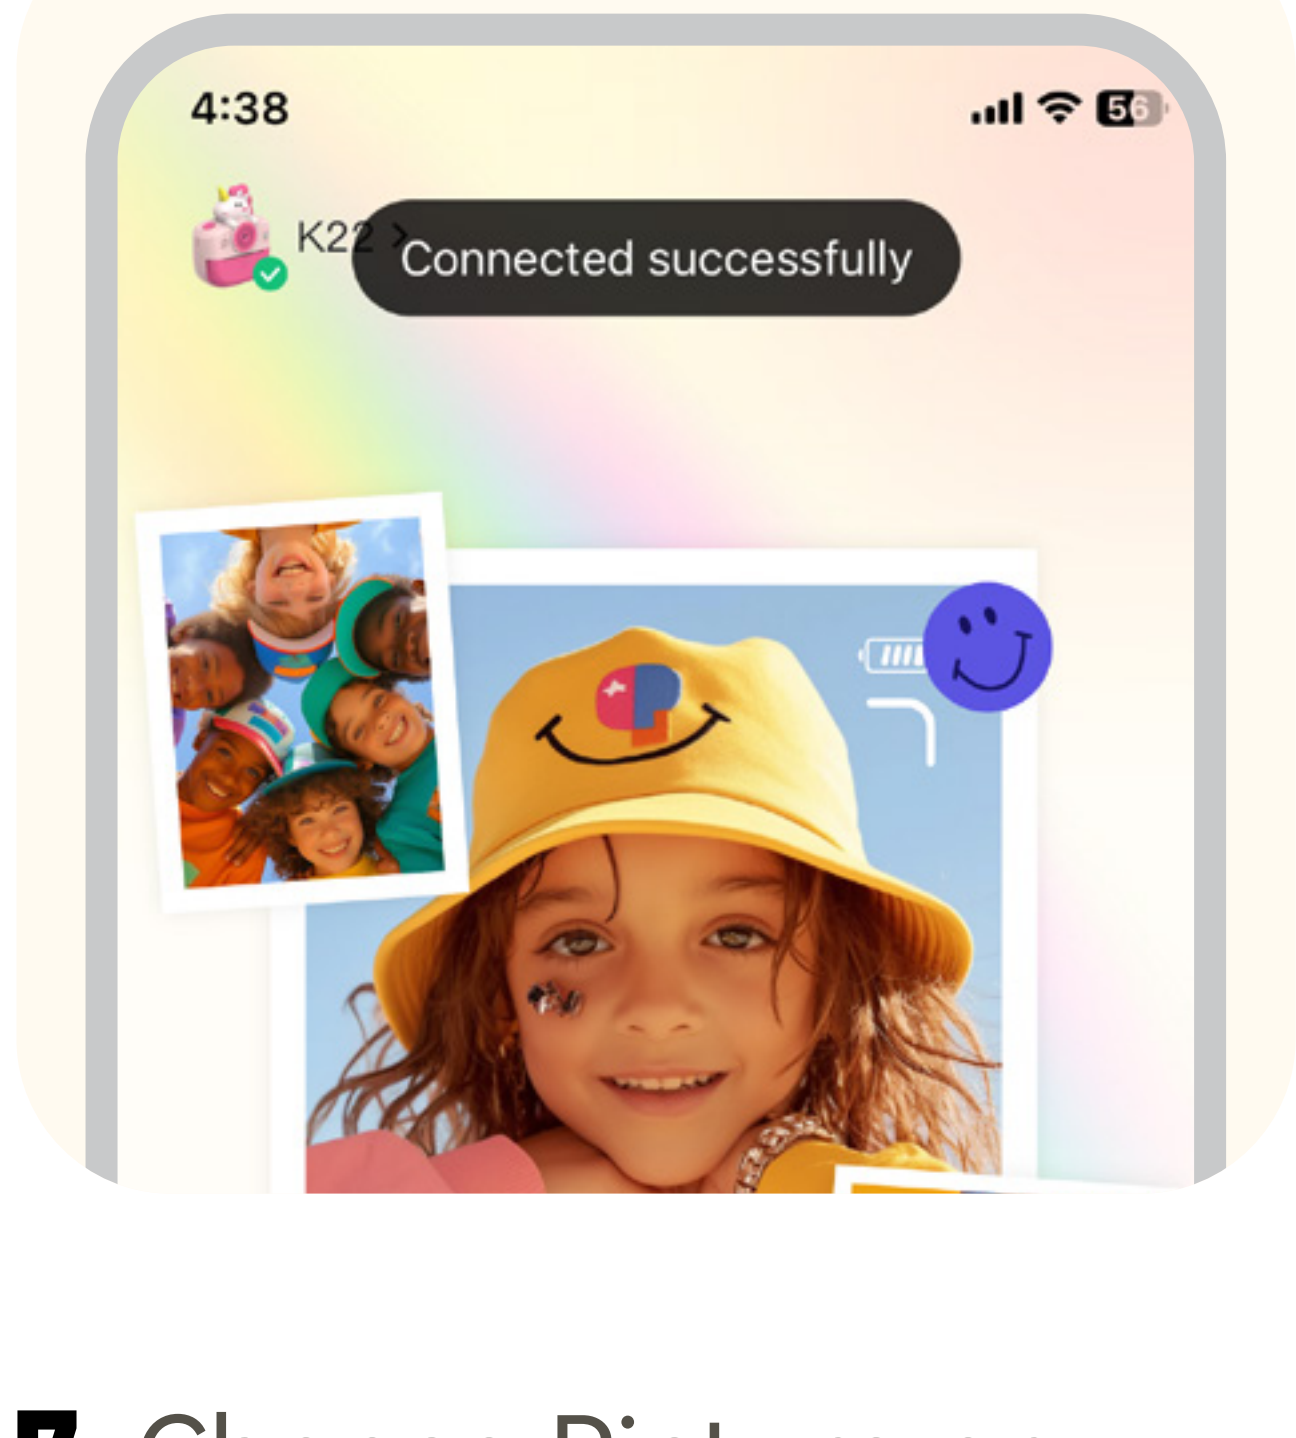


6 Click [Quick Print]

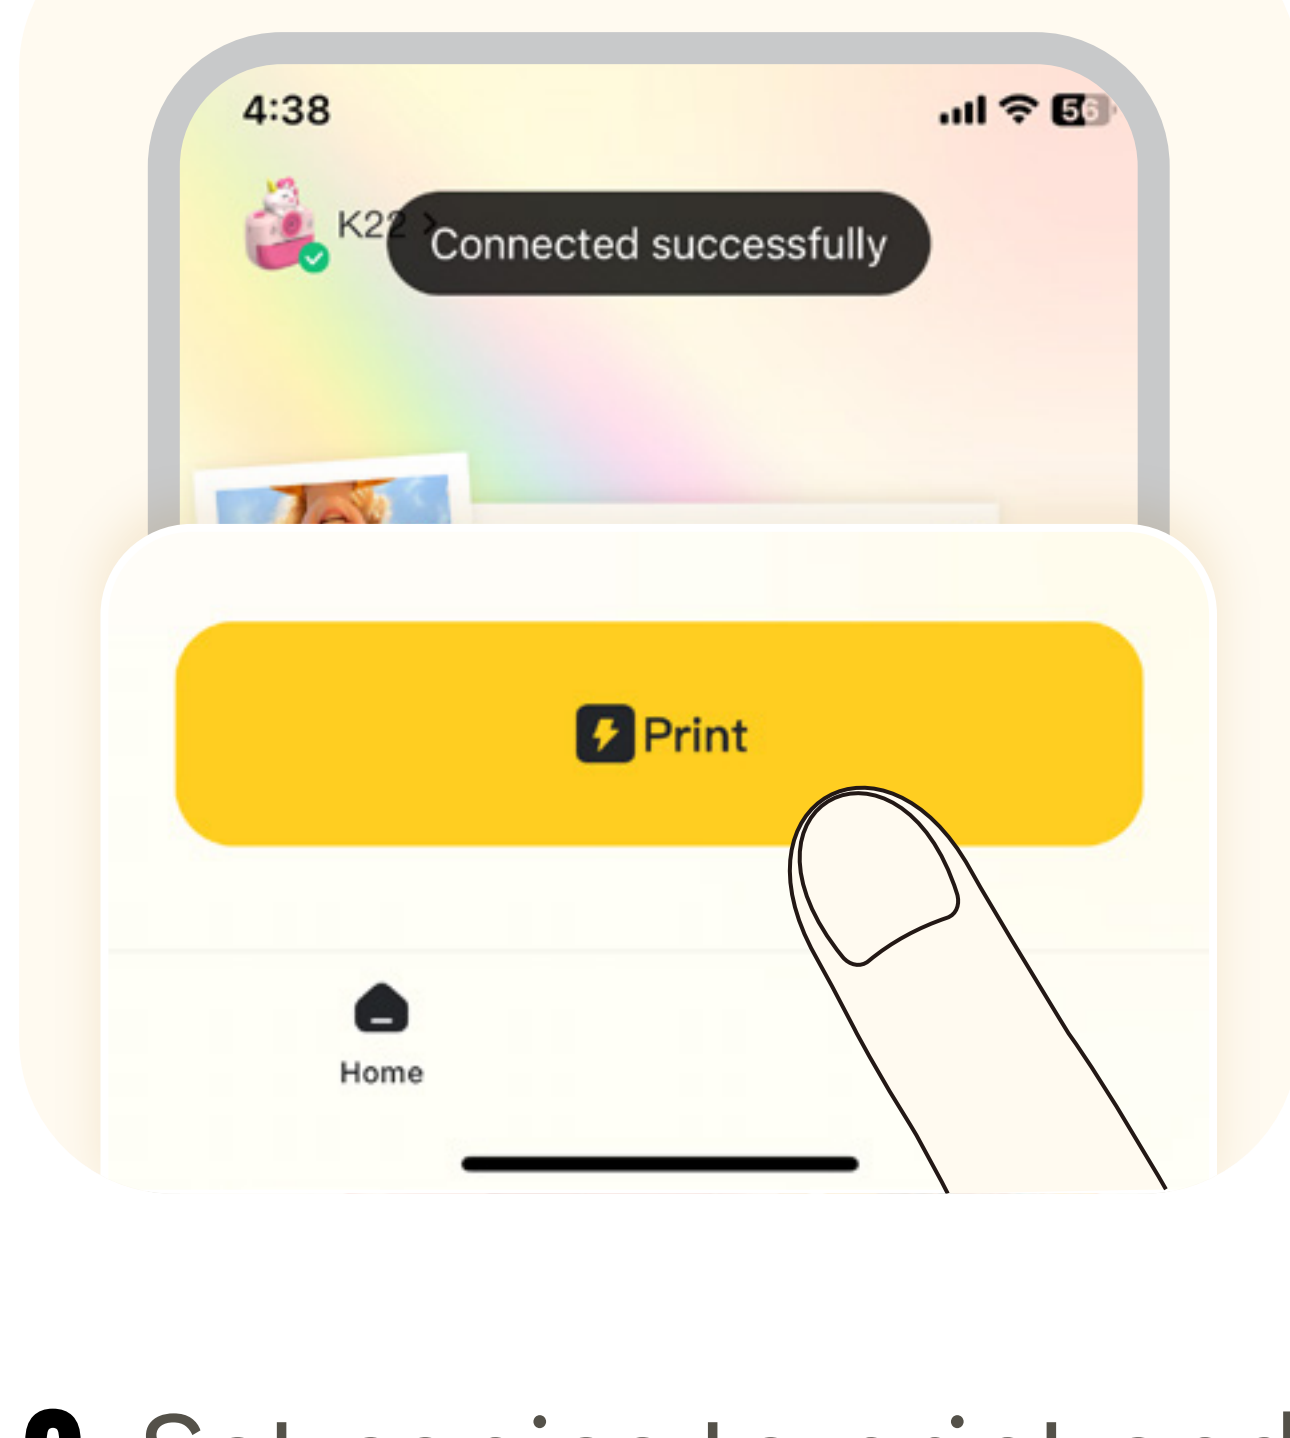 


7 Choose Picture or Take Picture

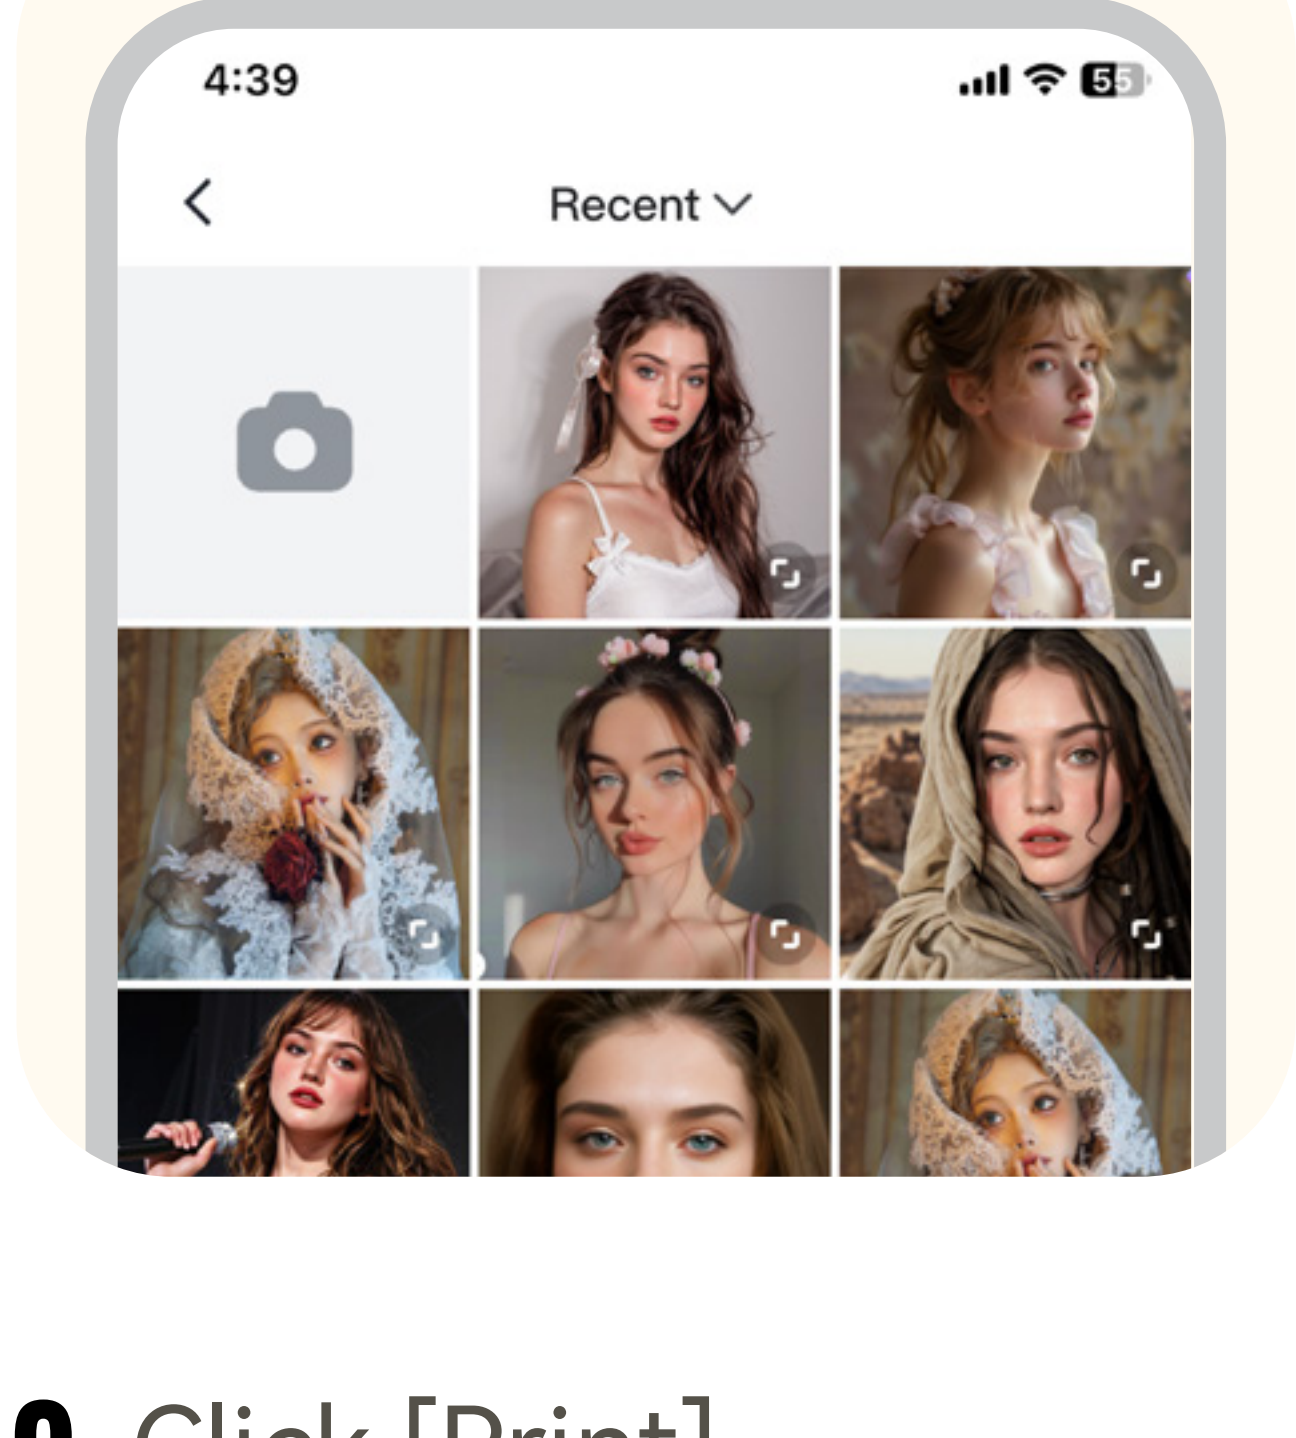 


8 Set copies to print and print density

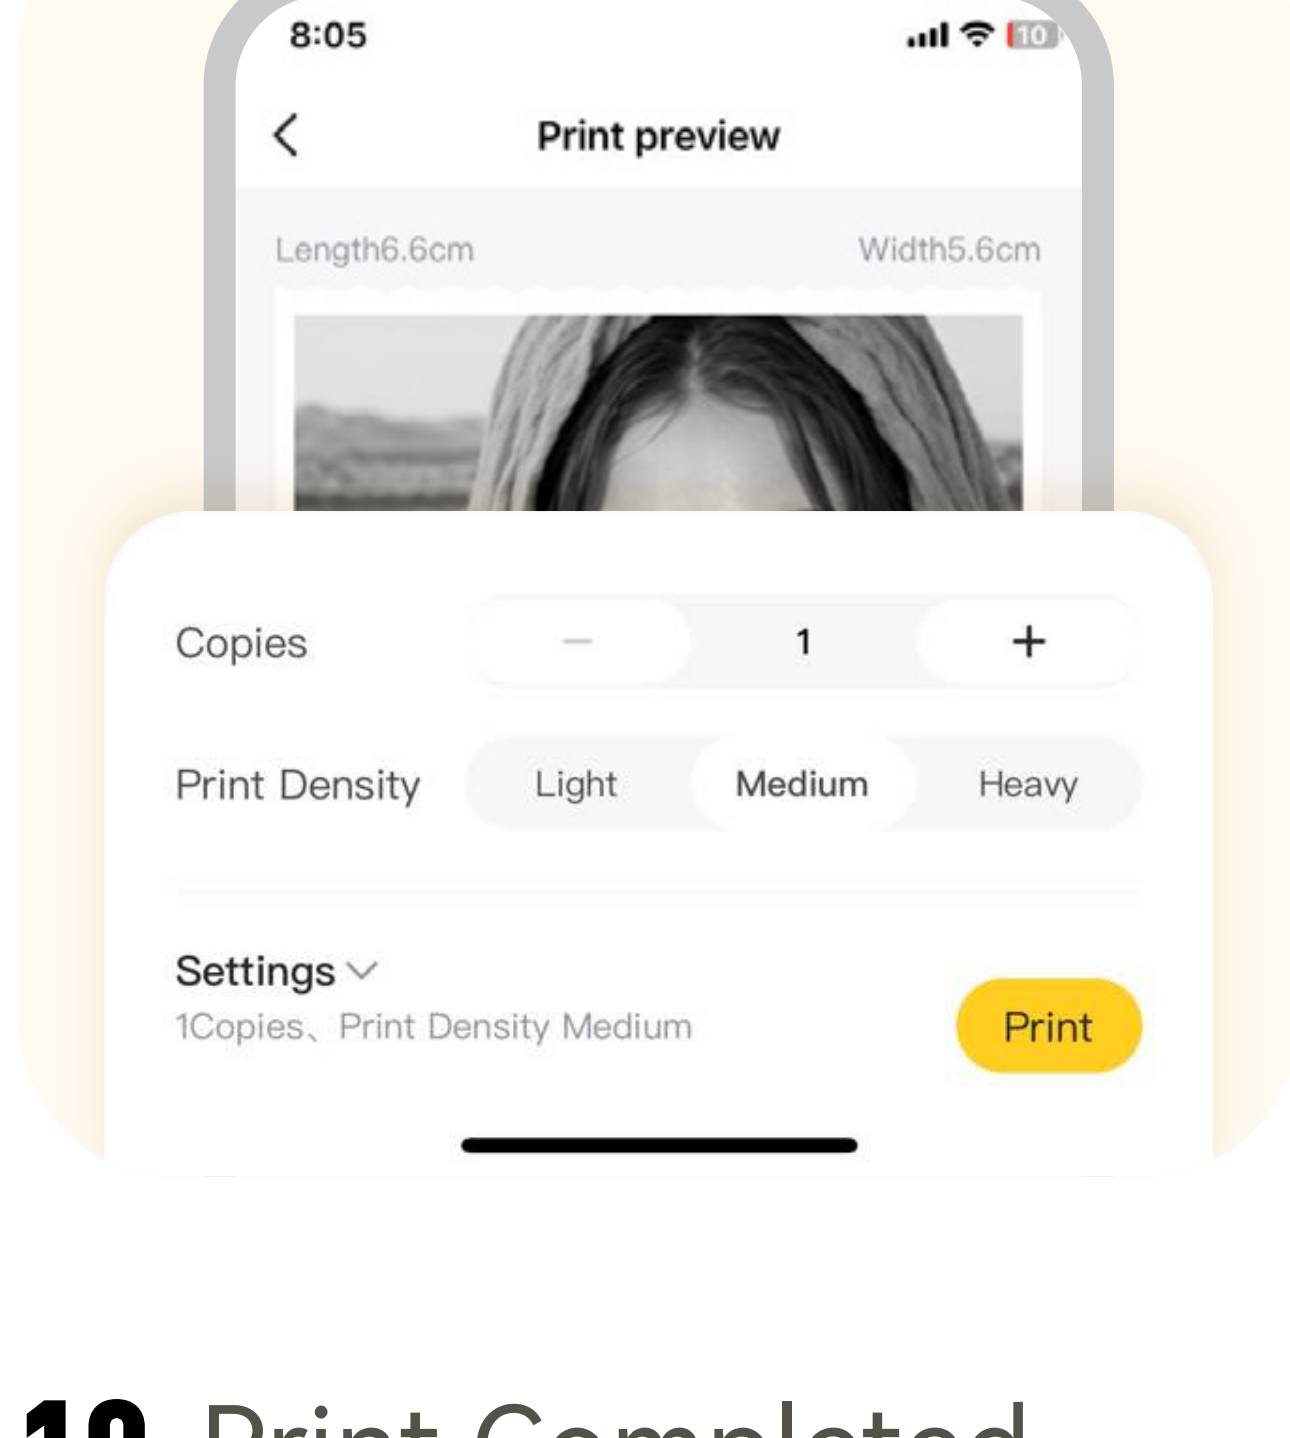 

9 Click [Print]

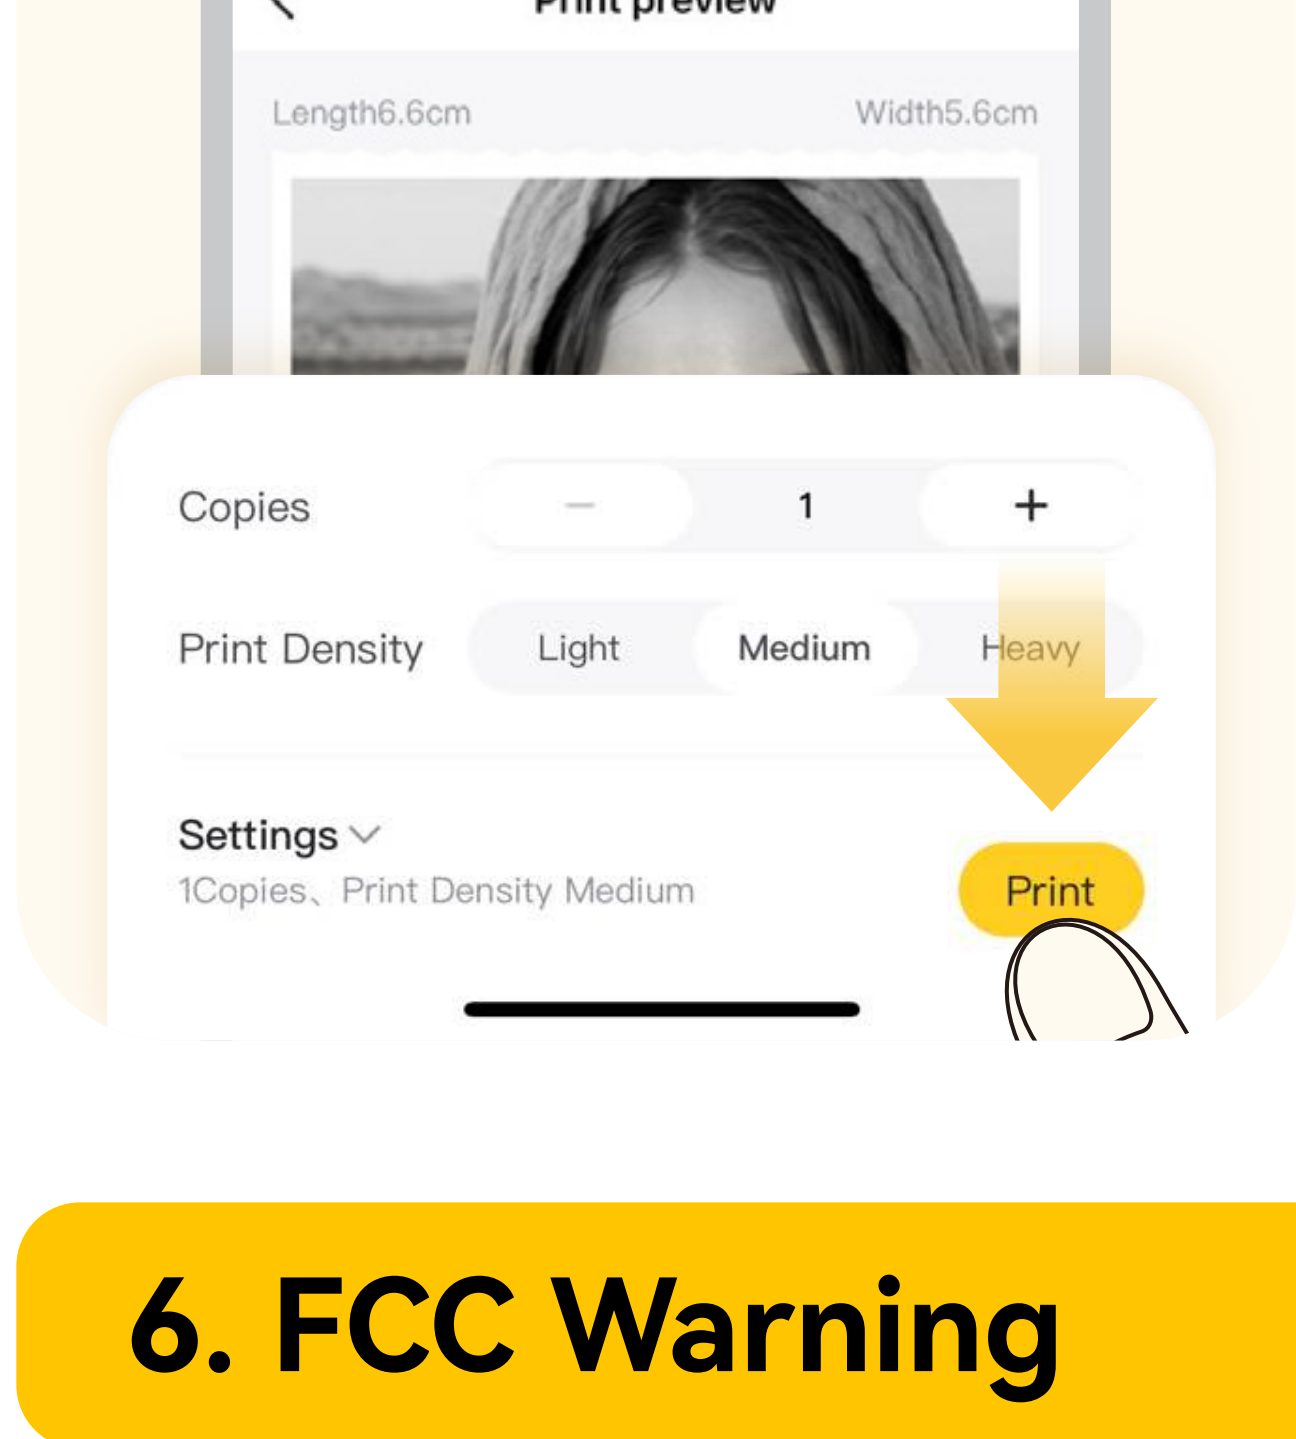 

10 Print Completed

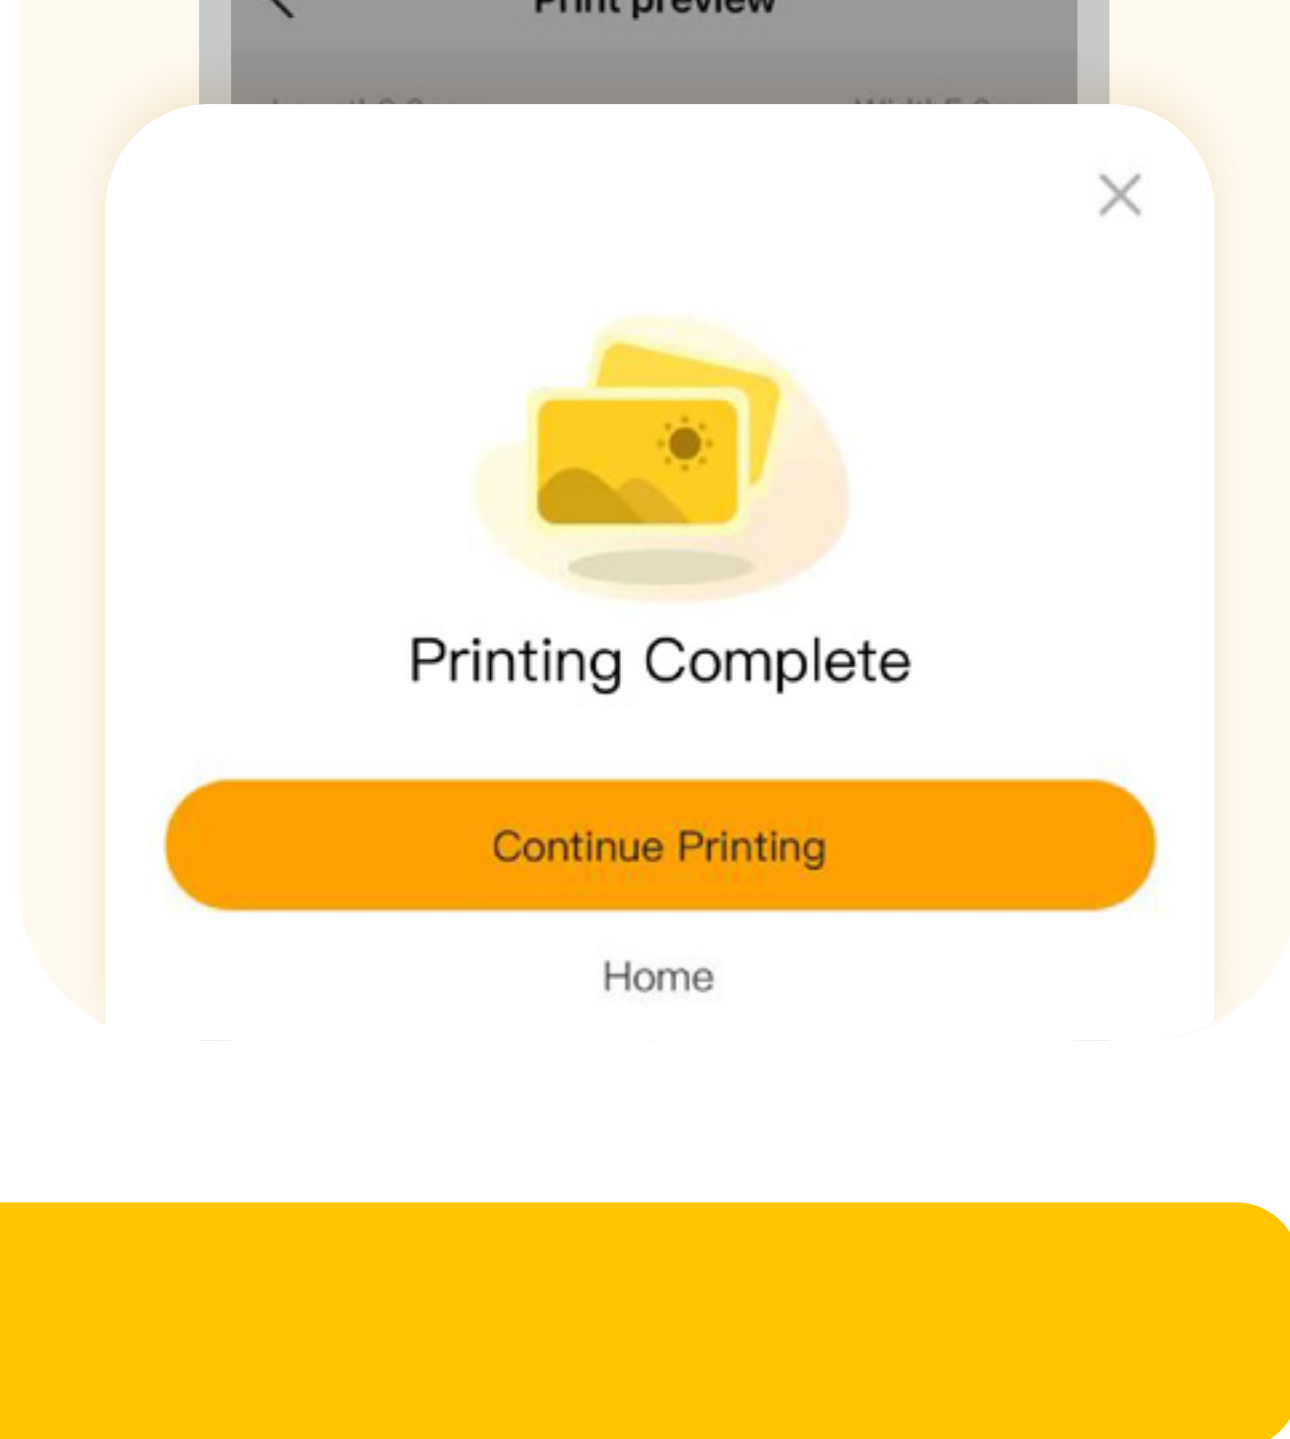 

6. FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

7. IC Warning

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.