

Digital Photo Professional

Ver. 4.11

Instruction Manual

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences


● Content of this Instruction Manual

- DPP stands for Digital Photo Professional.
- In this manual, the screens used in the basic operation instructions are from Windows 8.1/10.
- ▶ indicates the selection procedure of the menu.
- Square brackets are used to indicate items such as menu names, button names and window names that appear on the computer screen.
- Text inside < > indicates a key on the keyboard.
- p.** indicates a reference page.
Click to move to the relevant page.
- **Advanced** indicates the function for advanced users who are experienced in handling image processing software.
- **?** : Marks helpful information when a problem arises.

- : Marks tips for using the software skillfully.
- : Marks information that should be read before use.
- : Marks additional information you may find helpful.

● Switching Between Pages

- Click on arrows on the bottom right of the screen.
 - : next page
 - : previous page
 - : return to a page you had previously displayed
- Click on the chapter headings on the right side of the screen to switch to the contents page of that chapter. Also, click the item you want to read about on the table of contents to move to the relevant page.

READ CAREFULLY BEFORE USING!

CANON SOFTWARE LICENSE AGREEMENT

IMPORTANT - READ THIS AGREEMENT BEFORE USING THE SOFTWARE ON THE CD-ROM IN THIS BOX. BY USING THE SOFTWARE, YOU AGREE TO BE BOUND BY THE TERMS OF THIS AGREEMENT.

This is a license agreement (the [Agreement]) between you and Canon Inc. ([Canon]).

IF YOU DO NOT AGREE TO THE TERMS AND CONDITIONS OF THIS AGREEMENT, DO NOT USE THE SOFTWARE PROGRAM ON THE CD-ROM AND THE USER MANUAL IN THIS BOX (COLLECTIVELY, THE [SOFTWARE]) AND RETURN THE SOFTWARE WITHIN 30 DAYS FROM THE DATE OF PURCHASE TO YOUR POINT OF PURCHASE FOR A REFUND.

In consideration of the right to use the SOFTWARE, you agree to abide by the terms and conditions of this Agreement.

1. **LICENSE:** Canon grants you the non-exclusive right to use the SOFTWARE only on a single computer. You may physically transfer the SOFTWARE from one computer to another provided that the SOFTWARE is used on only one computer at a time. You shall not install or use the SOFTWARE on a network, multiple CPU, multiple site arrangement, or any other hardware configuration where the SOFTWARE is accessible to more than one CPU or to more than one user.

YOU SHALL NOT ASSIGN, SUBLICENSE, RENT, LEASE, LOAN, CONVEY OR OTHERWISE USE, TRANSFER, COPY, TRANSLATE, CONVERT TO ANOTHER PROGRAMMING LANGUAGE, ALTER, MODIFY, DECOMPILE OR DISASSEMBLE THE SOFTWARE, IN WHOLE OR IN PART, EXCEPT AS EXPRESSLY PROVIDED IN THIS AGREEMENT.

2. **BACK-UP COPY:** You may make one copy of the SOFTWARE solely for back-up purposes, or copy the SOFTWARE onto the permanent storage device (e.g. a hard disk) of your computer and retain the original for back-up purposes. Any other copying of the SOFTWARE is a violation of this Agreement. You must reproduce and include the copyright notice on the back-up copy.

3. **SUPPORT AND UPDATES:** Canon is not responsible for providing maintenance or support for use of the SOFTWARE. No updates, fixes or support will be made available for the SOFTWARE.

4. **LIMITED WARRANTY AND LIMITATION OF LIABILITY:** It is your responsibility to choose, maintain and match the hardware and software components of your computer system. Thus Canon does not guarantee uninterrupted service or correction of errors or that the functions or performance of the SOFTWARE will meet your requirements. THE SOFTWARE IS LICENSED ON AN [AS IS] BASIS AND WITHOUT WARRANTY OF ANY KIND. The CD-ROM storing the SOFTWARE is warranted only against defective material under normal use for a period of ninety (90) days after purchase from an authorized Canon dealer as evidenced by your sales receipt. Your sole remedy for a defective CD-ROM shall be replacement of the same without charge when returned by you at your expense to your point of purchase and proven to be defective upon inspection. The replacement CD-ROM will be warranted for the remainder of the original ninety (90) day warranty period of the defective CD-ROM. The limited warranty does not apply if the failure of the CD-ROM resulted from accident, abuse or misapplication of the SOFTWARE and shall not extend to anyone other than the original user of the SOFTWARE.

EXCEPT AS SPECIFICALLY SET FORTH IN THIS PARAGRAPH 4, CANON, CANON'S SUBSIDIARIES, DISTRIBUTORS AND DEALERS DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WITH RESPECT TO THE SOFTWARE.

NEITHER CANON NOR ANY OF CANON'S SUBSIDIARIES, DISTRIBUTORS OR DEALERS IS LIABLE FOR ANY DAMAGES HOWSOEVER CAUSED, INCLUDING WITHOUT LIMITATION, DIRECT, CONSEQUENTIAL OR INCIDENTAL LOSS OR DAMAGE INCLUDING LOSS OF PROFITS, EXPENSE OR INCONVENIENCE HOWSOEVER CAUSED OR ARISING OUT OF THE SOFTWARE OR THE USE THEREOF.

NEITHER CANON, NOR ANY OF CANON'S SUBSIDIARIES, DISTRIBUTORS OR DEALERS SHALL HAVE ANY OBLIGATION TO INDEMNIFY YOU AGAINST ANY CLAIM OR SUIT BROUGHT BY A THIRD PARTY ALLEGING THAT THE SOFTWARE OR THE USE THEREOF INFRINGES ANY INTELLECTUAL PROPERTY OF SUCH THIRD PARTY.

5. **TERM:** This Agreement is effective upon your using the SOFTWARE and remains in effect until expiration of all copyright interests in the SOFTWARE unless earlier terminated. You may terminate this Agreement by destroying the SOFTWARE. This Agreement will also terminate without notice to you if you fail to comply with any of the terms of this Agreement and you must then promptly return the SOFTWARE. In addition, Canon may enforce its other legal rights.

6. **U.S. GOVERNMENT RESTRICTED RIGHTS NOTICE:** The SOFTWARE is provided with restricted rights. Use, duplication or disclosure is subject to restrictions as set forth in either subparagraph (c) (1) (ii) of the Rights in Technical Data and Computer software clause at DFARs 252.227-7013 or subparagraph (c) (1) and (2) of the Commercial Computer Software Restricted Rights Clause at FAR 52.227-19, as applicable.

7. **SEVERABILITY:** In the event that any provision of this Agreement is declared or found to be illegal by any court or tribunal of competent jurisdiction, such provision shall be null and void with respect to the jurisdiction of that court or tribunal and all the remaining provisions of this Agreement shall remain in full force and effect.

8. **CONTROLLING LAW:** The terms of this Agreement as it relates to purchases of the Software in the United States of America shall be governed and construed in all respects in accordance with the laws and regulations of the State of New York, without reference to choice of law principles. The terms of this Agreement as it relates to purchases of the Software in Canada shall be governed by the laws of the province of Ontario.

9. **OWNERSHIP:** All rights, including but not limited to copyrights and trade secret rights, to the SOFTWARE belong to Canon, its affiliated corporations and third party licensors. Your use of the SOFTWARE is subject to the United States, Canada and other applicable copyright and trademark laws and nothing in this Agreement constitutes a waiver of the rights of Canon, its affiliated corporations and third party licensors under such laws. Nothing contained in Paragraph 1 shall be construed to give Canon any ownership rights in any images, graphics or textual material that you save in connection with the Software.

10. **ACKNOWLEDGEMENT:** BY USING THE SOFTWARE, YOU ACKNOWLEDGE THAT YOU HAVE READ THIS AGREEMENT, UNDERSTOOD IT, AND AGREE TO BE BOUND BY ITS TERMS AND CONDITIONS. YOU ALSO AGREE THAT THIS AGREEMENT IS THE COMPLETE AND EXCLUSIVE STATEMENT OF AGREEMENT BETWEEN YOU AND CANON CONCERNING THE SUBJECT MATTER HEREOF AND SUPERSEDES ALL PROPOSALS OR PRIOR AGREEMENTS, VERBAL OR WRITTEN, AND ANY OTHER COMMUNICATIONS BETWEEN THE PARTIES RELATING TO THE SUBJECT MATTER HEREOF. NO AMENDMENT TO THIS AGREEMENT SHALL BE EFFECTIVE UNLESS SIGNED BY A DULY AUTHORIZED OFFICER OF CANON.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Main Features of DPP

Following are the main tasks you can perform with images you have downloaded to your computer.

* **JPEG/TIFF** indicates processing that can be performed with JPEG or TIFF images as well as RAW images.

- **View and organize images** **JPEG/TIFF**
- **Play back movies and save still photos**
- **Adjust an image**
 - Various image adjustments while maintaining the original image **JPEG/TIFF**
 - Freely apply a Picture Style
 - View your image before and after adjustment in the same window **JPEG/TIFF**
- **Trim and adjust the angle of an image (trimming)** **JPEG/TIFF**
- **Resize an image** **JPEG/TIFF**
- **Correction of lens aberration**
- **Digital Lens Optimizer**
- **Automatic/manual dust erasure processing** **JPEG/TIFF**
- **Convert from a RAW image to a JPEG or TIFF image and save**
 - Process large numbers of RAW images in batches
 - Transfer the image to image editing software
- **Print an image** **JPEG/TIFF**
- **Link with EOS Utility for remote shooting** **JPEG/TIFF**

- **Color management compatibility**

- CMYK simulation for commercial printing



In DPP Ver. 4.8.20 or later, clicking [Check for updates] in the [Help] menu allows you to check for update files on the server and download any update files that are available. To use this function, an environment with Internet access (subscription to a provider and an in-place line connection) is required. Internet Service Provider (ISP) connection fees or access point connection fees may apply.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences





System Requirements

OS (operating system)	Windows 10 (Version 1607 or later)*, Windows 8.1*, Windows 7*
Model	PC with one of the above OS preinstalled (Upgraded machines not supported)
CPU	Core 2 Duo 2.0 GHz or higher (recommended Core i series or later)
RAM (memory)	2.0 GB or more of RAM (4.0 GB or more recommended)
Hard disk drive	Installation: Min. 300 MB of available space Operation: Min. 600 MB of available space
Display	Resolution: XGA (1024 x 720) or more (1600 x 1200 or more recommended) Colors: 16-bit color (65536 colors) or more

- May also be installed on a 32-bit version PC, but with restrictions on operation. On 32-bit OSs, (32bit) is displayed on the [About Digital Photo Professional 4] in [Help]. For information on restrictions, see descriptions indicated with **32bit** in this manual.
- In DPP, to play back MOV or MP4 movies shot using a supported camera, and to save still photos from movies, a 64-bit version of Windows 8.1 or later is required.

* With Microsoft .NET Framework 4.7.1 or later installed



- For information on system requirements for HDR PQ mode (including supported images), see “System Requirements for HDR PQ Mode” (p.149).
- For images supported by depth compositing, see “Using Depth Compositing” ▶ “Supported Images” (p.115).

Supported Cameras

EOS-1D X Mark II, EOS-1D X, EOS-1D C, EOS-1D Mark IV, EOS-1Ds Mark III, EOS-1D Mark III, EOS-1D Mark II N, EOS-1Ds Mark II, EOS-1D Mark II, EOS-1D, EOS-1Ds, EOS 5DS/EOS 5DS R, EOS 5D Mark IV, EOS 5D Mark III, EOS 5D Mark II, EOS 5D, EOS 6D Mark II, EOS 6D, EOS 7D Mark II, EOS 7D, EOS 90D, EOS 80D, EOS 70D, EOS 60D/EOS 60Da, EOS 50D, EOS 40D, EOS 30D, EOS 20D/EOS 20Da, EOS 10D, EOS D2000, EOS D6000, EOS D30, EOS D60, EOS 77D, EOS REBEL T6S/760D, EOS REBEL T7i/800D, EOS REBEL T6i/750D, EOS REBEL T5i/700D, EOS REBEL SL3/250D/200D II, EOS REBEL SL2/200D, EOS REBEL SL1/100D, EOS REBEL T7/2000D/1500D, EOS REBEL T6/1300D, EOS REBEL T5/1200D, EOS REBEL T4i/650D, EOS REBEL T3i/600D, EOS REBEL T2i/550D, EOS REBEL T1i/500D, EOS DIGITAL REBEL XSi/450D, EOS DIGITAL REBEL XS/1000D, EOS REBEL T3/1100D, EOS DIGITAL REBEL XT/400D DIGITAL, EOS DIGITAL REBEL XT/350D DIGITAL, EOS REBEL T100/4000D/3000D, EOS DIGITAL REBEL/300D, EOS R, EOS Ra, EOS RP, EOS M6 Mark II, EOS M6, EOS M5, EOS M3, EOS M2, EOS M, EOS M10, EOS M200, EOS M100, EOS M50, PowerShot G3 X*, PowerShot G1 X Mark II*, PowerShot G7 X*, PowerShot G9 X*, PowerShot SX60 HS*, PowerShot G5 X*, PowerShot G7 X Mark II*, PowerShot G16*, PowerShot S120*, PowerShot G1 X*, PowerShot G15*, PowerShot S110*, PowerShot S100*, PowerShot G9 X Mark II*, PowerShot G1 X Mark III*, PowerShot G9*, PowerShot G10*, PowerShot G11*, PowerShot G12*, PowerShot S90*, PowerShot S95*, PowerShot SX1 IS*, PowerShot SX50 HS*, PowerShot SX70 HS*, PowerShot G5 X Mark II*, and PowerShot G7 X Mark III*

*1 For RAW images, functions that are not in the camera (such as the Auto Lighting Optimizer) and functions such as the Digital Lens Optimizer cannot be used. However, Picture Styles, even if not in the camera, can be used with the exception of some functionality.

*2 The following functions are unavailable.

- Basic Adjustment tool palette:
 - White balance [Fine-tune]
 - A portion of [Gamma adjustment]
 - Automatic gradation and luminance adjustment
 - Midpoint adjustment
 - Input white points range expansion
- Dust Delete/Copy Stamp tool palette
- Compositing tool
- HDR tool

Supported Images

Image data

Image type			Extension
Still photos	RAW images	Images in the Canon RAW format shot on supported cameras*	.CR3 .CR2 .TIF .CRW
	JPEG images	Exif 2.2, 2.21 or 2.3-compatible JPEG images	.JPG/.JPEG
	TIFF images	Exif-compatible TIFF images	.TIF/.TIFF
Movies		Movies shot with supported cameras	.MOV .MP4

* Compatible with RAW images shot with EOS D6000 or EOS D2000 that have been converted to RAW images using the CR2 Converter and have the “.CR2” extension.



Contents

Introduction	2
Main Features of DPP	2
System Requirements	3
Supported Cameras.....	3
Supported Images	4
1 Downloading Images	9
Starting up DPP	10
Downloading Images to Your Computer.....	11
Downloading Images Using the Software	
“EOS Utility”	11
Downloading Images Using Your Card Reader.....	11
2 Viewing Images	12
Viewing Images in the Main Window (Thumbnail	
Layout).....	13
Changing the Thumbnail Display	14
Enlarging and Viewing an Image in the Preview	
Window	18
Enlarging and Viewing a Specific Area	19
Advanced Checking the Image in Detail	20
Displaying the Main Window (Multi-layout).....	20
Checking an Image Using the Preview Control	
Panel.....	21
Checking an Image in Multi-Function Preview.....	25
Checking an Image in Second Windows	26
Opening and Closing Window Panels (Panels).....	27
Changing the Display Method and Order of	
Palettes.....	28
Changing the Display Method (Dock/Float)	
of Palettes.....	28
Rearranging Palettes	28
Exiting DPP.....	29

3 Organizing and Sorting Images	30
Efficiently Checking/Sorting Images	31
Sorting Images	33
Sorting Images in the Main Window	34
Arranging Images in the Main Window	36
Displaying a RAW Image and JPEG Image as a	
Single Image.....	37
Checking Image Information.....	38
Organizing Images	39
Deleting an Unwanted Image	39
Moving Images	39
Moving Images in Folders	40
Registering Frequent-Use Folders (Bookmark	
Registration)	40
4 Editing Images	41
RAW Images	44
RAW Images	44
RAW Development.....	44
When RAW Development is to be Done	44
Advantages of a RAW Image	44
Editing JPEG and TIFF Images.....	45
Tool Palettes.....	46
JPEG/TIFF Editing with the Basic Adjustment Tool	
Palette	48
Adjusting Brightness.....	48
Changing the Picture Style	49
Advanced Using a Picture Style File	51
Adjusting Color Tone by Changing White	
Balance.....	51
Adjusting Color Tone Using Click White	
Balance.....	52
Advanced Adjusting White Balance with Color	
Temperature	53

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Advanced Tuning White Balance	53
Adjusting Contrast	54
Advanced Adjusting Brightness of Shadows/ Highlights	54
Changing Color Tone and Color Saturation.....	55
Advanced Adjusting Dynamic Range	56
Adjusting Gradation and Luminance Automatically	57
Using the Auto Lighting Optimizer	58
Adjusting Image Sharpness.....	59
JPEG/TIFF Editing with the Tone Adjustment Tool Palette.....	61
Adjusting Brightness and Contrast	61
Adjusting Color Tone Using Click White Balance.....	62
Advanced Adjusting Tone Curve.....	63
Advanced Adjusting Dynamic Range	65
Using the Auto Lighting Optimizer	65
JPEG/TIFF Editing with the Color Adjustment Tool Palette.....	66
Advanced Editing with the Color Adjustment Tool Palette.....	66
JPEG/TIFF Editing with the Detailed Adjustment Tool Palette.....	68
Reducing Noise	68
Adjusting Image Sharpness.....	69
Reducing Color Moiré in an Image	69
JPEG/TIFF Editing with the Trimming/Angle Adjustment Tool Palette.....	70
Editing with the Lens Correction Tool Palette.....	73
Correcting Lens Aberration.....	73
Making Corrections.....	74
Shooting Distance Information Slider	76

Correcting Multiple Images at a Time	77
Digital Lens Optimizer	77
Using the Digital Lens Optimizer	78
Adjusting Image Sharpness.....	80
JPEG/TIFF Advanced Editing with the Partial Adjustment Tool Palette	81
Making Partial Adjustments to Images ([Brightness], [Contrast], [Hue], [Saturation]).....	81
Making Partial Adjustments to Images ([Reduce color moiré])	83
Adjustment Groups.....	84
JPEG/TIFF Editing with the Dust Delete/Copy Stamp Tool Palette	85
Performing Automatic Dust Erasure Processing	85
Automatic Dust Erasure Processing in the Main Window.....	86
Manually Erasing Dust (Repair Function).....	87
Erasing Unwanted Parts of an Image (Copy Stamp Function).....	89
Setting Work Color Space	90
Using the Soft-Proof Colors Function	91
Specifying the Size when Opening RAW Images.....	92
JPEG/TIFF Saving Editing Results.....	93
Saving Editing Contents to an Image	93
Saving as a separate image	93
JPEG/TIFF Re-Editing an Image.....	95
JPEG/TIFF Utilizing Adjustment Contents (Recipe)	96
Copying a Recipe and Applying to Another Image.....	97
Saving a Recipe as a File.....	97
Loading and Applying Recipes	98
JPEG/TIFF Adjusting by Comparing Multiple Images.....	99

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



JPEG/TIFF Editing Efficiently	100
Editing in the Edit Image Window	100
Changing the Thumbnail Display Position to Horizontal.....	101
Gathering and Editing Images in the Collection Window	102
JPEG/TIFF Compositing Images	104
Compositing Methods	107
JPEG/TIFF Creating HDR (High Dynamic Range) Images	108
Advanced Using the Dual Pixel RAW Optimizer	111
Microadjustment of the Position of Maximum Sharpness and Resolution Using the Depth Information Contained within the Dual Pixel RAW File	111
Reposition the Viewpoint or Foreground Bokeh for a More Pleasing Result.....	112
Reduces the Appearance of Ghosting in Images	113
JPEG/TIFF Advanced Using Depth Compositing.....	115
Supported Images	115
Using the Depth Compositing Tool	115
Using the Depth Compositing Editing Tool	117
Advanced Using the RAW Burst Image Tool	120
Starting Up the RAW Burst Image Tool	120
Changing the Representative Image in a Roll	122
Saving One Image in a Roll	122
Extracting and Saving Any Range in a Roll	123
Advanced Transferring a RAW Image to Photoshop.....	124
Advanced Customizing the Main Window Toolbar.....	125

5 Printing Images	126
Printing an Image	127
Printing with Shooting Information.....	128
Printing a Thumbnail List (Contact Sheet Printing)...	129
Plug-in printing.....	130
6 Processing Large Numbers of RAW Images	131
Batch Apply White Balance to Images (Personal White Balance)	132
Registering Personal White Balance	132
Applying Personal White Balance	133
Batch Save as JPEG or TIFF Images (Batch Processing).....	134
Batch Transfer Images to Image Editing Software	136
Batch Change the File Name of Images.....	137
Changing the File Name of Images in the Order in the Main Window	137
7 Remote Shooting	138
Remote Shooting.....	139
Registering Click White Balance in the Camera ...	142
8 Playing Back Movies and Saving Still Photos....	144
Playing Back Movies and Saving Still Photos	145
9 Using HDR PQ Mode.....	148
HDR PQ Mode.....	149
System Requirements for HDR PQ Mode	149
Displaying Images in HDR PQ Mode	150
Cautions when Using HDR PQ Mode.....	152
Saving Images Displayed in HDR PQ Mode in JPEG/ TIFF Format.....	154
Saving Images Displayed in HDR PQ Mode in HEIF Format	155

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



10 Specifying Preferences	156
Specifying Preferences.....	157
General Settings	157
Image processing	158
Color Management	160
View Settings	161
Properties Display Settings.....	162
Survey.....	162
Reference.....	163
Troubleshooting	164
Deleting the Software (Uninstalling)	165
Image Frame Information in the Main Window and	
Edit Image Window	166
Glossary.....	167
Index	169
About This Instruction Manual	173
Trademarks.....	173

* Sections with **JPEG/TIFF** and **JPEG/TIFF** in “4 Editing Images” support not only RAW image editing but also JPEG/TIFF image editing.

JPEG/TIFF : All the functions explained in the section support JPEG/TIFF image editing.

JPEG/TIFF : Certain functions explained in the section support JPEG/TIFF image editing.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



1 Downloading Images



Starting up DPP	10
Downloading Images to Your Computer	11
Downloading Images Using the Software “EOS Utility”	11
Downloading Images Using Your Card Reader	11

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos


HDR PQ
Mode

Specifying
Preferences



Starting up DPP

Double-click the desktop icon.

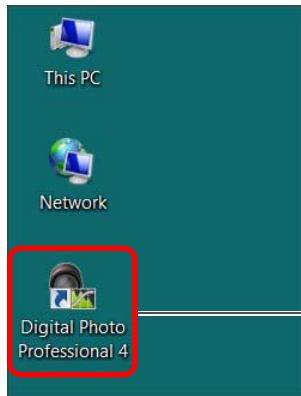


Double-click

→ DPP starts up and the main window (thumbnail layout) appears.



Main window (thumbnail layout)

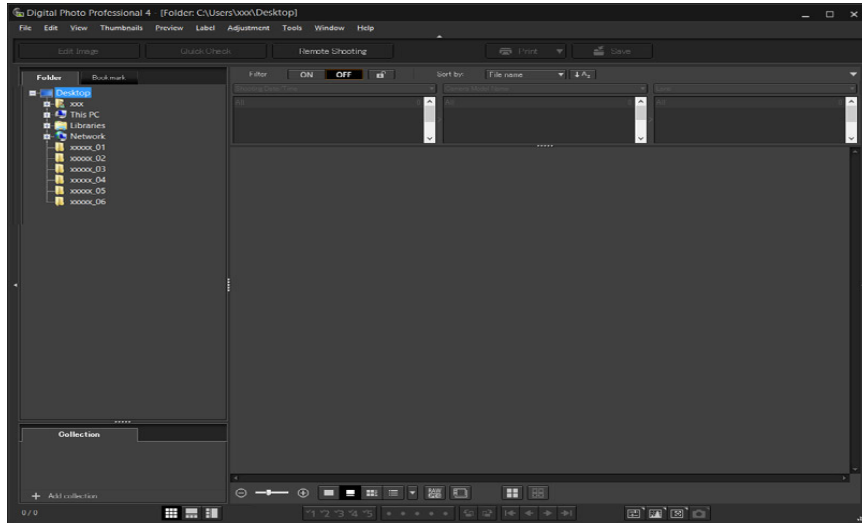

If you drop a DPP-supported image file onto the icon on the desktop, you can start up DPP and display the folder where the image file is saved.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Downloading Images to Your Computer

Download the images saved on the memory card inserted in the camera.

Downloading Images Using the Software “EOS Utility”


You can download images with “EOS Utility”, communication software for the camera.

For detailed instructions on downloading images, refer to the “EOS Utility Instruction Manual” (PDF electronic manual).

Downloading Images Using Your Card Reader

You can also download images to the computer using a third-party card reader.

- 1 **Load the memory card into the card reader.**
 - Start up DPP beforehand.
- 2 **Open [My Computer] ▶ [EOS_DIGITAL] and drag the [DCIM] folder to the [Desktop].**

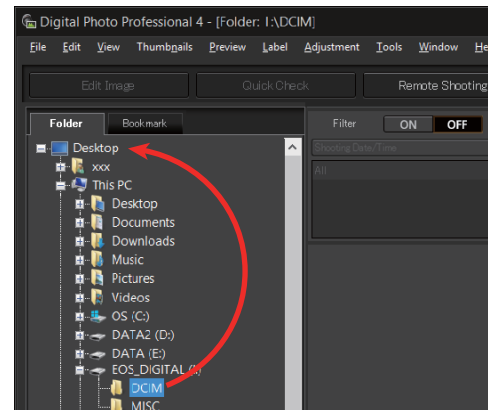

- The [DCIM] folder is copied to your computer.
- All images are saved in folder units inside the [DCIM] folder.
- Copying images to your computer will take some time when there is a large number of images saved on the memory card.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



2 Viewing Images



Viewing Images in the Main Window (Thumbnail Layout)	13
Changing the Thumbnail Display.....	14
Advanced Using the Thumbnails Control Panel	15
Advanced Using the Thumbnail Display Filter/Sort Function.....	16
Advanced Displaying the Histogram Palette	17
Enlarging and Viewing an Image in the Preview Window	18
Enlarging and Viewing a Specific Area.....	19
Advanced Displaying the Navigator Palette	19
Advanced Checking the Image in Detail	20
Displaying the Main Window (Multi-layout).....	20
Checking an Image Using the Preview Control Panel.....	21
Changing the Magnification	21
Comparing with a Pinned (Fixed) Image	21
Displaying Multiple Images at the Same Time	22
Displaying Grid Lines.....	22
Displaying AF Points	22
Displaying Areas Beyond the Set Range with Warning Indicators (Highlight/Shadow Warning)	23
Comparing Pre- and Post-Editing Images (Single-Image Display).....	23
Comparing Pre- and Post-Editing Images (before/after comparison) Arrange vertically/horizontally (two-screen display) / Split vertically/horizontally (split-image display)	24
Displaying Image Properties.....	24
Checking an Image in Multi-Function Preview	25
Checking an Image in Second Windows	26
Opening and Closing Window Panels (Panels).....	27
Changing the Display Method and Order of Palettes	28
Changing the Display Method (Dock/Float) of Palettes.....	28
Rearranging Palettes.....	28
Exiting DPP	29

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Viewing Images in the Main Window (Thumbnail Layout)

Images downloaded to your computer are displayed as a thumbnails list in the main window (thumbnail layout). You can double-click an image to open the preview window (p.18) and display the image at large size.

Main window

Toolbar

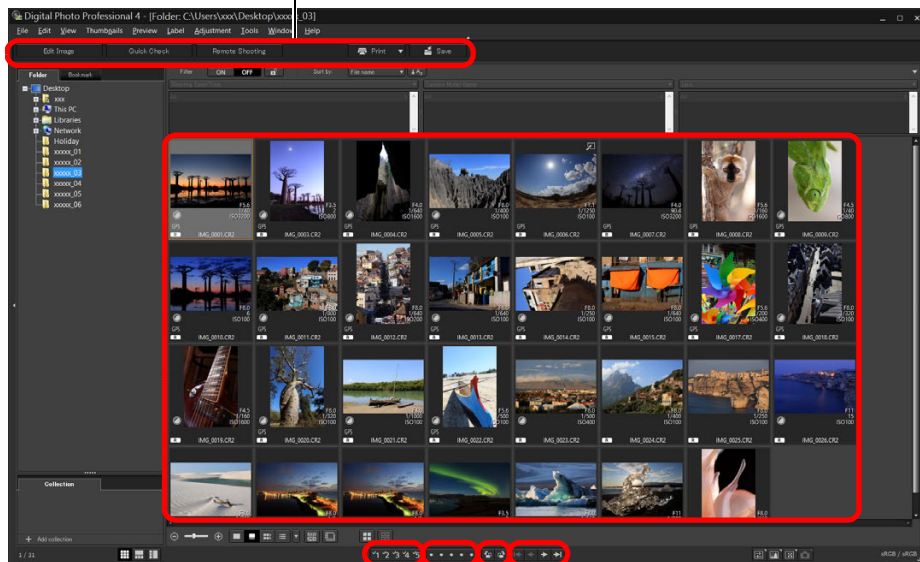

Check marks (p.33, p.34)

Ratings (p.33, p.34)

Forward/Reverse

Rotate image

- For information on icons displayed on the frame of a thumbnail, see “Image Frame Information in the Main Window and Edit Image Window” (p.166).



32bit On 32-bit OSs, up to only 1000 images can be displayed per folder. Starting with the 1001st image, images are handled in the same way as non-supported images. Try to maintain 1000 images or less per folder.



- For information on movie files, see “Playing Back Movies and Saving Still Photos” (p.145).
- When aspect ratio information is attached to an image shot with any supported camera other than the EOS 5D Mark II, the image is displayed as a cropped image (p.70).
- In the main window, in addition to this view (thumbnail layout), you can select multi-layout. Multi-layout allows you to check the image in detail (p.20).

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



Changing the Thumbnail Display

You can change the size of the thumbnail images displayed in the main window and select the information displayed for thumbnails.

Select the [Thumbnails] menu ► desired item.

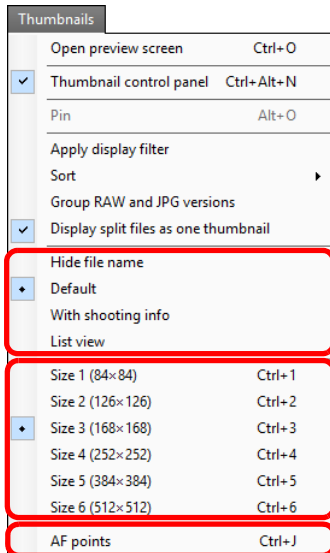

→ The display changes to the selected item.




Advanced

Using the Thumbnails Control Panel

The thumbnails control panel integrates various settings for viewing thumbnails.

By using this panel, you can view and specify the settings for thumbnails efficiently.

Thumbnails control panel functions

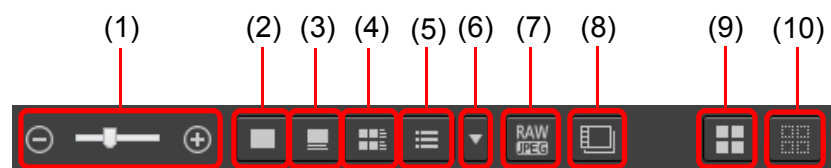

(1) Change the size of thumbnails

(2) Display thumbnails without file names

(3) Display standard thumbnails

(4) Display thumbnails with information

(5) Display thumbnails in list

(6) Specify properties display settings ([p.162](#))

(7) Display a RAW image and JPEG image as a single image
Display a RAW image and JPEG image that were shot together as a single image. When this setting is specified, viewing and editing of images are as follows.

- Image displayed: Only the RAW image is displayed in all windows.
- Edited image: The content which has been edited with any of DPP's functions (the tool palette etc.) will be applied to the RAW image only. However, if you have used the following functions, the adjustments will be applied to both the RAW image and the JPEG image.

Deleting an image ([p.39](#))

Moving or copying an image ([p.39](#))

Checkmarking ([p.33 to p.34](#))

Rating ([p.33 to p.34](#))

Rotating an image ([p.13](#))

(8) Display or play back split movie files as single movies

When you play back split movie files in DPP, this setting plays back all the movie files in a continuous sequence from the beginning.

- This is set to ON by default.
- Only the thumbnail for the first movie file is displayed.
- This setting will be kept and applied the next time DPP is started up.
- When the following functions are used, they apply to all the remaining split movie files, not just the first movie file: [Copy], [Cut], [Delete], [Add to collection], [Rename Tool]
- When the Filter/Sort function ([p.16](#)) is used with thumbnails, the function is only applied to the first movie file.

(9) Select all thumbnails

(10) Cancel all thumbnail selections

- The thumbnails control panel is displayed in the main window by default. If it is not displayed, such as when screen settings have been changed, you can display it by selecting [Thumbnail control panel] in the [Thumbnails] menu.
- In multi-layout (vertical thumbnails, [p.20](#)), only the thumbnail view setting (Default thumbnail display) is possible.




Advanced


Using the Thumbnail Display Filter/Sort Function

This function allows you to display only thumbnails that match the selected filtering option or to specify an option for sorting thumbnails.

1 Set the [Filter] button on the [Filter/Sort pane] in the main window to [ON].

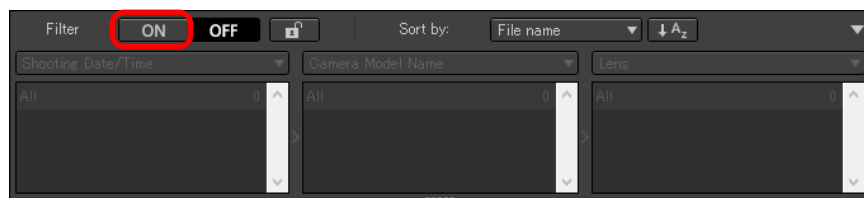

2 Specify settings.

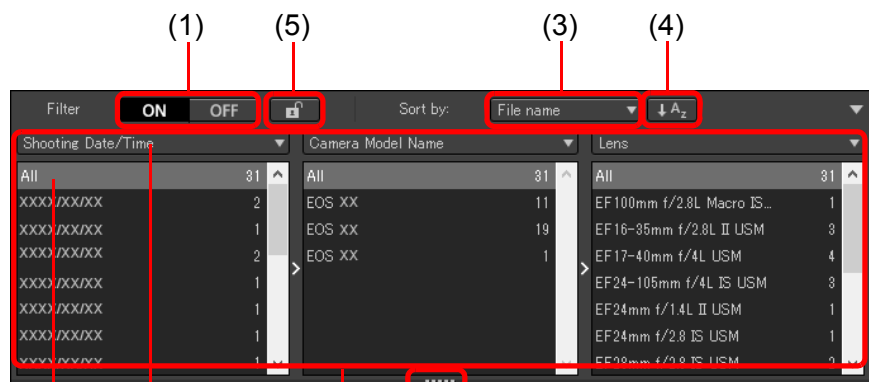

Filter menu
Filter menu list

(2) Drag to adjust display area of filter menu lists upward or downward

- You can drag the bottom edge of the [Filter/Sort pane] to adjust the display area of the filter menu lists upward or downward.

(1) Thumbnail display filter ON/OFF

By setting to [ON], only thumbnails matching the filtering option set with (2) the filtering options menu are displayed.

(2) Filtering options menu

Select a filtering option for the thumbnail display filter.

- After selecting a filtering item in the list box that appears by clicking [▼] at the right on the filter menu, options appear in the filter menu list. Select an option.
- You can select multiple options in the filter menu list. (Hold down the <Shift> key and left-click with the mouse for consecutive selection. Hold down the <Ctrl> key and left-click with the mouse to select individually.)
- The filter menus/filter menu lists are prioritized from left to right. You can specify filtering options from left to right to narrow down filtering.

(3) Sorting options

Select an option for sorting thumbnails. If files were added, a "*" is temporarily displayed after the option name. [Custom] is displayed if you sorted thumbnails in a chosen way.

(4) Sort order selection


Select the order (ascending/descending) for sorting thumbnails.

(5) Filter lock button

When the filter lock button is clicked, filter settings will be kept and applied when you switch to a different folder or the next time DPP is started up. When the filter lock button is not clicked, filter settings automatically change to [OFF] when you switch to a different folder or the next time DPP is started up.



- In addition to thumbnail display, this function can also be used in multi-layout.
- You can open/close the panel by clicking the [▼] button at the upper right of the [Filter/Sort pane].

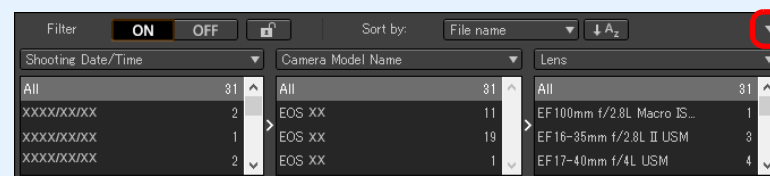



Advanced

Displaying the Histogram Palette

The histogram palette shows a histogram of the selected image. You can quickly check a histogram without opening a tool palette.


- Select the [View] menu ▶ [Histogram palette].
→ The histogram palette appears.

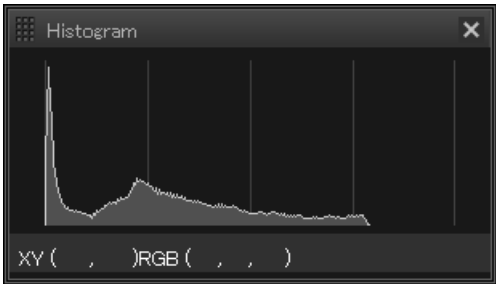

- You can select any of the following four histograms from the menu that appears when you right-click with the mouse. [Brightness only], [RGB separately], [YRGB separately], [RGB together]
- You can click the [] button at the bottom right of the main window to show/hide the [Histogram] palette.

- Introduction/
Contents
- Downloading
Images
- Viewing
Images
- Sorting
Images
- Editing
Images
- Printing
Images
- Processing
Large Numbers
of RAW Images
- Remote
Shooting
- Playing Back
Movies and Saving
Still Photos
- HDR PQ
Mode
- Specifying
Preferences

Enlarging and Viewing an Image in the Preview Window

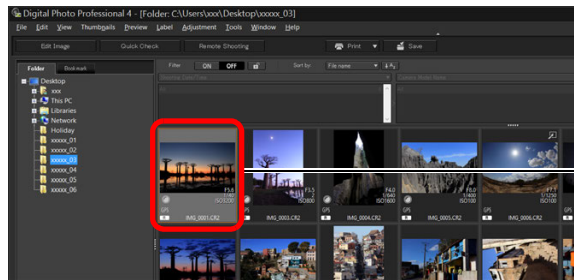


Double-click

- The preview window appears.
- Up to 36 windows can be displayed at the same time for the preview window.
(32bit On 32-bit OSs, up to 4 windows can be displayed at the same time.)

Preview window



Tool palette

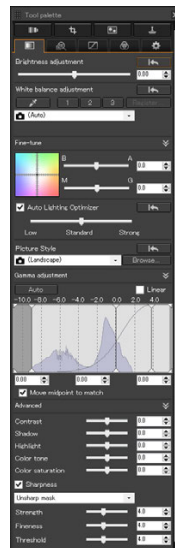

- Click the [X] in the upper right of the preview window to close the preview window.



By selecting the [Preview] menu ► [AF points] in the preview window, you can display the AF points selected in the camera at the time of shooting. However, AF points are not displayed for images whose image size has been changed and then been converted and saved (p.93), images for which you selected an effect other than [Shot settings] as correction of fisheye lens distortion aberration, or images which have had settings specified during RAW processing on the camera for distortion correction or chromatic aberration correction.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images


Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos


HDR PQ
Mode

Specifying
Preferences

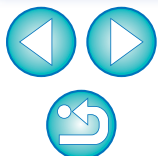


Enlarging and Viewing a Specific Area


Click the area you want to enlarge.

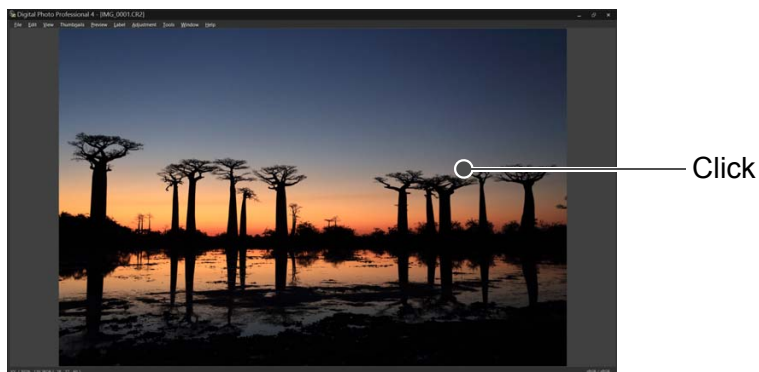

- The area you clicked is enlarged to 100% (actual pixel size).
- Click again to revert to the full view.
- To change the display area drag on the image.

 **To display an image in an enlargement ratio other than 100%**

Select any enlargement ratio from the [Preview] menu.

 While in the preview window, you can select the [Preview] menu ► [Preview control panel] to use various preview functions. For details, see “Checking an Image Using the Preview Control Panel” (p.21).


Advanced

Displaying the Navigator Palette


The navigator palette shows the enlargement area of a selected image.

Select the [View] menu ► [Navigator palette].


→ The navigator palette appears.

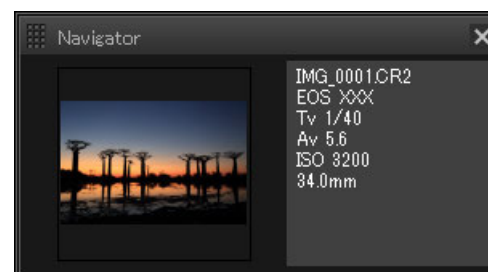

- When an image is enlarged in the preview or other window, the enlargement display area is indicated in the navigator palette. The area to be enlarged can be changed by dragging the enlargement display area on the image.

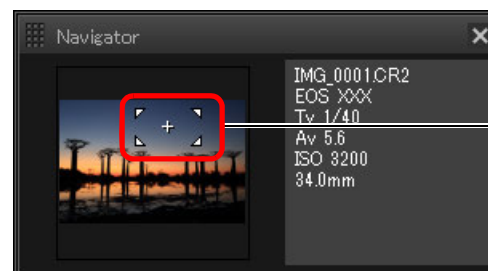

Change the enlargement display area by dragging

- You can click the  button at the bottom right of the main window to show/hide the [Navigator] palette.



Checking the Image in Detail

Displaying the Main Window (Multi-layout)


By switching the main window to “multi-layout”, you can use the preview control panel to check the image in detail.

Click a change layout button at the bottom of the main window (thumbnail layout).


→ The main window (multi-layout) appears.

- In the main window (multi-layout), you can select from two layouts, with horizontal thumbnails or vertical thumbnails.
- Click the area you want to enlarge in the image displayed in the preview display area to display the image at actual pixel size (100%). Click the image again to revert to full display.

Main Window (thumbnail layout)

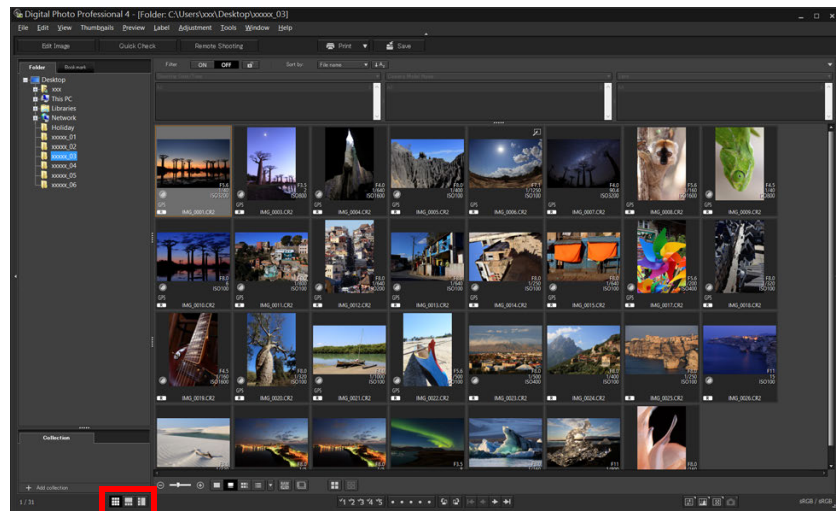


Layout change button

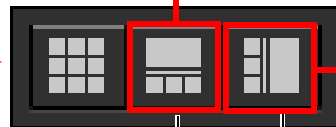

Horizontal thumbnails

Vertical thumbnails

Multi-layout (horizontal thumbnails)

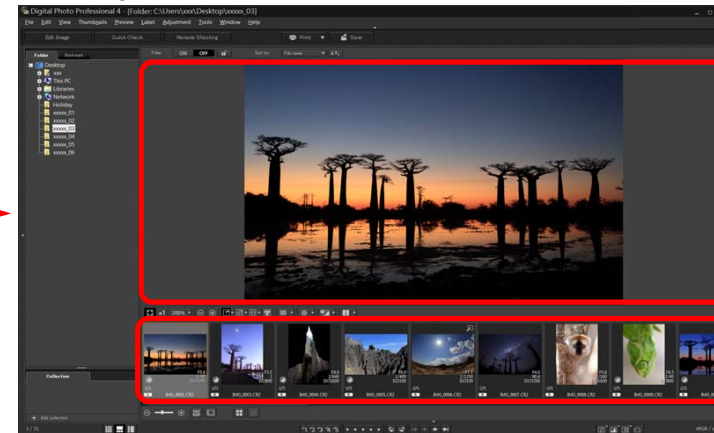

Preview display area

Thumbnail display area

Multi-layout (vertical thumbnails)



Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Checking an Image Using the Preview Control Panel

With Preview control panel, you can check the image in detail. You can use this panel in the main window (multi-layout) and edit image window. If the preview control panel is not displayed, you can display it by selecting [Preview control panel] from the [Preview] menu. By default, the [Fit] button and [1x] button are selected. When you select a movie, the displayed content changes. For information on the display when movies are selected, see “Playing Back Movies and Saving Still Photos” (p.145).

Changing the Magnification



Display the image at actual pixel size (100%).

200%

Click the [▼] button to display the image at the set magnification displayed. If the [◀ ▶] button is used to enlarge/reduce the image, the magnification set for this button also changes accordingly*.

*Excluding actual pixel size (100%)



Enlarge/reduce the image.




Revert the zoomed image back to fit-to-window view.

Comparing with a Pinned (Fixed) Image

You can split the window into two sections, and compare the images on the left and right by “pinning” an image in the left section then scrolling images in the right section. It improves efficiency of image selection.



Select an image and click the [Pin] button.

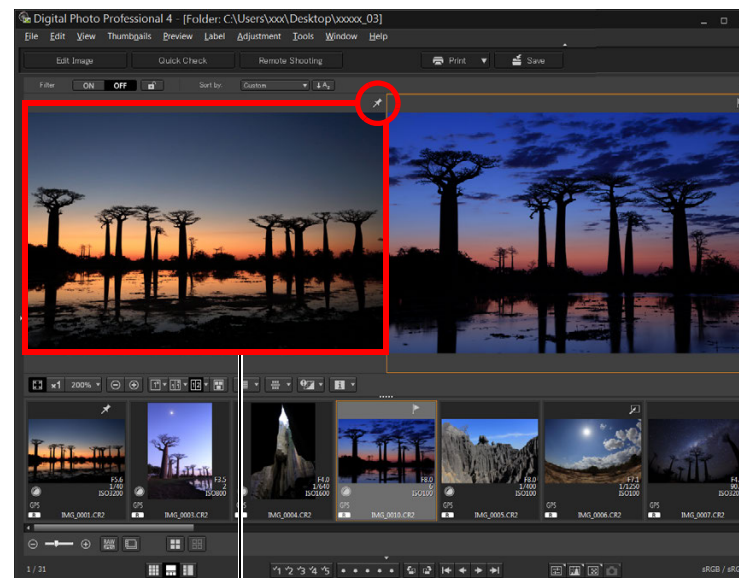

Pinned (fixed) image

- The window divides into left and right, and the selected image is pinned.
- When you pin an image and perform scrolling, the image on the left (pinned image) remains and only the image on the right is scrolled, which is convenient for image selection.
- To pin another image, select the image, then select [Pin] from the menu that appears when you right-click with the mouse.
- After pinning an image, you can click the [1/2] button to switch between top-bottom and left-right split screens.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences





Displaying Multiple Images at the Same Time





Select multiple images, and click the [] button.

- The selected image is displayed.
- You can display up to 8 images.

 **32bit** On 32-bit OSs, this function is not available.
(The [] button is not displayed.)

Displaying Grid Lines



1 Click the [] button beside the [] button, and set the spacing between grid lines on the menu that appears.

- To set the spacing, enter values (8 to 256, in pixels), or move the slider.
- After specifying settings, click the [Close] button and close the window.

2 Select an image and click the [] button.

- The image with grid lines is displayed.

Displaying AF Points




1 Click the [] button beside the [] button, and select the item to display on the image on the menu that appears.

- Select [Show only AF points in focus] or [Show all AF points].

2 Select an image and click the [] button.

- An image with the AF points selected in step 1 is displayed.

 AF points are not displayed for images whose image size has been changed and then been converted and saved (p.93), images for which you selected an effect other than [Shot settings] as correction of fisheye lens distortion aberration, or images which have had settings specified during RAW processing on the camera for distortion correction or chromatic aberration correction.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos


HDR PQ
Mode

Specifying
Preferences




Displaying Areas Beyond the Set Range with Warning Indicators (Highlight/Shadow Warning)

You can set up warning indicators for both highlighted and shadowed parts, which is effective for checking the clipped highlights and shadows and preventing excessive adjustment of an image. Where the area on the image has exceeded the set range, you can display the highlighted part in red and the shadowed part in blue.



- 1 Click the [] button beside the [] button, and specify settings on the menu that appears.

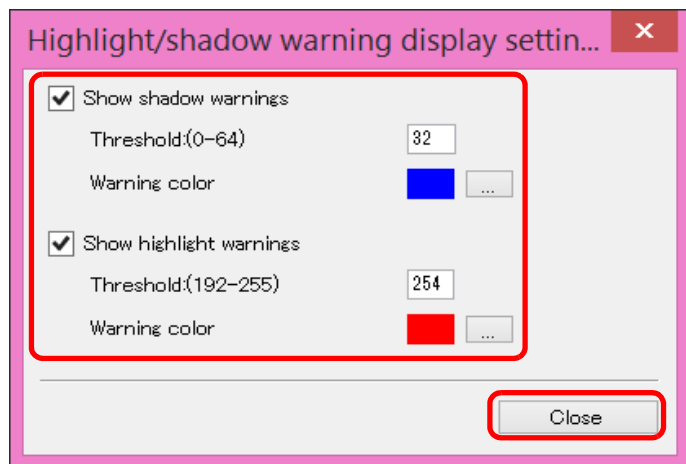

- Checkmark the [Show highlight warnings] and [Show shadow warnings] checkboxes and enter the warning values. You can also select different warning colors from the dialog that appears when you click the [] button.
- After specifying settings, click the [Close] button and close the window.

- 2 Select an image and click the [] button.

→ On the opened image, if there is an area that exceeds the value entered in step 1, the highlighted part of that area is displayed in red and the shadowed part is displayed in blue. If you selected different warning colors, the parts are displayed in the specified colors.

Comparing Pre- and Post-Editing Images (Single-Image Display)



Select an image that is being edited and click the [] button.

- By clicking the button, the display switches between the image before editing and the current image (being edited).

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Comparing Pre- and Post-Editing Images (before/after comparison) Arrange vertically/horizontally (two-screen display) / Split vertically/horizontally (split-image display)

You can display before and after versions of an adjusted image in the same window and check the adjustment results.

This function allows you to adjust an image while comparing the original image and image being edited.



- 1 Select an image that is being edited and click the [Compare] button.




- The image is displayed in two-screen display (Arrange vertically).
- The image before editing is on the left, and the currently edited is on the right.

- 2 Change the image display.


- The display switches in the following order by clicking the [Compare] button.
Arrange vertically (two-screen: left/right) → Arrange horizontally (two-screen: top/bottom) → Split vertically (split-image: left/right) → Split horizontally (split-image: top/bottom)

Displaying Image Properties

Display the shooting and recipe information for an image in the screen. You can select items to be displayed.



- 1 Click the [Properties] button beside the [Compare] button.
→ The [Properties display settings] window appears.
- 2 Specify display settings.

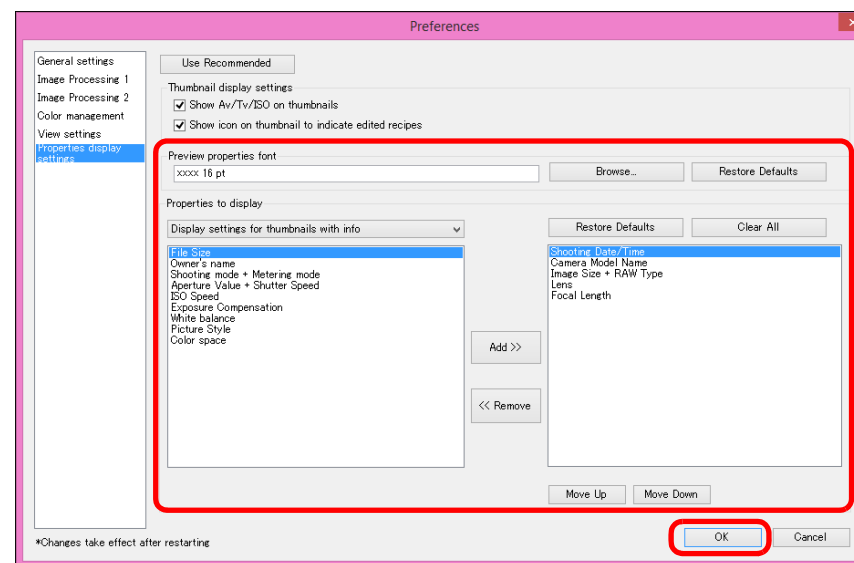

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



- 1 Select [Display settings for preview properties] from the [Properties to display] pulldown menu.
- 2 Specify display items with the [Add >>] button and [<< Remove] button. Items that can be selected appear in the list box at left, and actually displayed items appear in the list box at right. You can also change the display order with the [Move Up] button and [Move Down] button.

After specifying settings, click the [OK] button.

- With the [Preview properties font] option, you can specify the font used for information displayed in the preview window.

3 Select an image and click the [] button.

- The image and properties selected in step 2 are displayed in the screen.
- If the recipe contents of an image being edited are displayed in before/after comparison (two-screen display/split-image display), edited items are displayed in red.

Checking an Image in Multi-Function Preview

The preview window shows the coordinates of the mouse cursor and the work color space. By switching to multi-function preview, you can also check image details in the same way as the main window (multi-layout).

- 1 Select the [Tools] menu ▶ [Preview screen display settings], and then [Multi-function preview] from the dialog that appears.

- 2 Open the preview window (p.18).

- A multi-function preview with various functions at the bottom of the screen is displayed.



- For how to use the displayed functions, see “Viewing an Image in the Main Window (Thumbnail Layout)” (p.13) and “Checking an Image Using the Preview Control Panel” (p.21 to p.25).



All the property items may not be displayed depending on the combination of window, preview window, or the size of thumbnails.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences




Checking an Image in Second Windows

Second windows are preview windows that you can open additionally for thumbnails and image previews. You can display up to 4 second windows for an single image to check the focus in all parts of the image, etc.

Select an image, and then select [Show second screen] from the menu that appears when you right-click with the mouse.

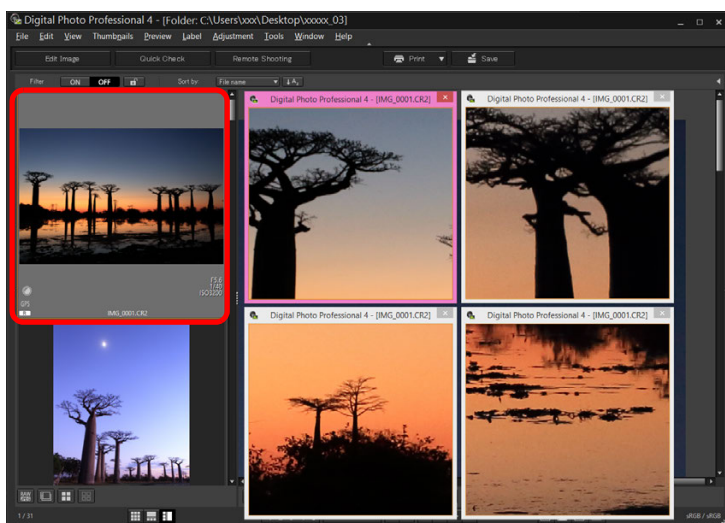

- A second window is displayed.
- To display an additional second window, repeat the operation.
- You can change the size of second windows as desired.
- Click the displayed image to switch between actual pixel size (100% view) and fit-to-window view.
- When you magnify an image in the second window, the right-clicked position on the image will be the center for the magnification.

 **32bit** On 32-bit OSs, second windows cannot be displayed.



Opening and Closing Window Panels (Panes)


Panels (panes) at the top, bottom, left, and right of each window can be closed to suit the tasks being performed.

You can use DPP in an optimal layout.

Click the [] for a panel to open or close.

Example: main window (thumbnail layout)



- When a panel is closed, you can point to [] with the mouse to temporarily open the panel.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Changing the Display Method and Order of Palettes

For any palette (tool palette, navigator palette, histogram palette, quick check palette, and camera control palette), you can change how the palette is displayed (docked/floating), or the display order of multiple docked palettes.

Changing the Display Method (Dock/Float) of Palettes

Right-click on the palette's title bar (where its name is shown) and click [Dock/float] in the dialog that appears.

- A docked palette is then displayed floating, and a floating palette is then displayed docked.
- To revert to the original display method, repeat the same operation again.

Rearranging Palettes

When multiple palettes are docked, you can rearrange their order from top to bottom.

Right-click on the palette's title bar (where its name is shown) and click [Move one up] or [Move one down] in the dialog that appears.

- The order of the palettes is changed.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos


HDR PQ
Mode

Specifying
Preferences



Exiting DPP

In the main window, select the [File] menu ▶ [Exit].

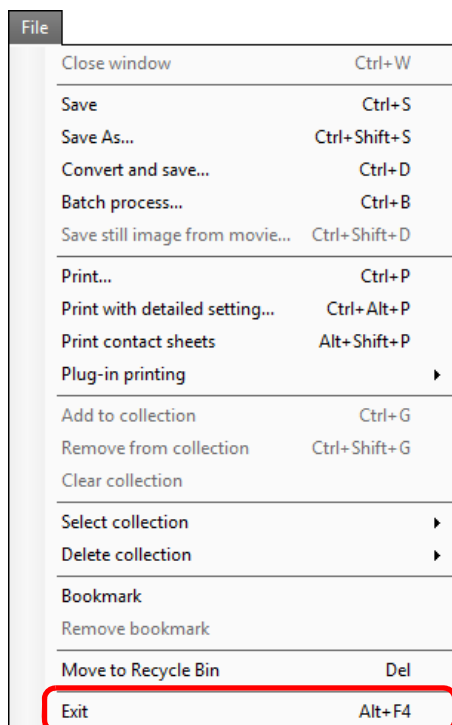

→ DPP exits.

Digital Photo Professional Survey Program

Canon requests that information related to your Canon product be sent to Canon (in case of using your Canon product in China, to the legally approved research company) through the Internet. Canon uses such information for development and marketing of products that better meet customer needs.

Even after agreeing, you can change the send settings anytime in the [Survey] tab sheet (p.162) in [Preferences].



A confirmation dialog box for saving the images appears when you try to exit DPP without saving the adjusted image. Click the [Yes to all] button to save the adjustment contents (recipe) to all the images adjusted.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



3 Organizing and Sorting Images



Efficiently Checking/Sorting Images	31
Sorting Images	33
Attaching Check Marks.....	33
Setting Ratings	33
Sorting Images in the Main Window	34
Attaching Check Marks in the Main Window	34
Setting Ratings in the Main Window.....	34
Arranging Images in the Main Window.....	36
Arranging by Type	36
Arranging Freely	36
Displaying a RAW Image and JPEG Image as a Single Image.....	37
Checking Image Information.....	38
Organizing Images	39
Deleting an Unwanted Image	39
Moving Images	39
Moving Images in Folders	40
Registering Frequent-Use Folders (Bookmark Registration)	40
Deleting Bookmarks	40

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



Efficiently Checking/Sorting Images

You can enlarge images displayed as thumbnails in the main window and efficiently check each image. You can sort images into groups. Note that this function does not apply to movie files.


- 1 Select multiple images to check in the main window.
- 2 Display the quick check window.
 - Click the [Quick check] button.

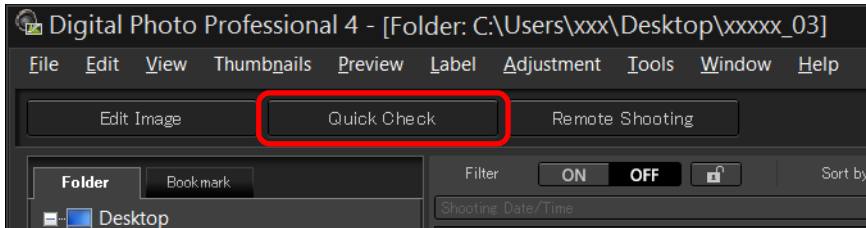

→ The quick check window appears.

- 3 Click the [◀] or [▶] button to switch between images to be checked.

Quick check window

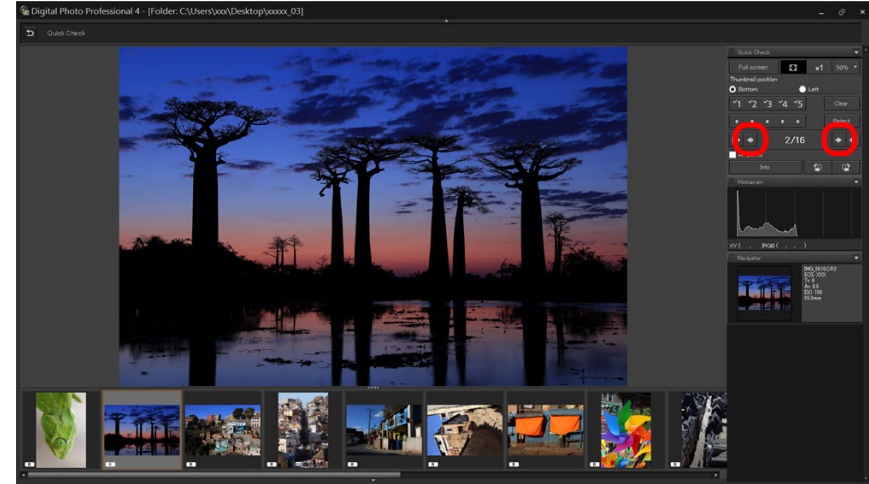

- All the images displayed in the main window can be checked in the quick check window.
- If you click the [◀] button, the first image is displayed, and if you click the [▶] button, the last image is displayed.
- Click the [↶] button to return to the main window.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



4 Click the area you want to enlarge.

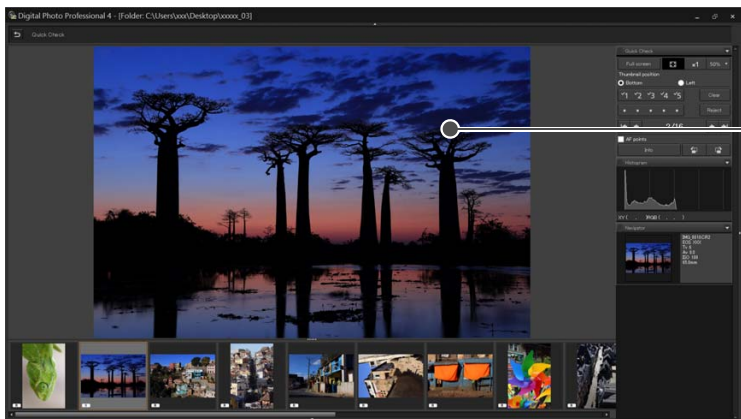

- The area you clicked is displayed at 100% (actual pixel size).
- To change the display position, drag on the image.
- If you click the [50%] button, you can display the image at 50%.
- Click again to revert to the full view.
- To exit, click the [⏮] button.



- In addition to 100% and 50%, you can display images at 12.5%, 25%, 200%, 300%, and 400%. Click the [▾] button beside the [50%] button on the screen, and select a magnification from the menu that appears.
- If you click the [50%] button (the selected magnification appears on the button), the image appears at the selected magnification. However, after the quick check window is closed, the image returns to its original 50% view.
- When [AF Point] is checkmarked, you can display the AF points selected in the camera at the time of shooting. However, AF points are not displayed for images which have had their image size changed and then been converted and saved (p.93), which have had settings specified during RAW processing on the camera for distortion correction and chromatic aberration correction, which are composited, or which are created as HDR (High Dynamic Range) images.



Convenient functions of the quick check window

- **To check only selected images**
You can use the quick check window to check only selected images by selecting the desired images from those displayed in the main window and then performing step 1.
- **Switching between images using the keyboard**
You can also switch between images by pressing the <→> or <←> key.
- **Switching between screens using the keyboard**
You can also switch between full screen display/normal screen display by pressing the <Alt> + <Enter> keys.
- **Operations using the menu**
Each operation can also be performed with the menu which appears when you right-click with the mouse on an image.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Sorting Images


You can sort images by attaching check marks or setting ratings (indicated with [★] marks) for each subject or theme.

Attaching Check Marks

Display the image you want to attach a check mark to, and then click any one of [✓1] to [✓5].

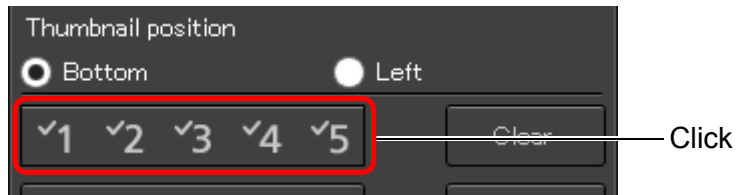


→ The selected check mark appears in the upper left of the window.

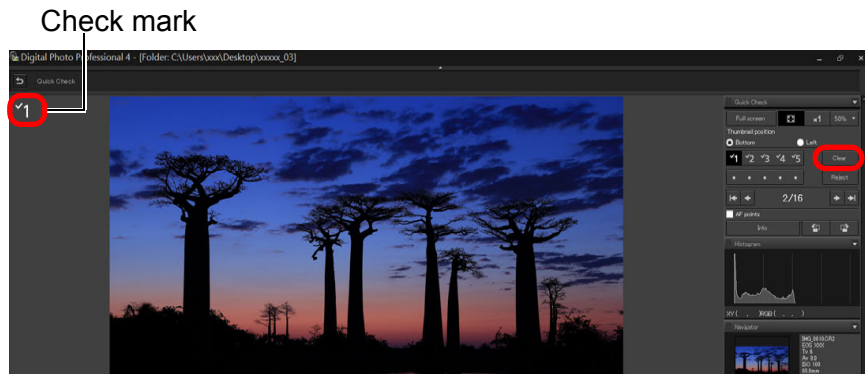

● Click the [Clear] button to remove the check mark.

Setting Ratings

Display the image you want to rate, and then click any one of the [★].

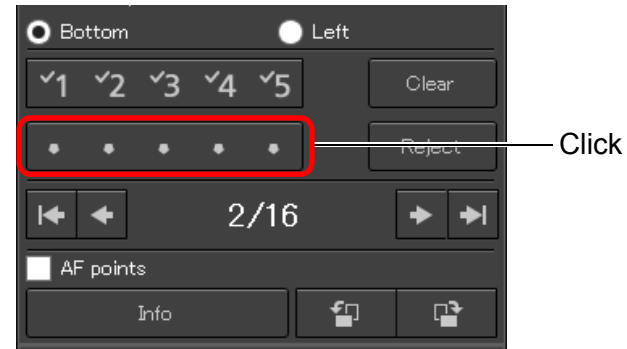


→ The rating is set and an icon corresponding to the selected [★] appears in the upper left of the window.

(Window shown with a rating of three [★])

● To set [Reject], click the [Reject] button. Click the [Reject] button again to cancel.

Rating icon

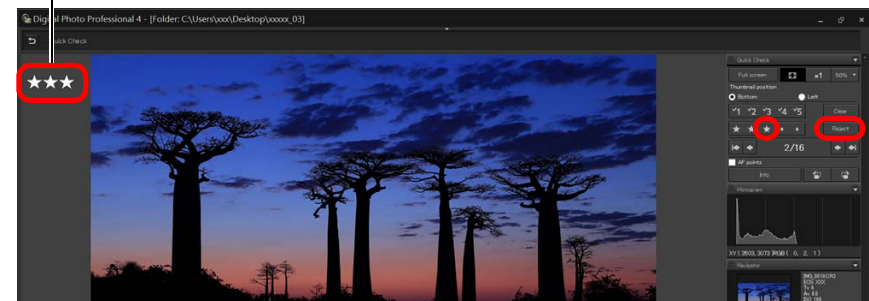

● To cancel the rating, click the same [★] as when the setting was made on the right of the window.



As the file structure of the image data is changed when a rating is set to an image, it may not be possible to check the image information in third-party software.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Sorting Images in the Main Window


You can also sort images in the main window by attaching check marks or setting ratings (indicated with [★] marks) for each subject or theme.

Attaching Check Marks in the Main Window

Select the images you want to attach a check mark to, and then click any of [✓1] to [✓5].

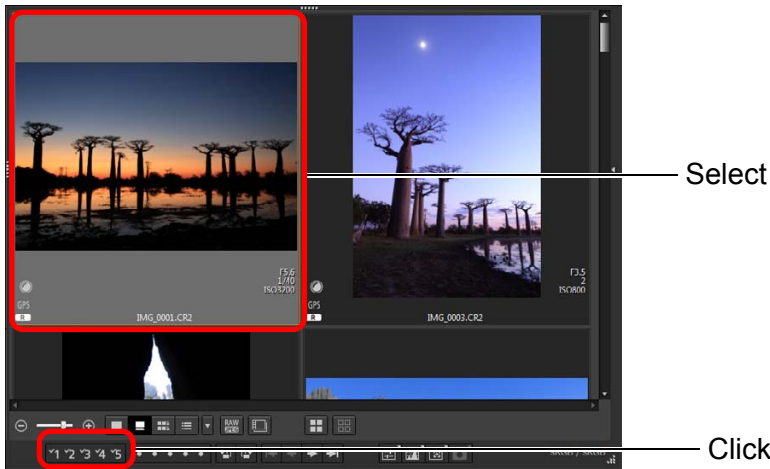


→ The selected check mark appears in the upper left of the image frame.

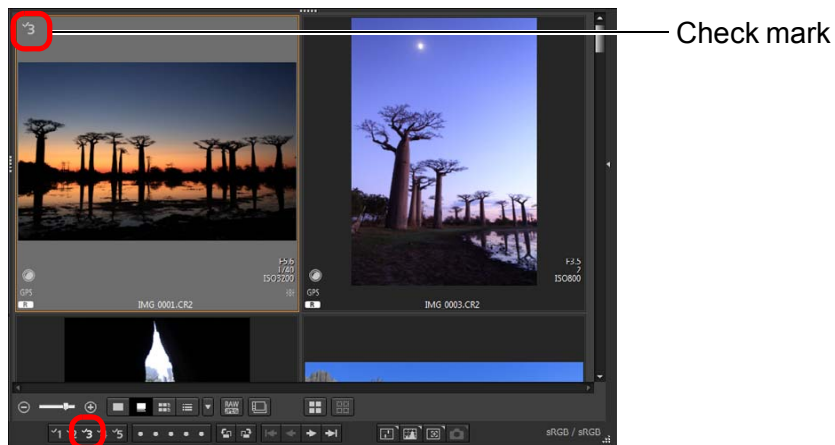


● Click the check mark again to remove the check marks.

Setting Ratings in the Main Window

Select the images you want to rate, and then click any of the [○].

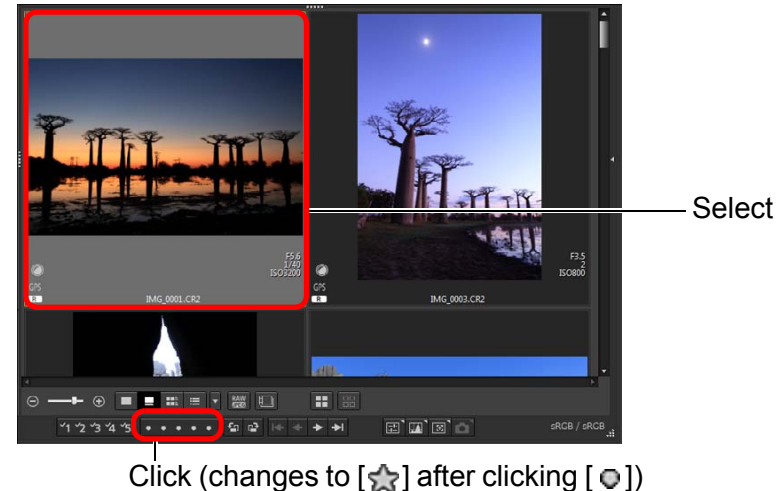

→ The rating is set and an icon corresponding to the selected [★] appears in the image frame.
(Sample window shown with a rating of three [★] as an example)

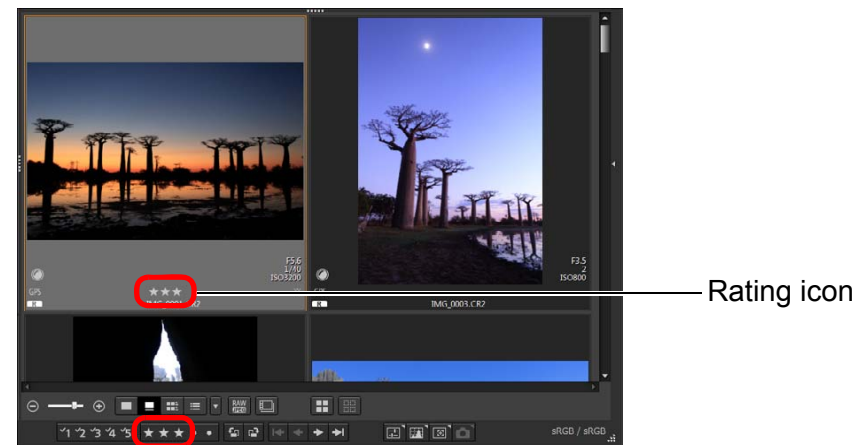

- To cancel the rating, click the same [★] as when the setting was made.
- Set [Reject] with the [Label] menu or the quick check window (p.31).





To select multiple images in the main window

Click on desired images while holding down the <Ctrl> key. To select multiple consecutive images, click on the first image, and then click on the last image while holding down the <Shift> key.



- The [Label] menu can also be used to attach check marks and set ratings.
- You can display and change the rating settings set in DPP with other EOS software and with any supported EOS DIGITAL camera (for the EOS 7D, version 2.0.0 or later firmware) except the EOS-1D Mark IV, EOS-1Ds Mark III, EOS-1D Mark III, EOS-1D Mark II N, EOS-1Ds Mark II, EOS-1D Mark II, EOS-1D, EOS-1Ds, EOS 5D Mark II, EOS 5D, EOS 50D, EOS 40D, EOS 30D, EOS 20D/EOS 20Da, EOS 10D, EOS D2000, EOS D6000, EOS D30, EOS D60, EOS REBEL T2i/550D, EOS REBEL T1i/500D, EOS DIGITAL REBEL XSi/450D, EOS DIGITAL REBEL XS/1000D, EOS DIGITAL REBEL XTi/400D DIGITAL, EOS DIGITAL REBEL XT/350D DIGITAL, and EOS DIGITAL REBEL/300D.
 - EOS Utility version 2.9 or later:
Ratings set in DPP are displayed. However, [Reject] is not displayed and you cannot change rating settings.
 - With any supported camera (for the EOS 7D, version 2.0.0 or later firmware) except the EOS-1D Mark IV, EOS-1Ds Mark III, EOS-1D Mark III, EOS-1D Mark II N, EOS-1Ds Mark II, EOS-1D Mark II, EOS-1D, EOS-1Ds, EOS 5D Mark II, EOS 5D, EOS 50D, EOS 40D, EOS 30D, EOS 20D/EOS 20Da, EOS 10D, EOS D2000, EOS D6000, EOS D30, EOS D60, EOS REBEL T2i/550D, EOS REBEL T1i/500D, EOS DIGITAL REBEL XSi/450D, EOS DIGITAL REBEL XS/1000D, EOS DIGITAL REBEL XTi/400D DIGITAL, EOS DIGITAL REBEL XT/350D DIGITAL, and EOS DIGITAL REBEL/300D:
Ratings set in DPP are displayed in the playback screen. You can also change rating settings. However, you cannot display or change settings for [Reject].



- Reversely, you can also display and change in DPP the rating settings set for images on any supported EOS DIGITAL camera (for the EOS 7D, version 2.0.0 or later firmware) except the EOS-1D Mark IV, EOS-1Ds Mark III, EOS-1D Mark III, EOS-1D Mark II N, EOS-1Ds Mark II, EOS-1D Mark II, EOS-1D, EOS-1Ds, EOS 5D Mark II, EOS 5D, EOS 50D, EOS 40D, EOS 30D, EOS 20D/EOS 20Da, EOS 10D, EOS D2000, EOS D6000, EOS D30, EOS D60, EOS REBEL T2i/550D, EOS REBEL T1i/500D, EOS DIGITAL REBEL XSi/450D, EOS DIGITAL REBEL XS/1000D, EOS DIGITAL REBEL XTi/400D DIGITAL, EOS DIGITAL REBEL XT/350D DIGITAL, and EOS DIGITAL REBEL/300D.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Arranging Images in the Main Window

You can arrange images in the order of the types of check marks you have attached to images, or in the order of date and time at which the images were shot. You can also freely arrange images by moving them individually.

Arranging by Type

Select the [Thumbnails] menu ▶ [Sort] ▶ desired item.

→ The images are arranged in the order according to the selected item.


Main sort items	Description
File name: ascending order	Images are sorted by file name in alphanumeric order (0 to 9 → A to Z).
Extension: ascending order	Images are sorted in the following order: RAW images → JPEG images → TIFF images → MOV movies → MP4 movies.
Shooting Date/Time: ascending order	Images are sorted by shooting date and time from the earliest.
Check mark: ascending order	Images with check marks take priority and are sorted in number order.
Rating: ascending order	Sorted in order of fewest [★].
Camera Model Name: ascending order	Sorted in order of least digit used in the camera model name. (Ex.: EOS-1D X → EOS 6D)
Lens: ascending order	Sorted in order of shooting lens with shortest focal length.
ISO speed: ascending order	Sorted in order of lowest speed.
Shutter speed: ascending order	Sorted in order of fastest shutter speed.
Aperture value: ascending order	Sorted in order of lowest aperture value.
Focal length: ascending order	Sorted in order of shooting lens with shortest set focal length.

* You can also arrange images by [Image Size], [RAW Type], and [Recipe editing status].

* Descending order sorts all items in the reverse of ascending order.

Arranging Freely

Drag and drop the image to the desired location.

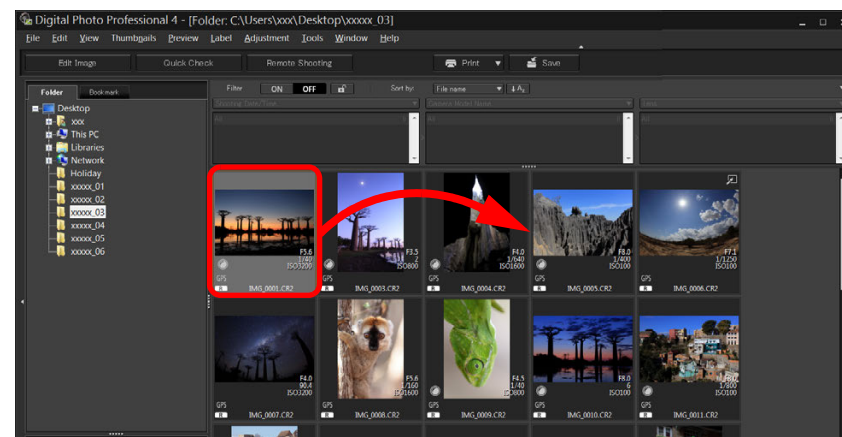

→ The image moves to the desired location.

- You can also select multiple images (p.35) and move them.
- The order of rearranged images is temporarily registered as [Custom] in the [Filter/Sort pane] and maintained until you exit DPP or select another folder in the folder area.
- Select the [Thumbnails] menu ▶ [Sort] ▶ [File name] and [Ascending] to revert to the order before the images were rearranged.



Maintaining the order of rearranged images

You can maintain the order of rearranged images even if you exit DPP or select another folder in the folder area.

- **Maintain order without changing image file names**
You can use the [View Settings] tab sheet in [Preferences] to maintain the order of images without changing the image file names (p.161).
- **Maintain order and change image file names**
You can use the rename function to maintain the order of images and change the image file names all at once in the order they were rearranged (p.137).

Displaying a RAW Image and JPEG Image as a Single Image

You can display and handle a RAW image and JPEG image shot simultaneously as a single image. In particular, you can halve the number of images displayed in the main window and you can streamline the checking of a large number of images shot simultaneously.

Select the [Thumbnails] menu ▶ [Group RAW and JPG versions].

→ The main window display updates and the simultaneously shot RAW image and JPEG image are displayed as a single image with the [R+J] mark (p.166).

? RAW images with the extension “.CR2” or “.CR3” can be displayed as a single image

Images that can be displayed as a single image are images shot with a camera that shoots RAW images with the extension “.CR2”, “.CR3”, and JPEG images simultaneously. Images that have been simultaneously shot with a camera that shoots RAW images with the extension “.CRW” or “.TIF” cannot be displayed as a single image.

💡 When a single image is displayed

● Image displayed

The RAW image is displayed in all windows.

● Edited image

The content which has been adjusted with any of DPP's functions (the tool palette etc.) will be applied to the RAW image only.

However, if you have used the following functions, the adjustments will be applied to both the RAW image and the JPEG image.

- Deleting an image (p.39)
- Moving or copying an image (p.39)
- Checkmarking (p.33, p.34)
- Rating (p.33, p.34)
- Rotating an image (p.13)

● Images added to the [Collection] window

When you add a RAW image and JPEG image displayed as a single image to the [Collection] window, the single image is marked with the [R+J] mark. However, because the RAW and JPEG images are actually added individually, the number of images shown on the [Collection] tab sheet increases by 2.



If you cancel selection of [Group RAW and JPG versions], the RAW image and JPEG image are displayed as separate images.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



Checking Image Information

- 1 Select the image for which you want to check the image information.
- 2 Select the [View] menu ► [Info].
→ The image information window appears.
- 3 Select a tab sheet and check information.

Image information window

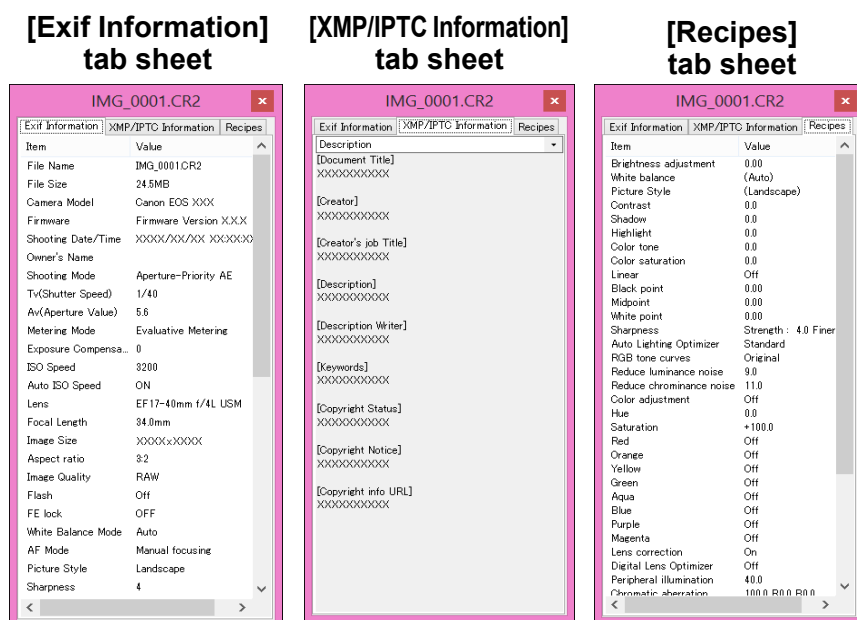

- Shooting information is displayed in the [Exif Information] tab sheet, while IPTC* information appended to the image after shooting is displayed in the [XMP/IPTC Information] tab sheet. IPTC* information provides additional comments on images, such as captions, credits and the shooting location. The information is sorted into 5 different categories and can be viewed by selecting [Description], [IPTC Contact], [IPTC Image], [IPTC Content] or [IPTC Status] from the list box in the [XMP/IPTC Information] tab sheet.

* International Press Telecommunications Council (IPTC)

- The contents of the [Exif Information] tab sheet will vary depending on the camera model.
- Recipe contents applied to an image are displayed in the [Recipes] tab sheet.



Convenient uses in the main window

- **Switching displays**
If a different image is selected in the main window when the image information window is displayed, the image information for that image will be displayed.
- **Difference with the thumbnail with shooting information**
Detailed shooting information for each image is displayed in the image information window. However, if you want to only check the main shooting information, you can check it for each image in [Thumbnails] menu ► [With shooting info] (p.14).

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Organizing Images

This section explains how to delete unwanted images, move or copy images, etc., to organize your images.

Deleting an Unwanted Image

Be aware that you cannot recover deleted images.

- 1 Select an unwanted image in the main window.
- 2 Select the [File] menu ▶ [Move to Recycle Bin].

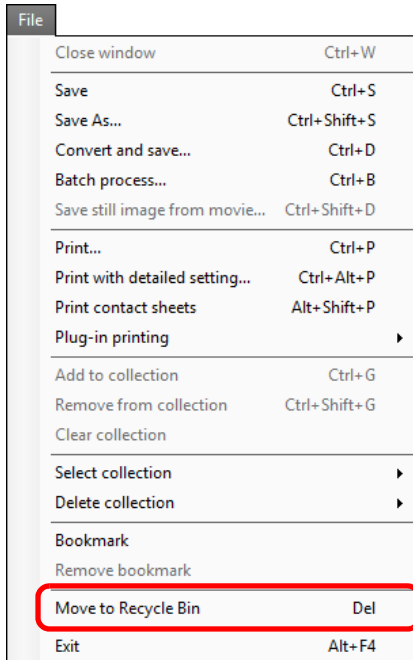


- The image is moved to the [Recycle Bin] and is deleted from DPP.
- The images are deleted completely from your computer when the [Empty Recycle Bin] operation is performed on the [Recycle Bin] on the desktop.

Moving Images

You can move or copy images to a separate folder and sort by shooting date or themes.

Drag the image to be moved or copied.

- **To move:** Drag the image and release when the image is in the destination folder.
- **To copy:** Drag the image while holding down the <Ctrl> key and release when the image is in the destination folder.

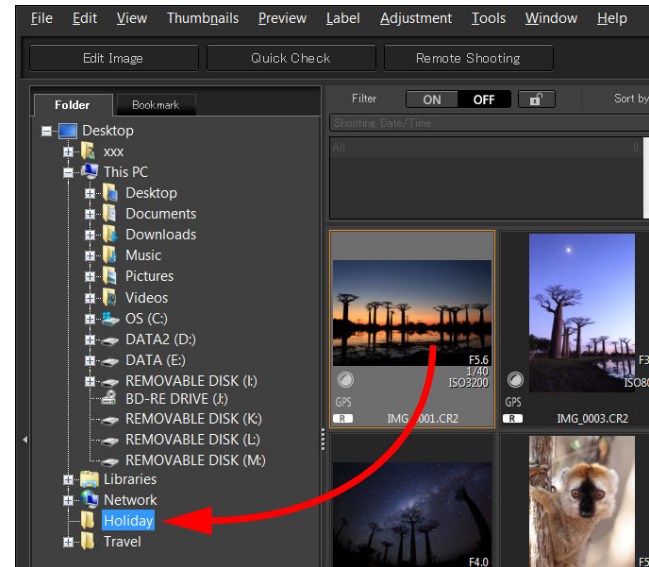

→ The images are moved or copied to the destination folder.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Moving Images in Folders

You can move or copy folders that contain images, and sort the images by folders.

Drag the folder to be moved or copied.

- **To move:** Drag the folder and release when the folder is in the destination folder.
- **To copy:** Drag the folder while holding down the <Ctrl> key and release when the folder is in the destination folder.

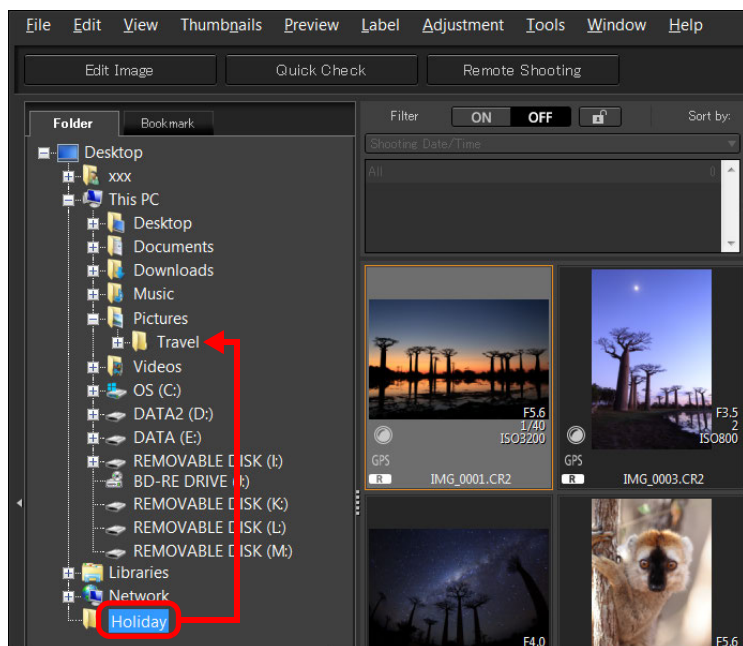


→ The folders are moved or copied to the destination folder.

Registering Frequent-Use Folders (Bookmark Registration)

You can register frequently used folders in bookmarks. Registered folders are displayed in the [Bookmark] tab sheet in the main window.

1 Select the folder for which a bookmark is to be registered.

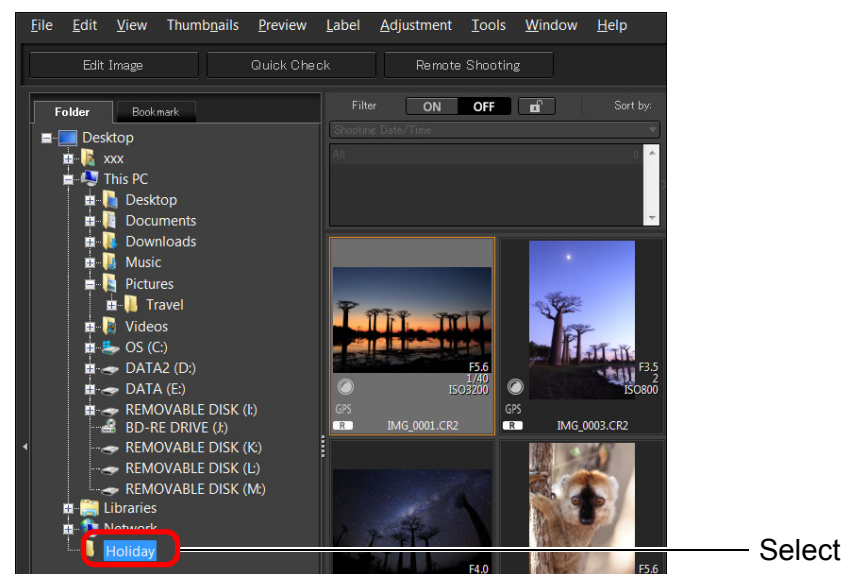

2 Select the [File] menu ► [Bookmark].

→ The folder selected in step 1 is registered in the [Bookmark] tab sheet in the main window.

Deleting Bookmarks

You can delete a folder registered in [Bookmark].

Select the [File] menu ► [Remove bookmark].

→ The selected folder is deleted from bookmarks.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



4 Editing Images

RAW Images	44
RAW Images.....	44
RAW Development	44
When RAW Development is to be Done.....	44
Advantages of a RAW Image	44
Editing JPEG and TIFF Images	45
Tool Palettes	46
JPEG/TIFF Editing with the Basic Adjustment Tool Palette	48
Adjusting Brightness	48
Changing the Picture Style	49
Advanced Using a Picture Style File	51
Adjusting Color Tone by Changing White Balance....	51
Adjusting Color Tone Using Click White Balance	52
Advanced Adjusting White Balance with Color Temperature	53
Advanced Tuning White Balance	53
Adjusting Contrast	54
Advanced Adjusting Brightness of Shadows/ Highlights	54
Changing Color Tone and Color Saturation.....	55
Adjusting Monochrome	55
Advanced Adjusting Dynamic Range	56
Adjusting Gradation and Luminance Automatically ...	57
Using the Auto Lighting Optimizer	58
Adjusting Image Sharpness.....	59
Detailed Setting of Image Sharpness	60
JPEG/TIFF Editing with the Tone Adjustment Tool Palette	61

Adjusting Brightness and Contrast	61
Adjusting Color Tone Using Click White Balance.....	62
Advanced Adjusting Tone Curve	63
Example of a Tone Curve Operation	64
Advanced Adjusting Dynamic Range.....	65
Using the Auto Lighting Optimizer	65
JPEG/TIFF Editing with the Color Adjustment Tool Palette	66
Advanced Editing with the Color Adjustment Tool Palette	66
Adjusting a Specific Color Gamut.....	66
Adjusting Hue and Saturation for an Entire Image.....	67
Adjusting in Monochrome	67
JPEG/TIFF Editing with the Detailed Adjustment Tool Palette	68
Reducing Noise	68
Adjusting Image Sharpness.....	69
Reducing Color Moiré in an Image	69
JPEG/TIFF Editing with the Trimming/Angle Adjustment Tool Palette	70
Editing with the Lens Correction Tool Palette.....	73
Correcting Lens Aberration.....	73
Making Corrections.....	74
Effects of Distortion Correction for Fisheye Lenses	75
Shooting Distance Information Slider	76
Correcting Multiple Images at a Time	77
Digital Lens Optimizer	77

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

4
Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Using the Digital Lens Optimizer	78
Adjusting Image Sharpness.....	80
JPEG/TIFF Advanced Editing with the Partial Adjustment Tool Palette	81
Making Partial Adjustments to Images ([Brightness], [Contrast], [Hue], [Saturation])	81
Making Partial Adjustments to Images ([Reduce color moiré]).....	83
Adjustment Groups	84
JPEG/TIFF Editing with the Dust Delete/Copy Stamp Tool Palette	85
Performing Automatic Dust Erasure Processing	85
Automatic Dust Erasure Processing in the Main Window	86
Manually Erasing Dust (Repair Function).....	87
Erasing Unwanted Parts of an Image (Copy Stamp Function).....	89
Setting Work Color Space	90
Using the Soft-Proof Colors Function.....	91
Specifying the Size when Opening RAW Images	92
JPEG/TIFF Saving Editing Results.....	93
Saving Editing Contents to an Image	93
Saving as a separate image	93
JPEG/TIFF Re-Editing an Image.....	95
JPEG/TIFF Utilizing Adjustment Contents (Recipe)....	96
Copying a Recipe and Applying to Another Image....	97
Saving a Recipe as a File	97
Loading and Applying Recipes	98

JPEG/TIFF Adjusting by Comparing Multiple Images.....	99
JPEG/TIFF Editing Efficiently	100
Editing in the Edit Image Window.....	100
Changing the Thumbnail Display Position to Horizontal	101
Gathering and Editing Images in the Collection Window.....	102
JPEG/TIFF Compositing Images	104
Compositing Methods.....	107
JPEG/TIFF Creating HDR (High Dynamic Range) Images.....	108
Advanced Using the Dual Pixel RAW Optimizer.....	111
Microadjustment of the Position of Maximum Sharpness and Resolution Using the Depth Information Contained within the Dual Pixel RAW File.....	111
Reposition the Viewpoint or Foreground Bokeh for a More Pleasing Result	112
Reduces the Appearance of Ghosting in Images.....	113
JPEG/TIFF Advanced Using Depth Compositing.....	115
Supported Images	115
Using the Depth Compositing Tool.....	115
Using the Depth Compositing Editing Tool.....	117
Advanced Using the RAW Burst Image Tool	120
Starting Up the RAW Burst Image Tool.....	120
Changing the Representative Image in a Roll.....	122
Saving One Image in a Roll.....	122
Extracting and Saving Any Range in a Roll.....	123

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Advanced Transferring a RAW Image to Photoshop	124
Advanced Customizing the Main Window Toolbar	125

* Sections with **JPEG/TIFF** and **JPEG/TIFF** in “4 Editing Images” support not only RAW image editing but also JPEG/TIFF image editing.

JPEG/TIFF : All the functions explained in the section support JPEG/TIFF image editing.
JPEG/TIFF : Certain functions explained in the section support JPEG/TIFF image editing.

Introduction/ Contents
Downloading Images
Viewing Images
Sorting Images
4 Editing Images
Printing Images
Processing Large Numbers of RAW Images
Remote Shooting
Playing Back Movies and Saving Still Photos
HDR PQ Mode
Specifying Preferences



RAW Images

RAW Images

A RAW image is image data that has recorded output data of imaging sensor. As image processing is not performed inside the camera when a photo is taken and the photo has been recorded in the special form of “RAW image data + Image processing conditions information at the time of shooting”, special software is needed to view or edit the image.

* “RAW” means “in a natural condition” or “not processed or refined”.

RAW Development

If described in terms of film, the concept of a RAW image is a shot image not yet developed (latent image).

With film, the image appears for the first time when it is developed. In the same way, for RAW images too, you cannot view them as images on your computer unless you perform subsequent image signal processing. Therefore, even though it is digital, this processing is called “development”.

When RAW Development is to be Done

DPP automatically carries out this “development” processing when RAW images are displayed in DPP. As a result, RAW images displayed in DPP are images whose development processing has been completed.

With DPP, you can view, edit and print RAW images without being particularly conscious of the development processing.

Advantages of a RAW Image

RAW images are recorded in the format “RAW image data + Image processing conditions information at the time of shooting”. When you open a RAW image in DPP, the image is automatically developed and you can view the image as an image to which image processing conditions at the time of shooting have been applied.

Even if you perform various adjustments to the image you have opened (it undergoes automatic development processing each time), only the image processing conditions (development conditions) change and the “original image data itself” remains unaffected. Therefore, it is the perfect data for users who want to get creative with the images after shooting, as you do not have to worry about image deterioration. In DPP, the “Image processing conditions information” that can be adjusted is called a “Recipe” (p.96).



Contents adjusted using the tool palettes can be handled individually as a recipe file (extension “.dr4”) (p.96, p.97).

In DPP, all the adjustments (image processing conditions information) made with the tool palettes can be saved in the image as data called a “recipe” (p.97), or can be saved, downloaded and applied to other images as a separate recipe file (extension “.dr4”, p.98). However, a recipe file with saved RAW image adjustments cannot be applied to JPEG or TIFF images.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Editing JPEG and TIFF Images

With DPP, you can adjust JPEG and TIFF images in the same way as RAW images using the tool palettes below.

- Tone Adjustment tool palette
- Color Adjustment tool palette
- Detailed Adjustment tool palette
- Trimming/Angle Adjustment tool palette
- Partial Adjustment tool palette
- Dust Delete/Copy Stamp tool palette
- Settings tool palette

Because adjustments made with these tool palettes (the recipe) only change the image processing conditions, the “original image data itself” remains unaffected. Consequently, there is none of the image deterioration that normally accompanies editing and you can readjust your image any number of times.



Image processing conditions information



Contents adjusted using the tool palettes can be handled individually as a recipe file (extension “.dr4”) ([p.96](#), [p.97](#)).

In DPP, all the adjustments (image processing conditions information) made with the tool palettes can be saved in the image as data called a “recipe” ([p.97](#)), or can be saved, downloaded and applied to other images as a separate recipe file (extension “.dr4”, [p.98](#)). However, recipe data with saved JPEG or TIFF image adjustments cannot be applied to RAW images.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos


HDR PQ
Mode

Specifying
Preferences



Tool Palettes

With DPP, you can adjust images with the tool palettes by switching between various tool palette windows according to your editing requirements. Since adjustments made with the tool palettes only change the image processing conditions, the “original image data itself” remains unaffected. As there is no image deterioration that normally accompanies editing, you can readjust your image any number of times. The various functions of the tool palettes are explained in more detail under the respective topics.

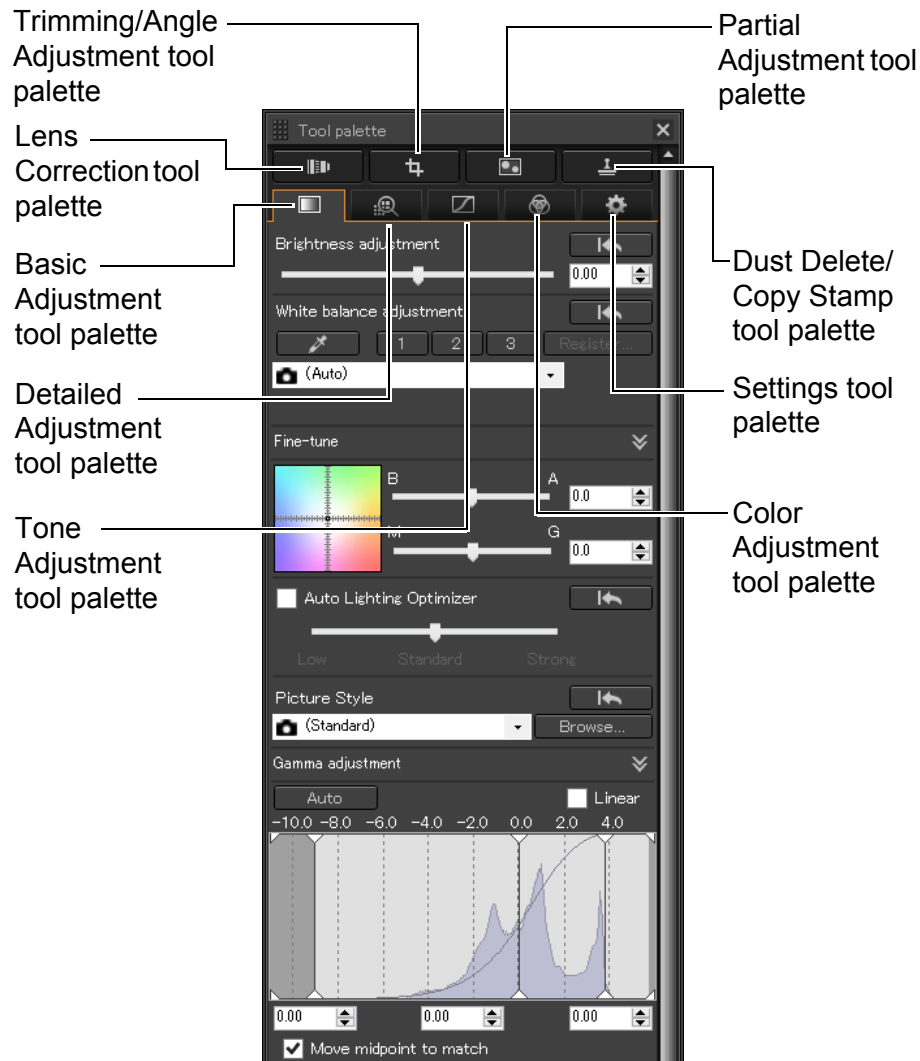

● Basic Adjustment tool palette

Makes basic adjustments to a RAW image (p.48).

● Tone Adjustment tool palette

Adjusts the tone curve and applies the Auto Lighting Optimizer (p.61).

● Color Adjustment tool palette

Adjusts the hue, saturation and luminance of a specific color space. The hue and saturation for an entire image can also be adjusted (p.66).

● Detailed Adjustment tool palette

Reduces noise and adjusts the image sharpness (p.68).

● Trimming/Angle Adjustment tool palette

Crops an image and adjusts the image angle (p.70).

● Lens Correction tool palette

Corrects lens aberration in the image (p.73) and applies the Digital Lens Optimizer (p.78).

● Partial Adjustment tool palette

Adjusts the selected area of an image (p.81).

● Dust Delete/Copy Stamp tool palette

Erases dust from an image and corrects image by copying sections of the image (p.85).

● Settings tool palette

Configures the work color space (p.90).

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences






Using the different tool palettes

We recommend that you use the Basic Adjustment tool palette to make adjustments to RAW images. However, if you find that the Basic Adjustment tool palette does not offer a sufficient range of adjustments, or if you want to use specific functions that are only available in the Tone Adjustment tool palette (p.61), completing initial adjustments with the Basic Adjustment tool palette and then using the Tone Adjustment tool palette to make just the minimum of adjustments needed is recommended.

For noise reduction (p.68) and lens aberration correction (p.74), you should first complete necessary adjustments in the Basic Adjustment and Tone Adjustment tool palettes, and then adjust with the Detailed Adjustment tool palette (p.68) and Lens Correction tool palette (p.73).

- You can click the  button at the bottom right of the main window to show/hide [Tool palette].

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Editing with the Basic Adjustment Tool Palette

The Basic Adjustment tool palette makes basic adjustments to RAW images. With this tool palette, you can adjust the image brightness, set Picture Style, adjust the white balance, adjust the contrast, adjust the color tone and saturation, adjust the dynamic range, apply the Auto Lighting Optimizer and adjust the image sharpness.


Note that the only adjustments you can make to JPEG/TIFF images are applying the Auto Lighting Optimizer and adjusting the image sharpness.

- 1 Select an image in the main window, etc.
- 2 Display the Basic Adjustment tool palette.

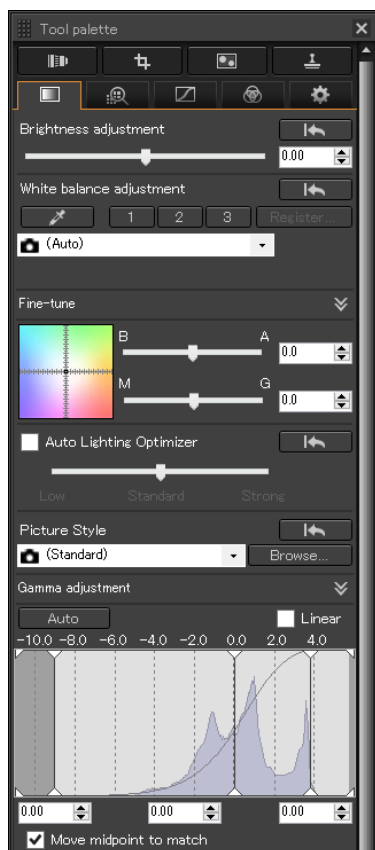

Adjusting Brightness

The brightness of an image can be adjusted. Move the slider to the right to make the image brighter and to the left to make the image darker.

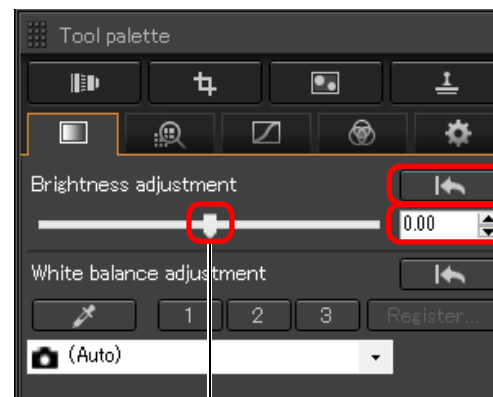

Reverts the image to the original settings

Enter a numerical value

Drag the slider left or right



The adjustment range is -3.0 to $+3.0$ (in 0.01-stop increments when entering a value).

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos


HDR PQ
Mode

Specifying
Preferences



Changing the Picture Style

If the image looks different from what you visualized at the time of shooting, you can get it closer to what you expected by changing the Picture Style. Even if you have saved the image (p.93) with [Monochrome] (p.55) selected, you can still change to another Picture Style at any point by simply selecting a Picture Style other than [Monochrome].

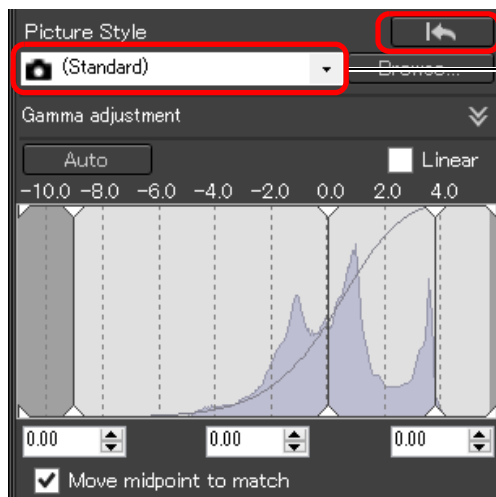

Reverts the image to the original settings

Select

Picture Style	Description
()	The Picture Style set with the camera when the image was shot. When a mode in the Creative Zone is selected on the camera, the Picture Style set is displayed in (). When a mode in the Basic Zone is selected on the camera, [Shot settings] is displayed in (), and image characteristics that are according to the selected shooting mode are applied.
Standard	The image looks vivid. Generally, this setting is suitable for most images.
Auto	The color tone will be adjusted to suit the scene. The colors will look vivid. Especially the colors of blue skies, greenery, and sunsets will be vivid in a shot of nature, outdoor, or sunset scenes.
Portrait	For nice skin tones. Effective for close-ups of women and children. By changing the [Color tone], you can adjust the skin tone (p.55).
Landscape	For vivid blues and greens. Effective for making images of landscapes impressive.
Fine Detail	Suited for detailed outline and fine texture description of the subject. The colors will be slightly vivid.
Neutral	For natural colors and subdued images. Effective for base images which are to undergo adjustment.
Faithful	When the subject is photographed under a color temperature of 5200K, the color is adjusted colorimetrically to match the subject's color. Effective for base images which are to undergo adjustment.
Monochrome	For black and white images. You can also adjust with [Filter effect] or [Toning effect] (p.55).

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Picture Style	Description
(Picture Style file registered in the camera)	Displayed when selecting an image shot with the Picture Style file registered in the camera. In the list, the name of the Picture Style file is displayed in ().
[Picture Style file applied in DPP]	The name of the Picture Style file applied in DPP is displayed in [].



- You can retain the [Color tone], [Color saturation], [Contrast], [Unsharp mask] and [Sharpness] settings, even if you change the Picture Style.
- [Auto] is not applied to images shot with the EOS-1D Mark IV, EOS-1Ds Mark III, EOS-1D Mark III, EOS-1D Mark II N, EOS-1Ds Mark II, EOS-1D Mark II, EOS-1D, EOS-1Ds, EOS 5D Mark II, EOS 5D, EOS 7D, EOS 60D/EOS 60Da, EOS 50D, EOS 40D, EOS 30D, EOS 20D/EOS 20Da, EOS 10D, EOS D2000, EOS D6000, EOS D30, EOS D60, EOS REBEL T2i/550D, EOS REBEL T1i/500D, EOS DIGITAL REBEL XSi/450D, EOS DIGITAL REBEL XS/1000D, EOS REBEL T3/1100D, EOS DIGITAL REBEL XT/400D DIGITAL, EOS DIGITAL REBEL XT/350D DIGITAL, EOS DIGITAL REBEL/300D, PowerShot G3 X, PowerShot G1 X Mark II, PowerShot G7 X, PowerShot G9 X, PowerShot SX60 HS, PowerShot G5 X, PowerShot G16, PowerShot S120, PowerShot G1 X, PowerShot G15, PowerShot S110, PowerShot S100, PowerShot G9, PowerShot G10, PowerShot G11, PowerShot G12, PowerShot S90, PowerShot S95, PowerShot SX1 IS, PowerShot SX50 HS, or PowerShot SX70 HS. When changing the Picture Style with several images selected, although you can select [Auto] if images shot with any supported camera other than the above are included, [Auto] will not be applied to the images shot with the above cameras.
- You can apply [Fine Detail] to all images shot with supported camera models except the PowerShot G3 X, PowerShot G1 X Mark II, PowerShot G7 X, PowerShot G9 X, PowerShot SX60 HS, PowerShot G5 X, PowerShot G16, PowerShot S120, PowerShot G1 X, PowerShot G15, PowerShot S110, PowerShot S100, PowerShot G9, PowerShot G10, PowerShot G11, PowerShot G12, PowerShot S90, PowerShot S95, PowerShot SX1 IS, and PowerShot SX50 HS.
- You cannot select [Auto] with multiple-exposure RAW images created with the camera.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Advanced

Using a Picture Style File

A Picture Style file is a Picture Style extension file.

With DPP, you can apply to RAW images Picture Style files that you have downloaded from Canon Web site effective for various scenes or Picture Style files created with “Picture Style Editor”. When using a Picture Style file, save it to your computer beforehand.

1 Click the [Browse] button in the [Picture Style] panel.



→ The [Open] dialog box appears.

2 Select a Picture Style file saved on your computer, and click the [Open] button.

→ The Picture Style file you selected is applied to an image.


- To apply a different Picture Style file, follow the procedure from step 2 again.



The Picture Style files that you can apply to the camera are files with the “.PF2” or “.PF3” extension only.

Adjusting Color Tone by Changing White Balance

If the color tone of the photographed image does not appear natural, change the white balance to make it appear natural. You can make the color tone natural by setting the light source to match the scene at the time of shooting an image of, for example, pale-colored flowers.

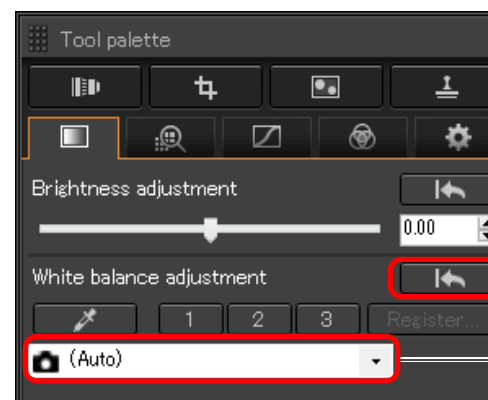

Reverts the image to the original settings

Select

- () is the white balance set on the camera when the image was shot.
 - When a mode in the Creative Zone is selected on the camera, the white balance set is displayed in ().
 - When a mode in the Basic Zone is selected on the camera, [Shot settings] is displayed in (), and image characteristics that are according to the selected shooting mode are applied.



The color tone does not become more natural even when the white balance is changed

If the color tone of the image does not appear natural after changing the white balance, adjust the white balance using click white balance (p.52).



Tune with color tone

To make further fine adjustments to color tone after adjusting the white balance, you can use [Color tone] (p.55) for tuning towards your expectations.




- You cannot register the adjustment results as personal white balance (p.132) when you have selected [()] from the list box.
- You cannot change or adjust white balance with multiple-exposure RAW images created on the camera.




Refer to your camera's Instruction Manual for details on each white balance setting.


Adjusting Color Tone Using Click White Balance

You can adjust white balance using a selected part of an image as the standard for white to make the image appear natural. Using click white balance is effective when using it in parts of an image where white color tone has changed under the influence of a light source.

- The color of the image is adjusted with the point you selected as the standard for white.
- If you click on another point in the image, the white balance is adjusted again.
- To finish click white balance, right-click with the mouse or click the [] button again.

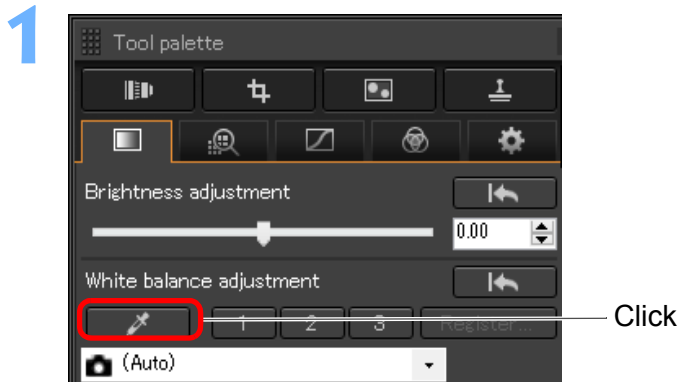


2 Click on a point that is to be the standard for white.

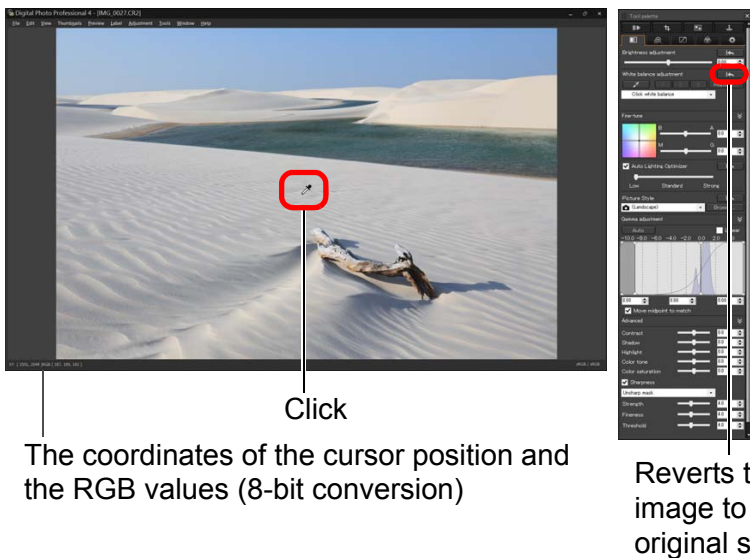

? When there are no white areas in your image

When there are no white areas in your image, you can adjust the white balance by clicking on a grey point of the image in step 2. This has the same adjustment result as selecting a white area.

 You cannot change or adjust white balance with multiple-exposure RAW images created on the camera.


Advanced

Adjusting White Balance with Color Temperature

White balance can be adjusted by setting a numerical value for color temperature.

1 Select [Color temperature] from the [White balance adjustment] list box.

2 Set the color temperature.

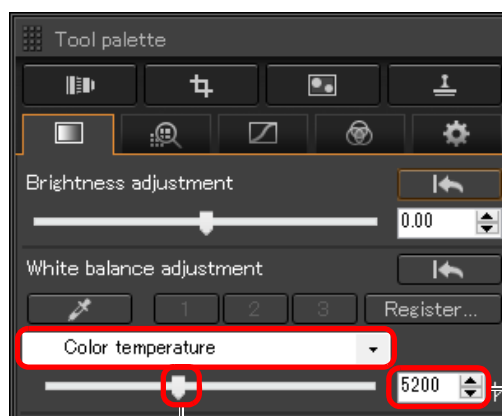

Drag the slider left or right

Displays the value of the setting


The adjustment range is 2000 to 10000K (in 10K increments).

Advanced

Tuning White Balance

This is a function that makes fine adjustments to the white balance. Using this function, you can achieve the same effects as third-party color temperature conversion filters and color correction filters. The adjustable range is ± 10 steps. This function is aimed particularly at high-end users who are familiar with the roles and effects of color temperature conversion filters and color correction filters.

Tune the white balance by dragging the point in the adjustment screen in the [Fine-tune] panel.

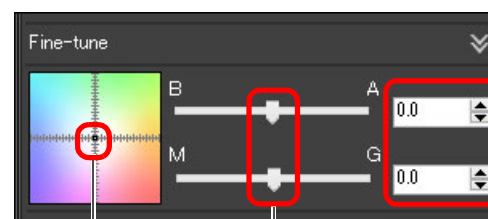

Drag

Drag the sliders left or right

Enter the values to set


- B stands for blue, A for amber, M for magenta and G for green. The color is adjusted towards the color to which the point moves.
- You can also fine-tune your adjustment by using the sliders or entering the adjustment values.

- ! To register the adjustment outcomes as a personal white balance (p.132), select a setting other than [] from the [White balance adjustment] list box before tuning the white balance. If you selected [] from the list box and tuned the white balance, you cannot then register the outcomes as a personal white balance.
- You cannot change or adjust the white balance in multi-exposure RAW images generated on the camera.

The adjustable range is 0 to ± 10 . (in 0.1-stop increments when entering a value).

Adjusting Contrast

Modulation and degree of contrast can be adjusted. Move the slider to the right to make contrast stronger and to the left to make contrast weaker.

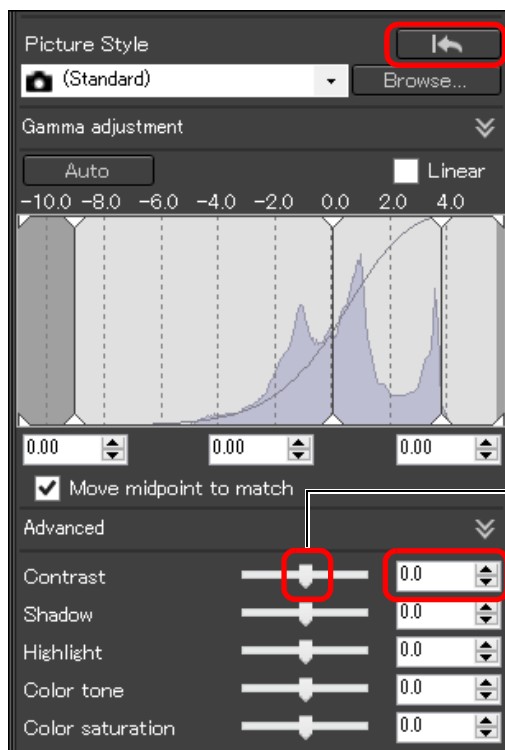

Reverts the image to the original settings


Drag the slider left or right (9 steps)

Enter a setting (in 0.1-stop increments)

Advanced

Adjusting Brightness of Shadows/Highlights

You can adjust the brightness of shadows and highlights in an image. By adjusting only shadows or highlights in an image, you can reduce the effects of clipping in shadows and highlights.

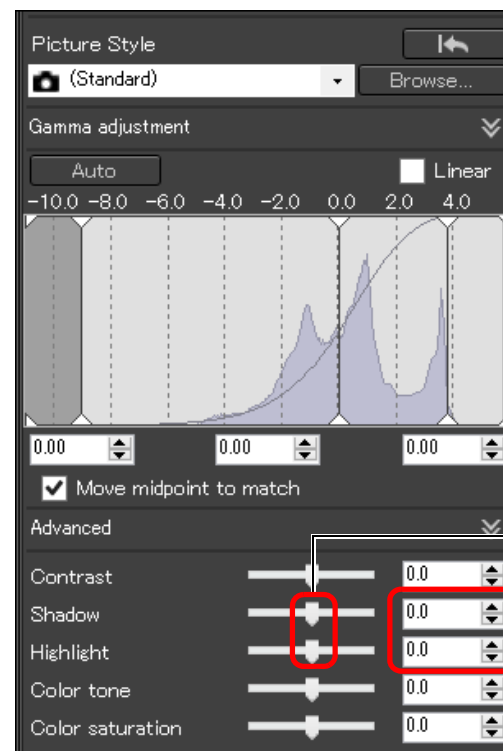

Drag the sliders left or right

Enter a setting (in 0.1-stop increments)



If you make a major adjustment to the highlights or shadows in an image, the image may look unnatural. In such a case, reduce the degree of adjustment.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



Changing Color Tone and Color Saturation

Tone and overall color saturation can be adjusted.

If Picture Style (p.49) is set to [Monochrome], [Color tone] and [Color saturation] switch to [Filter effect] and [Toning effect] (this page).

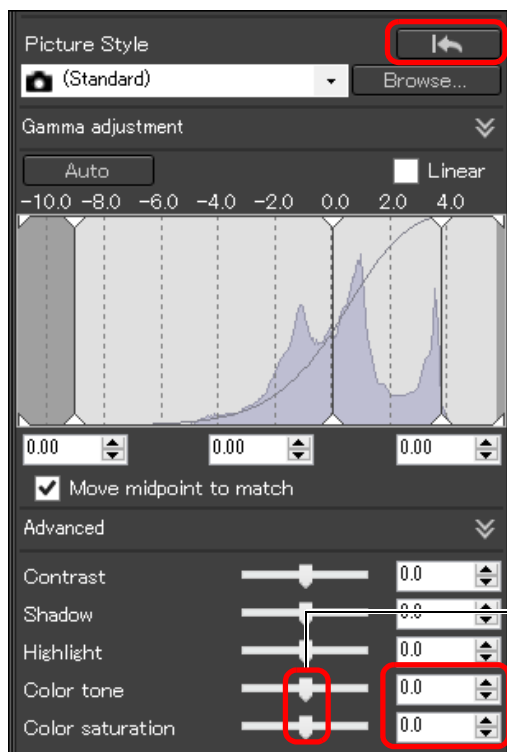

Reverts the image to the original settings

Drag the sliders left or right

Enter a setting (in 0.1-stop increments)


- **Color tone:** Move the slider to the right to make tones more yellowish, and to the left to make tones more reddish.
- **Color saturation:** Adjusts the overall color intensity for the image. Move the slider to the right for more intense colors, and to the left for less intense colors.

Adjusting Monochrome

When the Picture Style (p.49) is set to [Monochrome], you can create monochrome photographs with effects similar to filtering, or with a look of monotone color photograph.

1 Select [Monochrome] in the [Picture Style] list box.

2

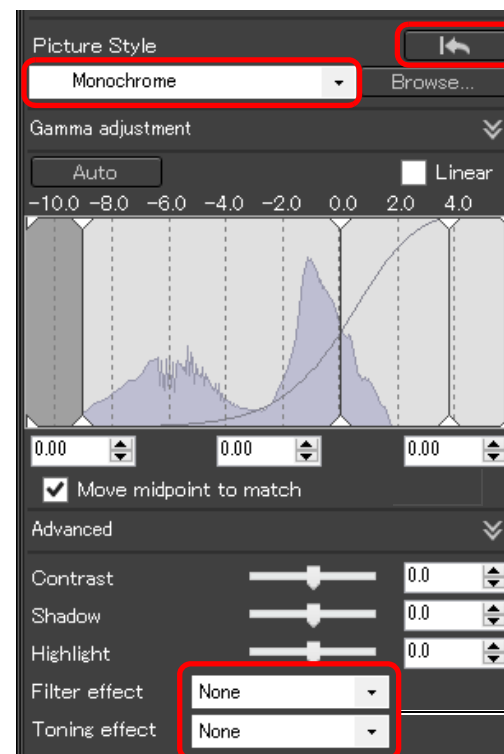

Reverts the image to the original settings

Displays the values of the settings



The adjustment range is -4 to +4.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



- **Filter effect:** Creates a monochrome photograph where the white of clouds and the green of trees are emphasized.

Filter	Example of effect
None	General monochrome image without filter effect.
Yellow	Blue sky is reproduced more naturally and white clouds emerge clearly.
Orange	Blue sky becomes somewhat darker. The brightness of the setting sun increases further.
Red	Blue sky becomes quite dark. Autumn leaves become clear and bright.
Green	Human skin tones and lips become softer. The green leaves of trees become clear and bright.

- **Toning effect:** Creates a monochrome photograph to which a single color has been added. You can choose from [None], [Sepia], [Blue], [Purple] and [Green].




Increase the [Contrast] to emphasize the filter effect

To emphasize the filter effect, set the [Contrast] slider to the right.

Advanced

Adjusting Dynamic Range

Dynamic range (width of gradation expression) from dark points to bright points in an image can be adjusted.

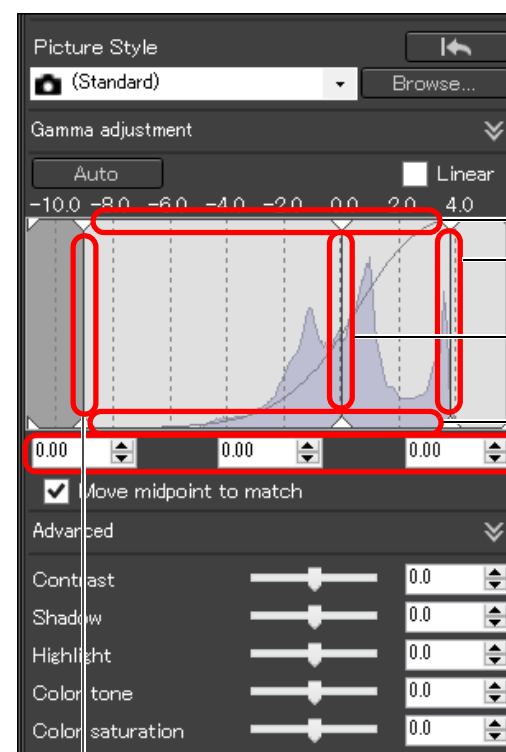

Move downwards
Output white points

Move to the left or right
Input white points

Move to the left or right
Mid (medium tone) point

Move upwards
Output black points

You can also adjust
the dynamic range by
entering values

Move to the left or right
Input black points

- The horizontal axis shows the input level and the vertical axis shows the output level.
- Checkmark the [Move midpoint to match] checkbox to link the mid-point to your adjustments to the input white points and input black points.

To emphasize the filter effect, set the [Contrast] slider to the right.



[Linear] - A function for advanced adjustment

Use [Linear] when you adjust images using image editing software that has advanced editing functions. Note that when [Linear] is checkmarked, the image becomes dim.




[Contrast], [Highlight], [Shadow], and [Auto Lighting Optimizer] (p.58) will not function when [Linear] is checkmarked.

Adjusting Gradation and Luminance Automatically

In order to give the image desirable gradations and luminance, automatic adjustments are applied for an appropriate dynamic range.

Click the [Auto] button.

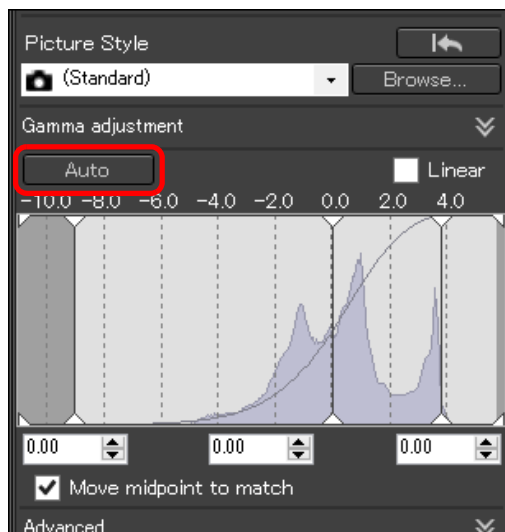

→ In order to give the image desirable gradations and luminance, the dynamic range is automatically adjusted.

- White points, midpoint, and black points in the [Gamma adjustment] panel as well as [Highlight] and [Shadow] in the [Advanced] panel are adjusted automatically.
 - Settings that are reset and those that are not with this adjustment are as follows.
 - Settings that are reset
 - Auto Lighting Optimizer
 - [Contrast] in the [Advanced] panel
 - Settings that are not reset
 - Brightness adjustment
 - White balance adjustment
 - Linear*
- * White points and black points are automatically adjusted.



An image may look unnatural after automatic adjustment. In such a case, reduce the degree of shadow and highlight adjustment.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Using the Auto Lighting Optimizer

If the shooting result is dark or the contrast is low, you can use the Auto Lighting Optimizer function to auto-correct the brightness and contrast, and obtain a more favorable image.

You can also change the setting of the image shot with the camera's Auto Lighting Optimizer function.

This function also can be used for JPEG/TIFF images in addition to RAW images.

* ALO stands for Auto Lighting Optimizer.

1 Checkmark the [Auto Lighting Optimizer] checkbox.



- For the image shot with the camera's Auto Lighting Optimizer function, the checkbox is already checked.

2 Change the setting according to your preferences.



- Auto correction is applied to the image to match the setting.
- For the image shot with the camera's Auto Lighting Optimizer function, the setting at the time of shooting is applied as the default value.
- To cancel the Auto Lighting Optimizer, remove the check mark from the checkbox.

- ! When [Highlight tone priority] is set to [Enable] on any supported EOS DIGITAL camera other than the EOS-1D Mark IV or EOS 5D Mark II, the Auto Lighting Optimizer cannot be used for RAW images.
- You cannot use the Auto Lighting Optimizer with multiple-exposure RAW images created with the camera.
- When you apply Auto Lighting Optimizer to the RAW and JPEG images shot simultaneously, the correction results of the two images may differ.



Adjusting Image Sharpness

You can make the overall atmosphere of an image sharper or softer. Adjustment can be made by selecting from two modes, [Sharpness] and [Unsharp mask].

[Sharpness]: Controls the sharpness of an image by adjusting the level of emphasis for the outline of the image. The further to the right the [Sharpness] slider is moved (the larger the setting value), the more the edges are emphasized for a sharper image.


[Unsharp mask]: Adjusts the image's sharpness more finely.

[Strength]: Shows the level of emphasis for the outline of the image. The further to the right the slider is moved (the larger the setting value), the more the image's edges are emphasized for a sharper image.

[Fineness]: Shows the fineness of the emphasized outline. The further to the left the slider is moved (the smaller the setting), the easier it becomes to emphasize fine details.

[Threshold]: Sets "how much contrast difference there should be compared to surroundings before emphasizing edges".

Select [Sharpness] from the list box and adjust the setting.

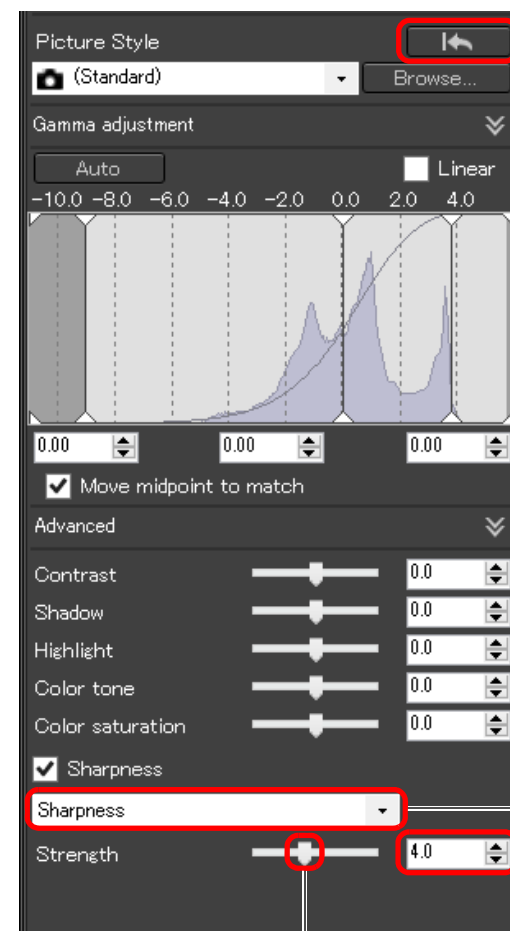


Reverts the image to the original settings

Select [Sharpness]

Enter a setting (in 0.1-stop increments)

Drag the slider left or right

 [Unsharp mask] cannot be used with images other than RAW images.

 The adjustment range is 0 to 10.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos


HDR PQ
Mode

Specifying
Preferences



Detailed Setting of Image Sharpness

Select [Unsharp mask] from the list box and adjust the setting.

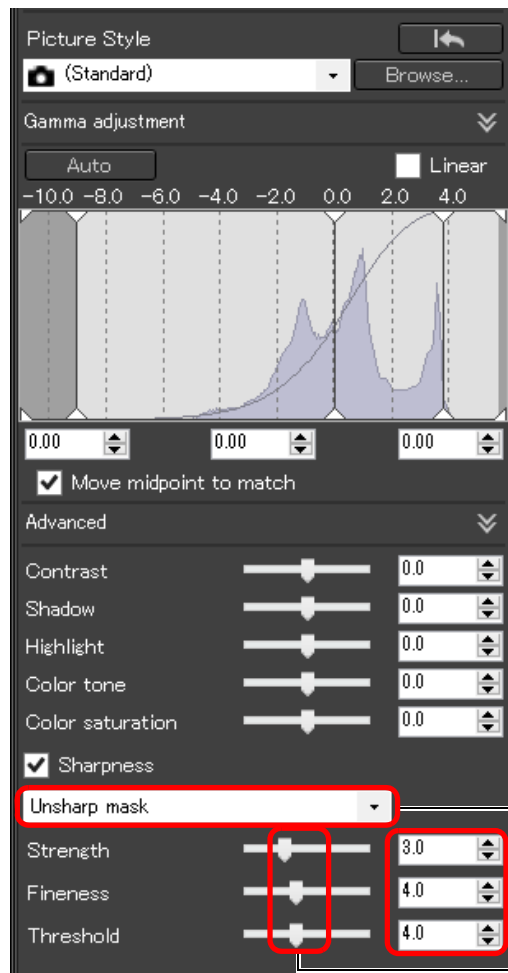

Select [Unsharp mask]

Enter a setting (in 0.1-stop increments)

Drag the slider left or right



Adjust image sharpness with the window view set to [400%], [200%] or [100%]. If the view is set to [Fit to window] (full view), you may not be able to correctly check the adjustment results.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Editing with the Tone Adjustment Tool Palette

With the Tone Adjustment tool palette, you can adjust images with the same functions as general image editing software.


1 Select an image in the main window, etc.

2 Display the Tone Adjustment tool palette.

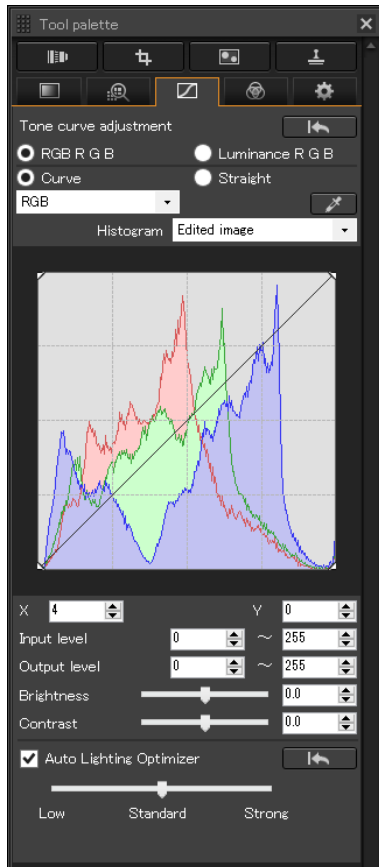

Adjusting Brightness and Contrast

The brightness and contrast of an image can be adjusted. Since the adjustment range is broader than the same functions in the Basic Adjustment tool palette, the image color may be saturated, or the image quality may deteriorate if you adjust too much. Be especially careful when adjusting.

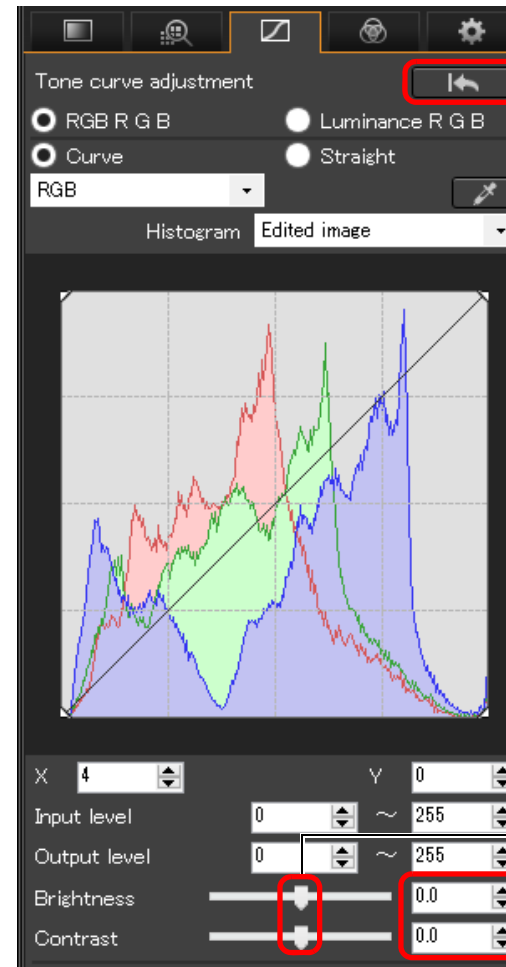

Reverts the image to the original settings

Drag the sliders left or right

Enter a setting (in 0.1-stop increments)

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




- **Brightness:** Move the slider to the right to make an image brighter and to the left to make an image darker.
- **Contrast:** Used to adjust modulation and degree of contrast of color. Move the slider to the right to make contrast of an image stronger and to the left to make contrast weaker.

Adjusting Color Tone Using Click White Balance

You can adjust white balance using a selected part of an image as the standard for white to make the image appear natural. Using click white balance is effective when using it in parts of an image where white color tone has changed under the influence of a light source.

1 Click the [] button.

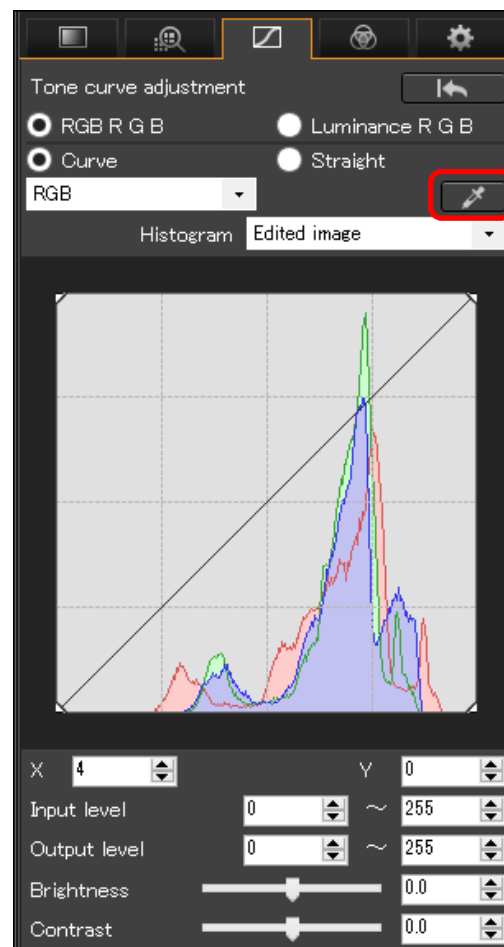

The adjustment range is -100 to $+100$ (in 0.1-stop increments when entering a value).

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




2 Click on a point that is to be the standard for white.

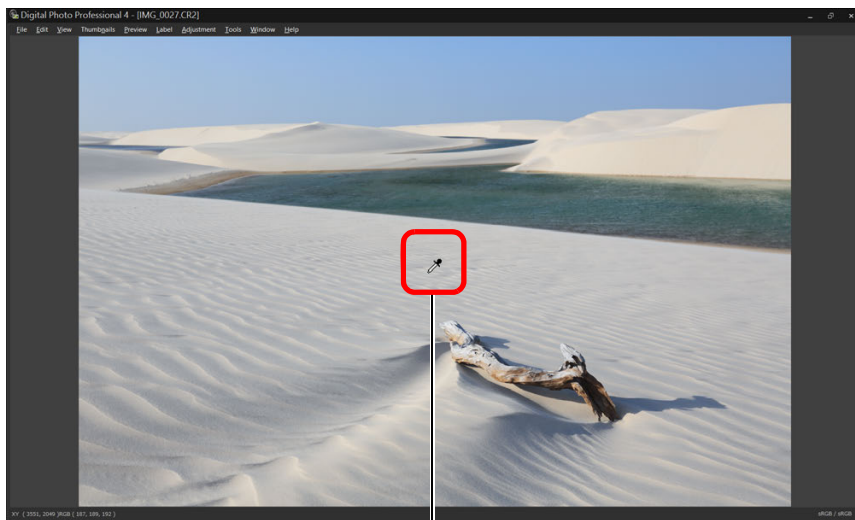


Click

The coordinates of the cursor position and the RGB values (8-bit conversion)

- The color of the image is adjusted with the point you selected as the standard for white.
- If you click on another point in the image, the white balance is adjusted again.
- To finish click white balance, right-click with the mouse or click the [] button again.

? When there are no white areas in your image

When there are no white areas in your image, you can adjust the white balance by clicking on a grey point of the image in step 2. This has the same adjustment result as selecting a white area.


 The histogram display changes according to adjustment. You can also display the histogram before making any adjustments.

Advanced

Adjusting Tone Curve

You can adjust the brightness, contrast and color of a specific area by changing the tone curve (p.167).

1 Select the tone curve mode and interpolation method.

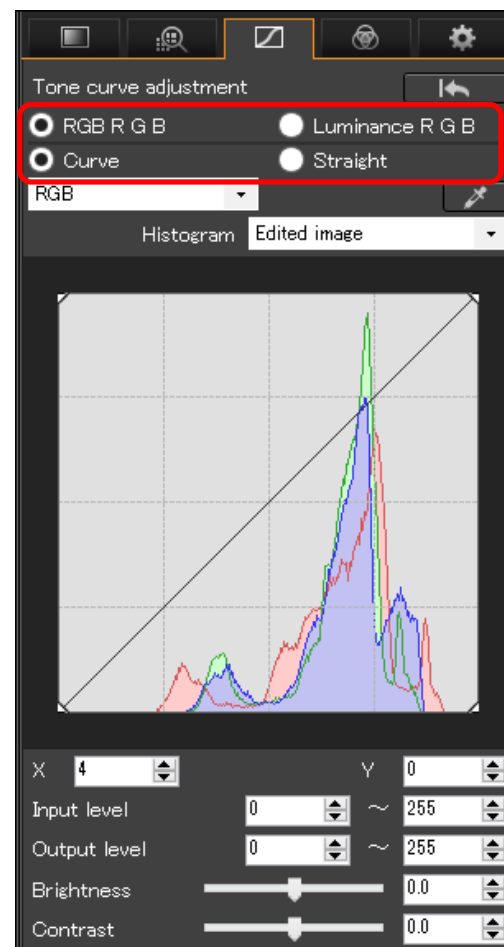

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



2 Make adjustments.



RGB: Adjusts RGB in a batch
R, G, B: Adjusts each channel


You can display pre- and post-adjustment histograms

Coordinates of [] (when several coordinates are set, coordinates of last-set [])


- The horizontal axis shows the input level and the vertical axis shows the output level.
- The maximum number of [] is 8.
- To delete a [], either press the key or double-click on the [].

Example of a Tone Curve Operation


Makes medium tones brighter

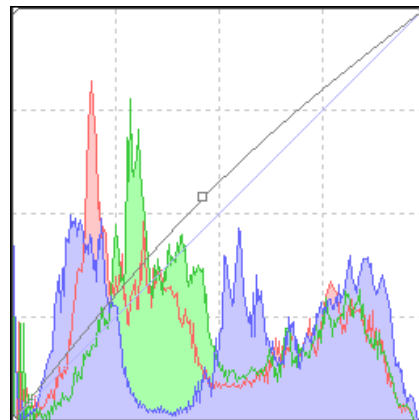


Makes medium tones darker

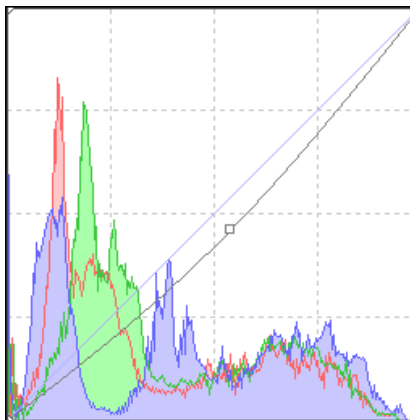

Makes tones sharper

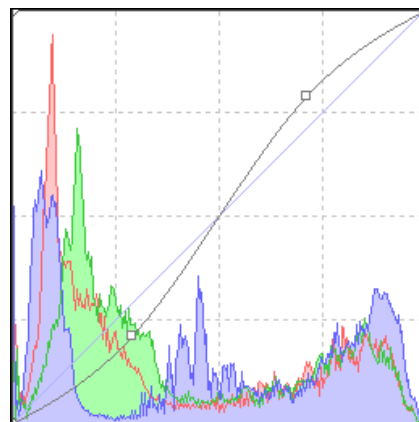

Makes tones softer

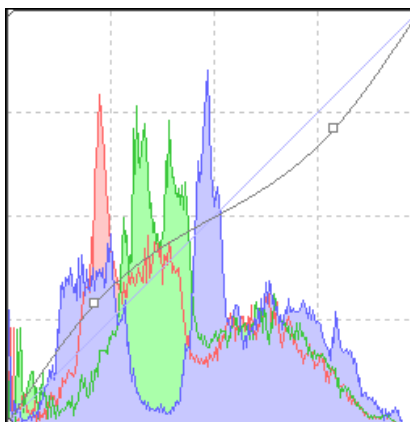

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences






Advanced

Adjusting Dynamic Range

Dynamic range (width of gradation expression) from dark points to bright points in an image can be adjusted.

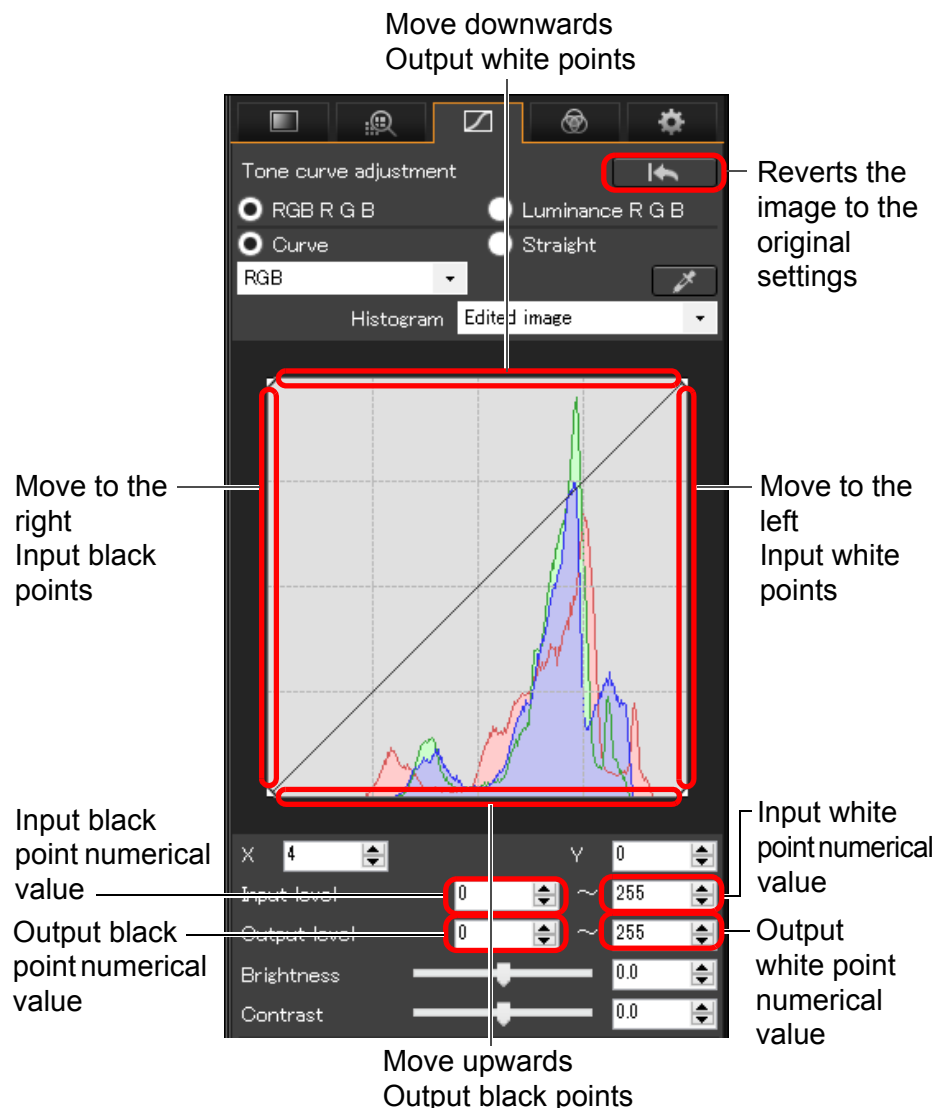

- The horizontal axis shows the input level and the vertical axis shows the output level.



- The setting range of black points is 0 to 247 (in 1-stop increments when entering a value).
- The setting range of white points is 8 to 255 (in 1-stop increments when entering a value).
- You can display pre- and post-editing histograms ([p.64](#)).

Using the Auto Lighting Optimizer


For information on using the Auto Lighting Optimizer, see “Using the Auto Lighting Optimizer” ([p.58](#)) in “Editing with the Basic Adjustment Tool Palette”.

Editing with the Color Adjustment Tool Palette

With the Color Adjustment tool palette, you can adjust the hue, saturation and luminance in a specific color gamut for 8 color gamuts (red, orange, yellow, green, aqua, blue, purple and magenta). You can also adjust the hue and saturation for the entire image and tune monochrome images.

1 Select an image in the main window, etc.

2 Display the Color Adjustment tool palette.

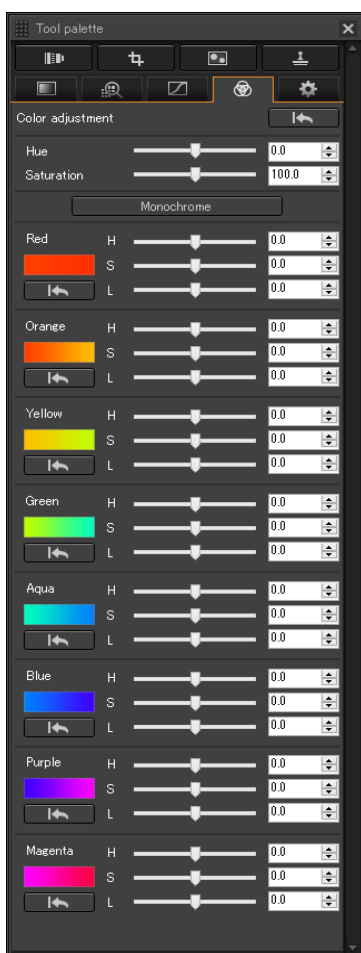

Advanced

Editing with the Color Adjustment Tool Palette


Adjusting a Specific Color Gamut

Use the sliders to make adjustments. You can also make adjustments by directly entering a numeric value.

H: Adjusts the hue.

S: Adjusts the saturation.

L: Adjusts the luminosity.

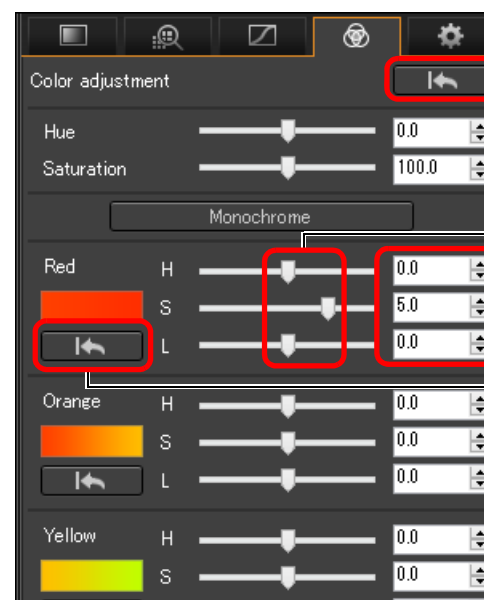

Revert all adjustments to the original settings

Drag the sliders left or right

Enter the values to set

Revert color gamut adjustments to the original settings



The adjustment ranges are as follows:

H: -20 to +20

S: -10 to +10

L: -10 to +10

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



Adjusting Hue and Saturation for an Entire Image


Use the sliders to make adjustments. You can also make adjustments by directly entering a numeric value.

- **Hue:** Move the slider to the right to make color tones more yellowish, and to the left to make color tones more reddish.
- **Saturation:** Adjusts the overall color intensity for the image. Move the slider to the right for more intense colors, and to the left for less intense colors.

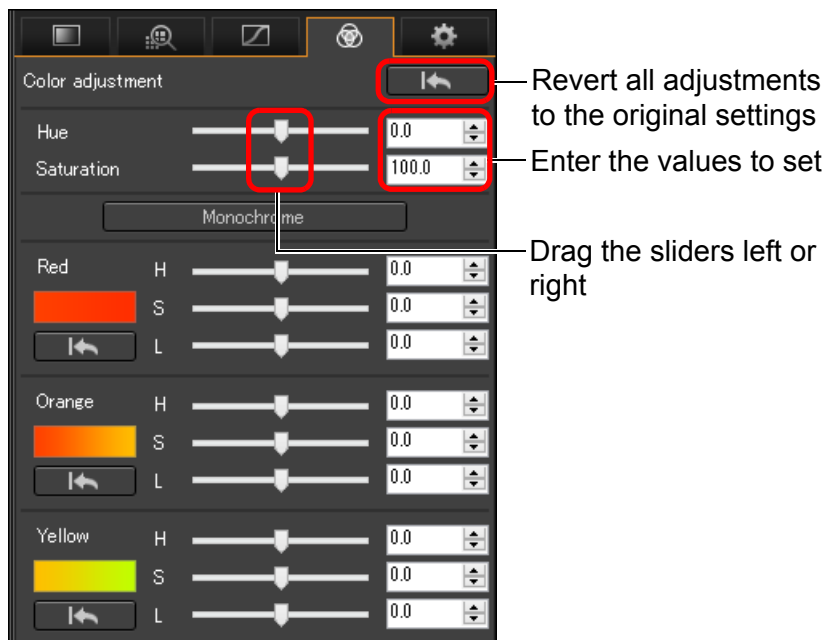

Adjusting in Monochrome

Press the [Monochrome] button to set the 8 color gamuts to their least saturation (-10) and create a monochrome image. After creating it, you can tune the monochrome image with the H and L sliders for each color gamut, adjusting the hue and brightness.

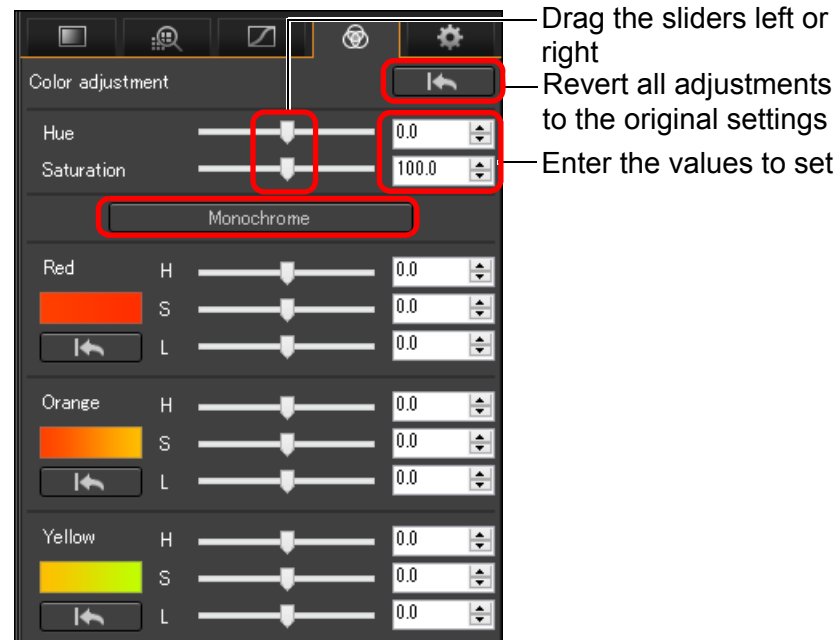

The adjustment range for hue is -30 to +30; and for saturation is 0 to 200.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Editing with the Detailed Adjustment Tool Palette

You can use the Detailed Adjustment tool palette to reduce the noise that occurs in images shot at night or at high ISO settings. This tool palette can also be used in conjunction with the sharpness adjustment functions. Note that you can use the functions in this tool palette with JPEG and TIFF images as well as RAW images.

1 Select an image in the main window, etc.

2 Display the Detailed Adjustment tool palette.

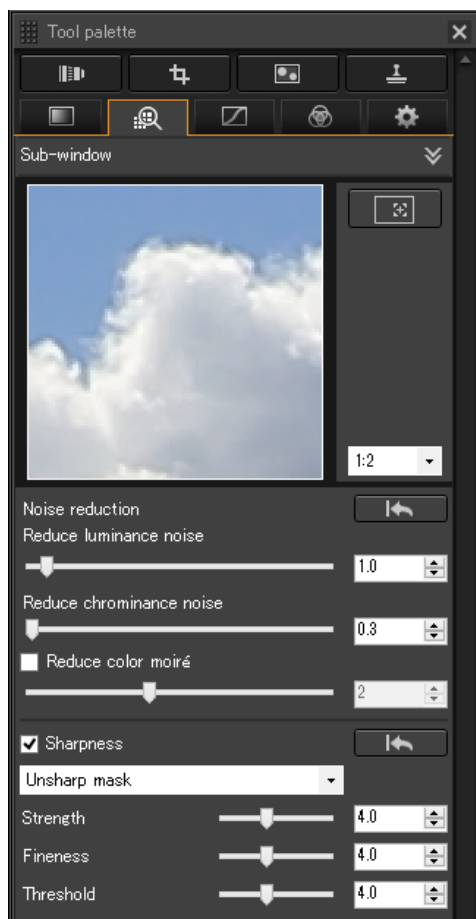


Reducing Noise

You can reduce noise that arises in images shot at night or with a high ISO speed.

* NR stands for Noise Reduction.

Adjust an image.

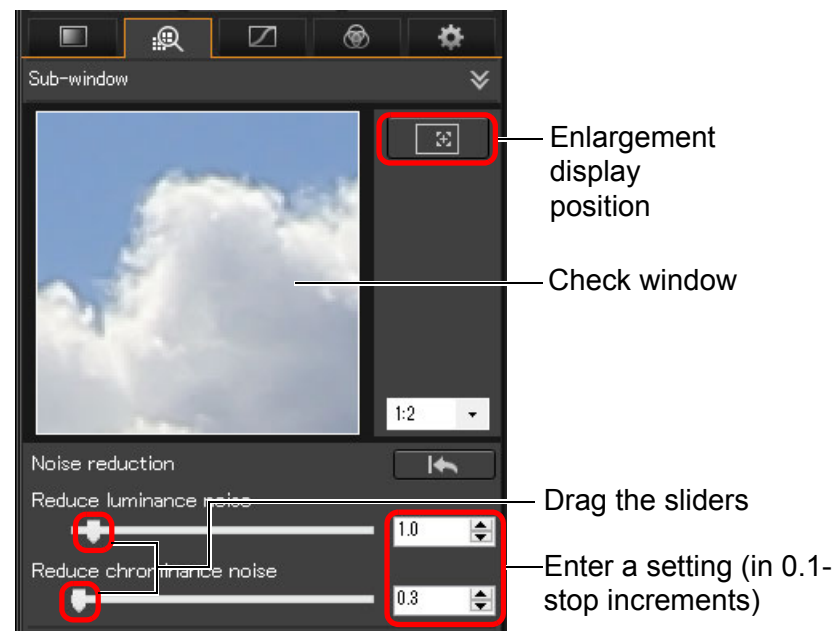

- You can set a noise reduction level from within a range of 0 to 20. The larger the setting, the larger the noise reduction effect.
- The noise reduction effect can also be checked in the check window.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos


HDR PQ
Mode

Specifying
Preferences



Setting the same noise reduction level for several images

You can set the same noise reduction level for several images by first selecting multiple images in the main window, and then adjusting the noise reduction level using the [Reduce luminance noise] and [Reduce chrominance noise] sliders.

-  ● If [Reduce luminance noise] is set, resolution may be reduced along with reduction of noise.
- If [Reduce chrominance noise] is set, color bleeding may occur along with reduction of noise.

Adjusting Image Sharpness


You can also use this palette to adjust the image sharpness. For information on making adjustments, see “Adjusting Image Sharpness” in “Editing with the Basic Adjustment Tool Palette” ([p.59](#)).


Reducing Color Moiré in an Image

You can reduce color moiré* occurring in an image.

*Color moiré: Occurrence of a color appearing that is not originally in an image. In particular, tends to occur when taking photos of latticed or similar patterns.

Checkmark the [Reduce color moiré] checkbox and adjust using the slider.

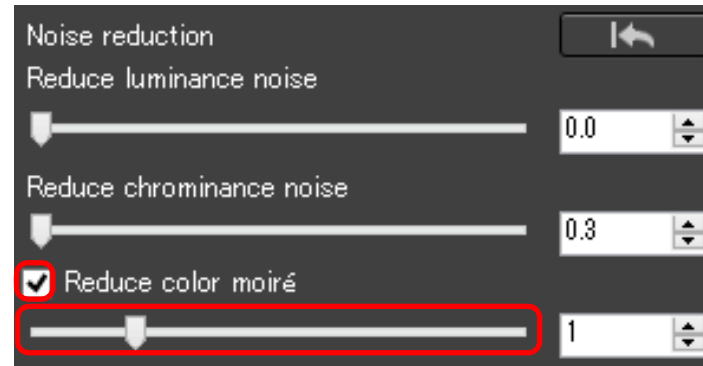

-  ● Depending on the subject, you may not be able to correct color moiré completely.
- Using this function may cause hue to change depending on the subject. If there is a noticeable change in hue, lower the level of adjustment.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Editing with the Trimming/Angle Adjustment Tool Palette

You can crop only the part of an image you need, or change the composition of an image where an image shot horizontally becomes vertical. You can also adjust the angle of an image before cropping.

- 1 Select the image to be cropped.
- 2 Display the Trimming/Angle Adjustment tool palette.
 - You cannot make adjustments with the Trimming/Angle Adjustment tool palette in a window that only shows thumbnails.
- 3 Adjust the angle of the image as needed.

Trimming/angle adjustment window

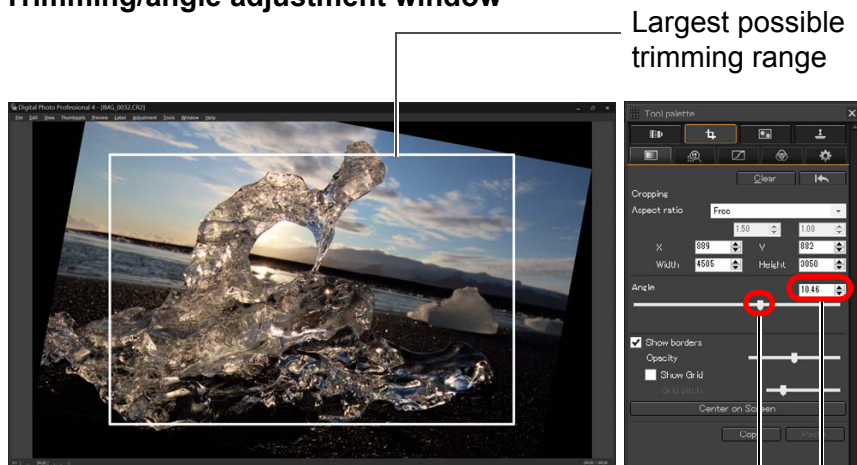


Drag (0.01-degree increments; adjustment range: -45 to +45 degrees)

Use the mouse (click ▲/▼) to adjust the angle or directly enter the adjustment angle (0.01-degree increments; adjustable range: -45 to +45 degrees)

- If you click [Center on Screen], you can display the trimming range in the center of the window.
- When correcting lens aberrations, it is recommended to perform lens aberration correction before adjusting the angle of the image.
- If you have only adjusted the angle of the image, the image will be cropped at the largest possible trimming range.

4 Select a ratio and drag the trimming range.

Select a trimming ratio

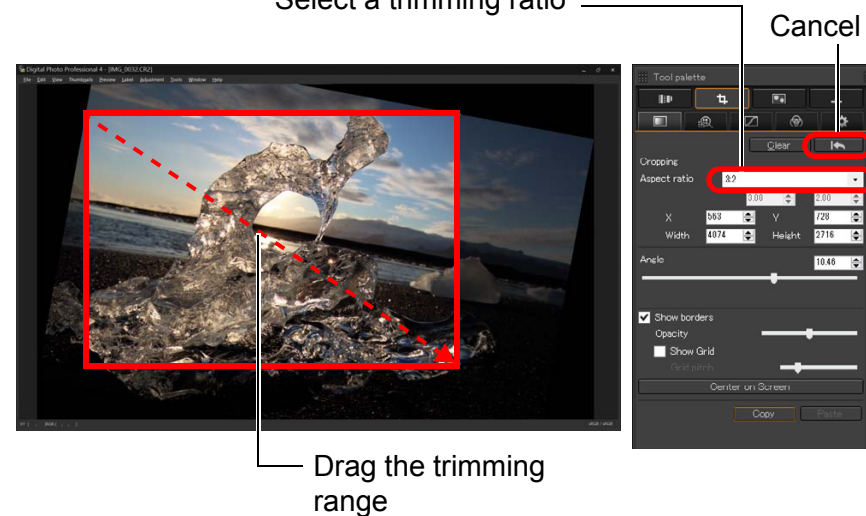

- The trimming range can be moved by dragging.
- You can enlarge or reduce the size of the trimming range by dragging the four corners of the trimming range.



When aspect ratio information is attached to an image shot with any supported camera other than the EOS 5D Mark II, the displayed trimming range is based on the aspect ratio information.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



- List of aspect ratios (width : height)

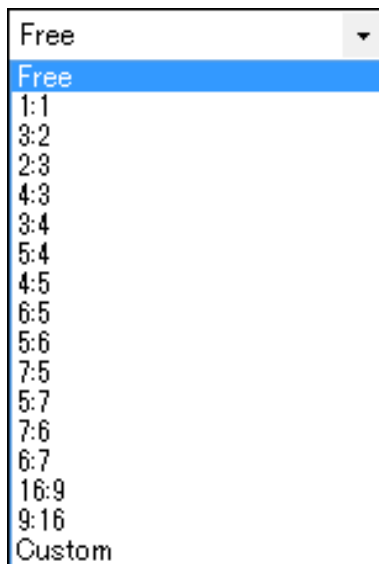

[Free]: You can crop an image to any size, regardless of the selectable ratio.

[Custom]: You can crop an image at the specified ratio.

5 Return to the main window.

- The trimming range frame is displayed in the cropped image (p.166).
- When the cropped image is displayed in a preview window or the edit image window, it is displayed in its cropped form.

? Cropped images

- The trimmed range can be reverted to its original condition at any time**

A cropped image is displayed or printed as a cropped image. However, since the image is not actually cropped, you can always revert to the original image by clicking the [↶] button in the trimming/angle adjustment window or performing the “Re-Editing an Image” procedure (p.95).

- Display of the cropped image in each window**

- Main window: The frame showing the trimming range is displayed on the image (p.166).
- Preview window: The image is displayed in its cropped condition.
- Edit image window: The thumbnail image is the same as the main window display, and the enlarged image is the same as the preview window display.

- Printing a cropped image**

You can print as a cropped image by printing it in DPP.

- The image becomes a cropped image when converted and saved**

The cropped RAW image actually becomes a cropped image when converted to a JPEG or TIFF image and saved (p.93).

- Images that have aspect ratio set will be displayed as cropped images**

When aspect ratio or cropping information is attached to a RAW image shot with any supported camera other than the EOS 5D Mark II, the image will be displayed with the set trimming range based on the information. Since the image is not actually cropped, you can change the trimming range or revert to its condition before cropping. However, when a JPEG image is shot either with an aspect ratio set with a camera that supports aspect ratio information or with the EOS 5DS/EOS 5DS R set to crop shooting, its trimming range cannot be changed or the image cannot be reverted to its condition before cropping since the image is actually cropped and saved.*

When reverting to the trimming range that is based on the aspect ratio information at the time of shooting, click the [↶] button. Also, if you want to cancel all the trimming range, click the [Clear] button.

* When shooting with EOS 5DS/EOS 5DS R, EOS 5D Mark IV, EOS 5D Mark III, EOS R/Ra/RP (with any setting other than [1.6x (crop)]), or EOS 7D Mark II and [Add cropping information] is set in Custom Functions, aspect ratio information is only set and the image is not actually cropped, even for JPEG images.

● Operate using the menu

Each operation can also be performed with the menu which appears when you right-click with the mouse on the image.

● Apply the trimmed range to another image

You can apply the trimmed range to another image by clicking the [Copy] button to copy the trimmed range, displaying another image and then clicking the [Paste] button.

To batch apply a copied trimming range to multiple images, select the cropped image in the main window together with the images to which you want to apply the trimming range and then display the Trimming/Angle Adjustment tool palette. With the cropped image displayed, click the [Copy] button and then click the [Paste] button. This will apply the trimming range to all the images selected when the trimming/angle adjustment window is displayed.

To select multiple images in the main window, click the images while holding down the <Ctrl> key. To select multiple consecutive images, click on the first image, and then click on the last image while holding down the <Shift> key.

! For images shot with ISO speed range expansion set, noticeable noise may make it difficult to view the image in detail in the trimming/angle adjustment window.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Editing with the Lens Correction Tool Palette

With the Lens Correction tool palette, you can use the lens aberration correction functions and the Digital Lens Optimizer to correct lens aberration in your images and to improve their resolution. This tool palette can also be used in conjunction with the sharpness adjustment functions. Note that the lens aberration correction functions and the Digital Lens Optimizer can only be used with RAW images.

1 Select an image in the main window, etc.

2 Display the Lens Correction tool palette.

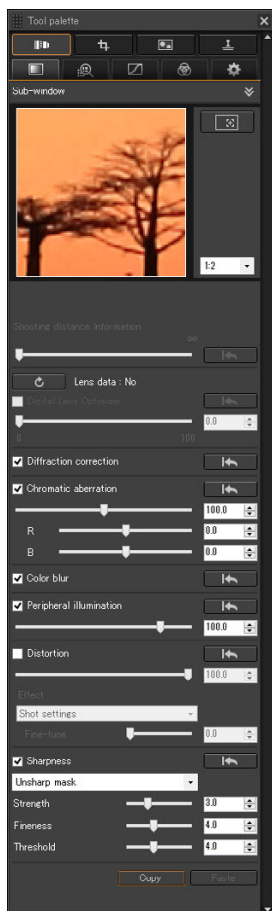

Correcting Lens Aberration

You can easily make corrections to drops in peripheral illumination, distortions in the subject, and color blur which occur by the physical characteristics of the lens or slightly remaining aberration.

You can only correct aberration in RAW images which have been shot with compatible lenses. JPEG or TIFF images cannot be corrected.

Note that even though the EOS 20D/EOS 20Da, EOS 10D, EOS D2000, EOS D6000, EOS D30, EOS D60, EOS DIGITAL REBEL XT/350D DIGITAL, and EOS DIGITAL REBEL/300D are EOS DIGITAL cameras supporting the Digital Photo Professional, they are not compatible with the lens aberration correction function. Also, note that the lens aberration correction function is compatible with the EOS 5D with the firmware version 1.1.1 and the EOS 30D with the firmware version 1.0.6.

! To use this function, the EOS Lens Registration Tool (version 1.4.20 or later) must be installed.

- Lenses compatible with this function are those displayed in the [Add or Remove lens data] window (p.79).
- You can also correct RAW images taken with the compatible lens even when the extender is attached.
- You can also correct RAW images shot with EF50mm f/2.5 Compact Macro fitted with Life Size Converter EF.
- The aberration correction function is not available for images shot with a lens other than those given under “Compatible Lenses”. They are therefore not displayed and cannot be used.
- The lens aberration correction function is not available for multiple-exposure RAW images created on the camera.
- EF cinema lenses (CN-E lenses) are not compatible.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences





Making Corrections


You can make corrections to any of the five aberrations as below, either one at a time or simultaneously.

- Peripheral illumination
- Chromatic aberration (color fringing which occurs in the periphery of an image)
- Color blur (blue or red color blur which sometimes occurs at the edge of the highlighted area of an image)
- Distortions
- Diffraction

1 Select an image in the main window.

2 Display the Lens Correction tool palette and checkmark the items to be corrected.

Enlargement display section

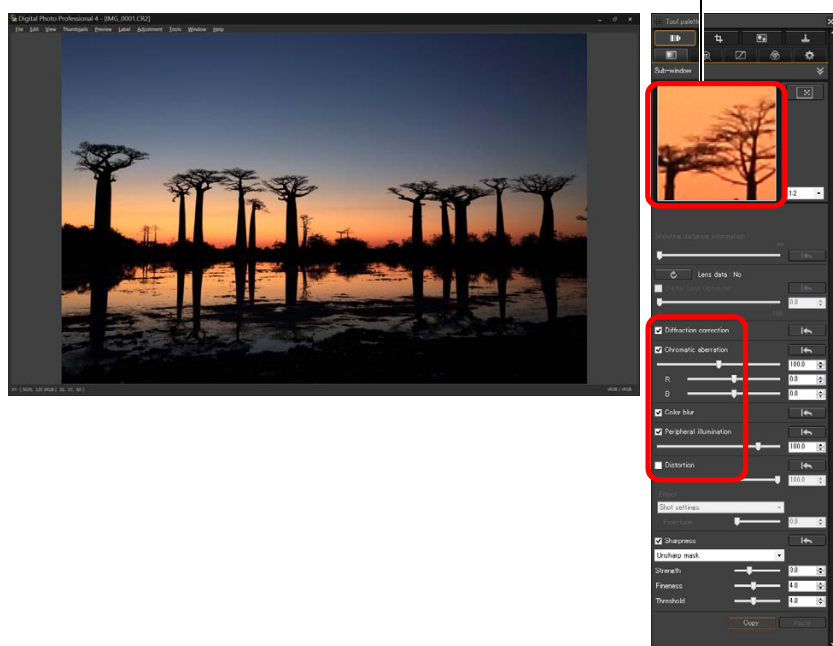

- The image is corrected and redisplayed.
- In the main window, the [●] mark is displayed on the image to indicate that the lens aberration correction is applied (p.166).

- Check the results of corrections to peripheral illumination or distortions in the full view.
- Check the results of corrections to chromatic aberration and color blur by clicking the area on the image you want to check and then checking the enlargement display section in the top of the window. You can choose from 4 display scales between 1:1 and 1:4 for the enlargement display.
- You can lessen the degree of correction by moving the slider to the left.
- You can respectively correct red chromatic aberration with the [R] slider of the [Chromatic aberration] or blue chromatic aberration with the [B] slider.
- To correct distortion aberration of images shot with a fisheye lens (EF8–15mm f/4L USM Fisheye or EF15mm f/2.8 Fisheye), four effects can be selected from the [Effect] list box in addition to [Shot settings] normally used for distortion correction. The level of an effect can be adjusted with the adjustment slider located below [Distortion]. For detailed information on each effect, see “Effects of Distortion Correction for Fisheye Lenses” (p.75).
- For images shot with EF8–15mm f/4L USM Fisheye, a fine-tune slider is also displayed when you select [Emphasize Linearity] from the [Effect] list box. Adjust the amount of correction for distortion aberration with the adjustment slider, and then adjust with the fine-tune slider if more adjustment is required.
- When the list box for selecting an extender is displayed, select the extender attached at the time of shooting from the list box.
- [Diffraction correction] corrects only those images shot with a camera with a diffraction correction function. By checkmarking this option, images are corrected according to the camera's diffraction correction function. Note that this function cannot be used at the same time as the Digital Lens Optimizer.
- The adjustment range of distortion correction is either [0 to +100] or [–20 to +120], depending on the camera model that was used for shooting. The adjustment range for images shot with a fisheye lens mounted is [0 to +100] regardless of the camera model that was used.

Effects of Distortion Correction for Fisheye Lenses

● Shot settings

By selecting this option, only the aberration corrections will be performed to correct the optical distortions.



● Emphasize Linearity

This converts the image to a “central projection” style image. This projection method is employed for general lenses. Since central projection displays straight lines as straight lines, a wide-view panoramic image can be obtained by selecting this option. However, the periphery is stretched, resulting in decreased resolution.



● Emphasize Distance

This converts the image to an “equidistant projection” style image. This projection method preserves distance relationships. Equidistant projection displays a distance in the same distance anywhere from the center to the periphery. In particular, when shooting a celestial body such as the celestial sphere, same heights above the horizon(declination) are captured at the same heights. This method is therefore used in such photography as celestial photography (star maps, solar path diagrams, etc.).



● Emphasize Periphery

This converts the image to a “stereographic projection” style image. This projection method emphasizes the periphery. Stereographic projection allows position relationships on a spherical surface, such as N, S, E, W on a map, to be displayed correctly. It is therefore used for world maps and monitoring cameras. By selecting this option, the periphery is stretched and may result in decreased resolution.



Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



● Emphasize Center

This converts the image to an “orthographic projection” style image. With this projection method, the center is more emphasized. Since an orthogonal projection allows a subject of the same brightness to be displayed as occupying the same area in the image, this method has typical uses in photography for celestial luminance distributions and center-emphasized animal photography. By selecting this option, the center is stretched and may result in decreased resolution.



⚠ When selecting any of the options, [Emphasize Linearity], [Emphasize Distance], [Emphasize Periphery], or [Emphasize Center], it will yield results similar to that of the selected projection method. However, the conversion does not really apply a change of projection method in a strict sense. Accordingly, be aware that they are not suited for scientific or other such purposes.

Shooting Distance Information Slider

- When correcting RAW images and if shooting distance information has been saved to the image, the slider is set automatically according to this shooting distance information. However, if no shooting distance information is saved to the image, the slider is set automatically to the right end at infinity position and a [<!>] appears above the slider. If the image's shooting distance is not infinite, you can minutely adjust the distance by operating the slider while looking at the screen.
- When correcting RAW images shot with the cameras in the table below, it is set automatically to the right end at infinity position. You can then minutely adjust the distance by operating the slider while looking at the screen if the shooting distance is not infinite.

EOS-1D Mark II N	EOS-1Ds Mark II	EOS-1D Mark II
EOS-1D	EOS-1Ds	EOS 5D
EOS 30D	EOS DIGITAL REBEL XTi/400D DIGITAL	

- For RAW images shot with MP-E65mm f/2.8 1-5x Macro Photo or EF50mm f/2.5 Compact Macro with Life Size Converter EF, the slider indicator changes to [Magnification factor].
- The [Shooting distance information] slider is applied to all the correction items with check marks.
- If the lens requires no adjustment with the [Shooting distance information] slider, the slider cannot be used.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Correcting Multiple Images at a Time

You can apply the same corrections to several images by first selecting multiple images in the main window, and then performing correction procedures (p.74).

Also, you can apply same corrections by copying the recipe of the corrected image and pasting it onto the multiple images (p.97).

? Additional information

- **Some noise appeared in the periphery of an image after correcting [Peripheral illumination]**

You can reduce the noise by using luminance and/or chromatic noise reduction of the noise reduction function (p.68). However, if you had applied high amount of [Peripheral illumination] correction to the images that have been shot at night or with a high ISO speed, the noise might not be reduced.

- **The image appears with less resolution after correcting [Distortion]**

You can make the image similar to the one before correction by applying more sharpness with the sharpness adjusting function (p.69).

- **The colors of the image became weaker after correcting [Color blur]**

You can make the image similar to the one before correction by adjusting the color tone (p.55) and/or the color saturation (p.67) to make the color deeper.

- **The result of [Color blur] correction cannot be detected**

[Color blur] correction is effective for correcting blue or red color blur which occurs at the edge of the highlighted area of an image. If conditions do not match, correction cannot be made.

! The periphery of the image may be truncated when [Distortion] correction is made.

Digital Lens Optimizer

This function enables the resolution of images to be increased by removing any remaining aberration related to image-forming capability or any deterioration of resolution resulting from diffraction phenomena. These optical phenomena cannot be corrected under Lens aberration correction (p.73). Correction is achieved using the designed value of each lens. You can correct these optical phenomena in RAW images which have been shot with compatible lenses. JPEG, TIFF, S-Raw, and M-Raw images cannot be corrected. To use this function, [Lens data] for the lens used to shoot images first needs to be downloaded to your computer. Before using the Digital Lens Optimizer, it is recommended that you set [Sharpness] or [Strength] for [Unsharp mask] for images to 0.

Note that even though the EOS 20D/EOS 20Da, EOS 10D, EOS D2000, EOS D6000, EOS D30, EOS D60, EOS DIGITAL REBEL XT/350D DIGITAL, and EOS DIGITAL REBEL/300D are EOS DIGITAL cameras supporting the Digital Photo Professional, they are not compatible with the lens aberration correction function. Also, note that the lens aberration correction function is compatible with the EOS 5D with the firmware version 1.1.1 and the EOS 30D with the firmware version 1.0.6.

- ! ● To use this function, the EOS Lens Registration Tool (version 1.4.20 or later) must be installed.
- The Digital Lens Optimizer is also available for images shot with an extender attached to a compatible lens.
- You cannot use the Digital Lens Optimizer with multiple-exposure RAW images created on the camera.
- EF cinema lenses (CN-E lenses) are not compatible.
- [Diffraction correction] cannot be used at the same time as the Digital Lens Optimizer.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos


HDR PQ
Mode

Specifying
Preferences




Using the Digital Lens Optimizer

- 1 Check the status of [Lens data] for [Digital Lens Optimizer].

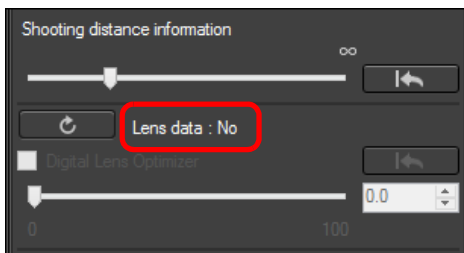


- [Not Available] is displayed for an image shot with a non-compatible camera or lens, or for a non-compatible image such as a JPEG, TIFF, S-Raw, or M-Raw image. The function cannot be used for these images.
- If [No] is displayed, proceed to step 2. To use the function, you need to download the lens data for the lens used when shooting the image. It is recommended that you check the lens used when shooting the image beforehand. The lens used can be checked using the image information and shooting information displays. You can also check it with the menu that appears when you right-click with the mouse on an image.
- If [Yes] is displayed, proceed to step 4.

- 2 Click the [] button.

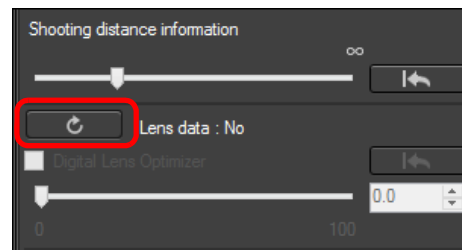

→ The [Add or Remove lens data] window appears.

 To use this function, an environment with Internet access (subscription to a provider and an in-place line connection) is required. Internet Service Provider (ISP) connection fees or access point connection fees may apply.

 Before you click the [] button in step 2, Lens data [No] may be displayed instead of [Not Available] for non-compatible images.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




3 Checkmark the checkbox for the lens used to shoot the image, and click the [Start] button.

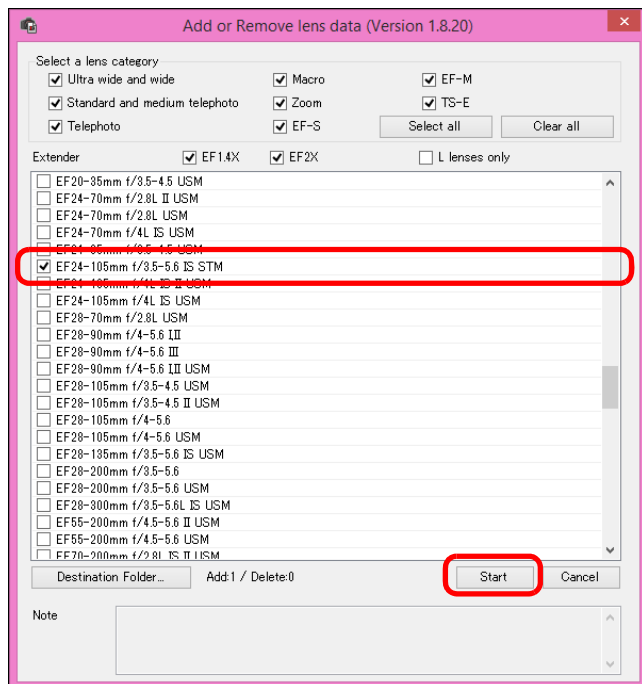

- The lens data is downloaded to your computer.
- When the downloading of the lens data ends, the indication for the lens data changes to [Yes].
- Lenses compatible with this function are those displayed in the [Add or Remove lens data] window.
- If you remove the check mark from the checkbox for already-downloaded lens names and click the [Start] button, the lens data will be deleted from your computer.

- ! • Depending on the type, current state, etc. of software running on your computer, the download of the lens data may fail. If it occurs, wait for a while then try downloading the data again.
- If you want to change the destination where lens data is saved when there is already downloaded lens data, move the previously downloaded lens data from the old folder to the new destination folder manually.

4 Checkmark the [Digital Lens Optimizer] checkbox and adjust the image.

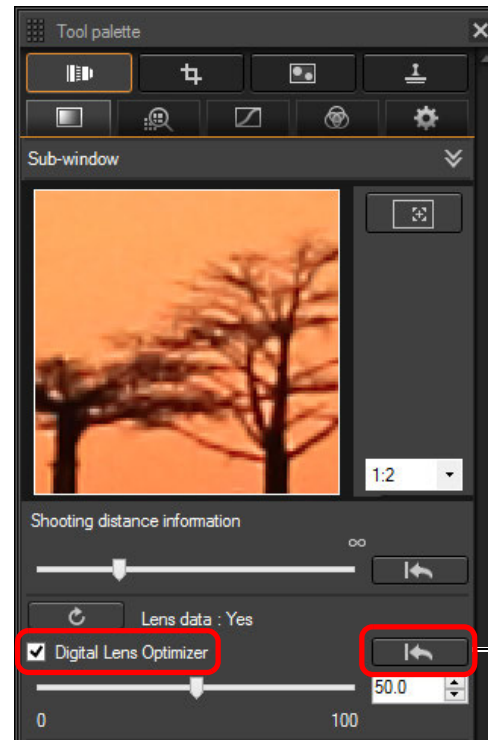

Reverts to its condition before adjustment

! Since the lens data downloaded with DPP version 3.x is not compatible with DPP version 4.x, the lens data must be downloaded again.

! When applying the Digital Lens Optimizer, the effect of [Sharpness] or [Unsharp mask] may become excessive. It is recommended that you set [Sharpness] or [Strength] for [Unsharp mask] for images to 0 before using the Digital Lens Optimizer. Adjust [Sharpness] or [Unsharp mask] again after applying the Digital Lens Optimizer to images.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



- Use the slider to adjust the Digital Lens Optimizer effect.
 - If no shooting distance information is saved to the image, the shooting distance slider is set automatically to the right end at infinity position and a [<!]> appears above the shooting distance slider.
 - If the lens requires no adjustment with the [Shooting distance information] slider, the slider cannot be used.
 - Images cannot be corrected for [Chromatic aberration] in the lens aberration correction tool pallet if the Digital Lens Optimizer has been applied.
- In the main window, the [🔍] mark is displayed on the image to indicate that the Digital Lens Optimizer is applied ([p.166](#)).

Adjusting Image Sharpness

You can also use this palette to adjust the image sharpness. For information on making adjustments, see “Adjusting Image Sharpness” in “Editing with the Basic Adjustment Tool Palette” ([p.59](#)).

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Editing with the Partial Adjustment Tool Palette

The Partial Adjustment tool palette adjusts the selected area of an image.


With this tool palette, you can adjust brightness, contrast, hue, and saturation, and reduce color moiré.

Supported image formats are CR2, CR3, TIFF, and JPG.


 **32bit** On 32-bit OSs, this function is not available.

Making Partial Adjustments to Images ([Brightness], [Contrast], [Hue], [Saturation])

- 1 Select an image in the main window, etc.
- 2 Display the Partial Adjustment tool palette.

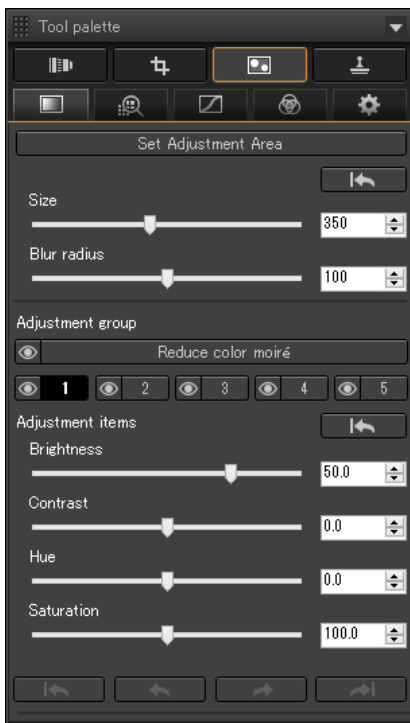

- 3 Select [Adjustment group].

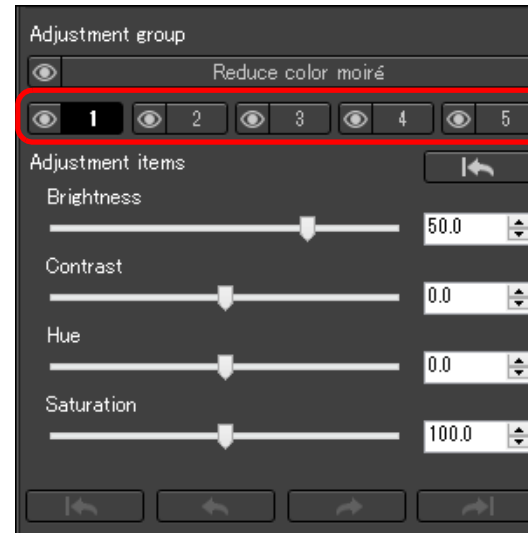

- Select [Adjustment group] from [1], [2], [3], [4], and [5].
(By default, [1] is selected.)
For information on adjustment groups, see “Adjustment Groups” (p.84).

- 4 Click the [Set Adjustment Area] button.



→ A circular cursor appears in the window.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images


Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



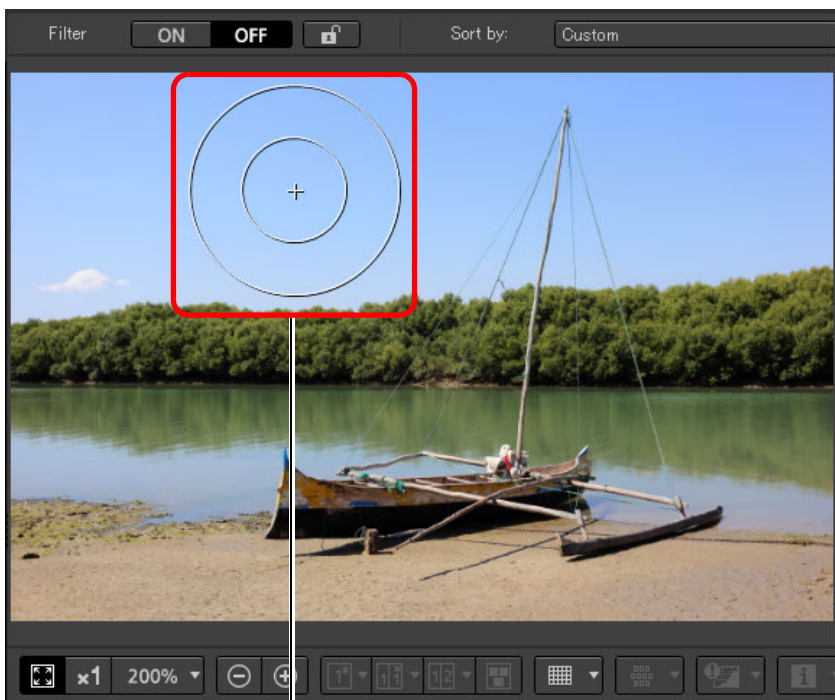

Circular cursor

- 5 Drag the sliders to adjust [Size] and [Blur radius] for the circular cursor.**

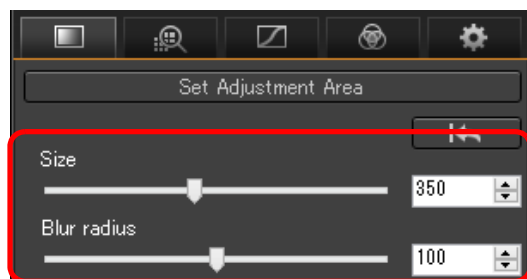

- [Blur radius] adjusts blurring at the border of the selected area.

- 6 Click or drag the circular cursor on the image to select the area of adjustment in the image.**
- 7 Use the sliders to adjust [Adjustment items] as necessary.**



- Adjustments are applied to the area selected in step 6.
- You can use the [Undo All], [Undo], [Redo], and [Redo All] buttons below [Adjustment items] to return and check positions selected with the circular cursor. Available buttons, from the left, are [Undo All], [Undo], [Redo], and [Redo All].

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Making Partial Adjustments to Images ([Reduce color moiré])


This function partially reduces color moiré in images.
Before making adjustments, see “Reducing Color Moiré in an Image”
(p.69) for information on reducing color moiré.

- 1 Select an image in the main window, etc.
- 2 Display the Partial Adjustment tool palette.
- 3 Click the [Reduce color moiré] button in [Adjustment group].
→ A dialog box for [Reduce color moiré] appears.
- 4 Click the [Set Adjustment Area] button, and use the [Size] and [Blur radius] sliders for the circular cursor to make adjustments.
- 5 Click or drag the circular cursor on the image to select the area of adjustment in the image.
- 6 Use the [Reduce color moiré] slider in [Adjustment items] to specify the setting.
→ Adjustments are applied to the area selected in step 5.
 - You can use the [↩], [↶], [↷], and [↪] buttons below [Adjustment items] to return and check positions selected with the circular cursor. Available buttons, from the left, are [Undo All], [Undo], [Redo], and [Redo All].

- ! • Changes edited with this function are not displayed in the following images.
 - Thumbnail images
 - Navigator images
 - Images in the HDR [Select images] window (see p.108, step 3)
 - Images in the [Contact sheet] window for printing a thumbnail list (see p.129, step 3)
 However, edited changes are applied when four images or fewer (JPEG/TIFF images) are selected.
- Changes edited with this function are not applied in the DPP histogram display.



Adjustment Groups

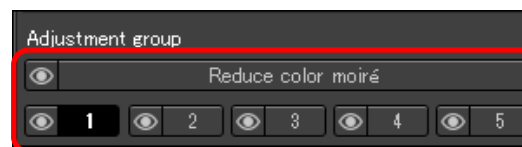

- The Partial Adjustment tool palette comprises 5 adjustment groups that allow adjustments to be made with [Brightness], [Contrast], [Hue], and [Saturation] options, and 1 adjustment group that allows adjustments to be made with the [Reduce color moiré] option.
 - A different adjustment area can be selected for each adjustment group.
 - Adjustment groups [1], [2], [3], [4], and [5] allow different values to be specified even for a same adjustment option.
- By default, adjustments from all adjustment groups are applied to an image. However, you can click the [eye] button and select to apply or not apply adjustments from each adjustment group.
- Positions selected with the circular cursor, that can be checked using the [↩], [↶], [↷], and [↪] buttons below [Adjustment items], can be checked per each group.
- The order of adjustment groups in which adjustments are applied to images is (1) [Reduce color moiré], (2) [1], (3) [2], (4) [3], (5) [4], and (6) [5].

- Changes edited with this function are not displayed in the following images.
 - Thumbnail images
 - Navigator images
 - Images in the HDR [Select images] window (see [p.108, step 3](#))
 - Images in the [Contact sheet] window for printing a thumbnail list (see [p.129, step 3](#))
 However, edited changes are applied when four images or fewer (JPEG/TIFF images) are selected.
- Changes edited with this function are not applied in the DPP histogram display.




Editing with the Dust Delete/Copy Stamp Tool Palette

You can use this tool palette to erase dust and other marks in a shot image and to correct an image by copying part of the image and pasting it onto an unnecessary part of the image.

Note that you can use the functions in this tool palette with JPEG and TIFF images as well as RAW images.

Dust Delete/Copy Stamp Tool Palette

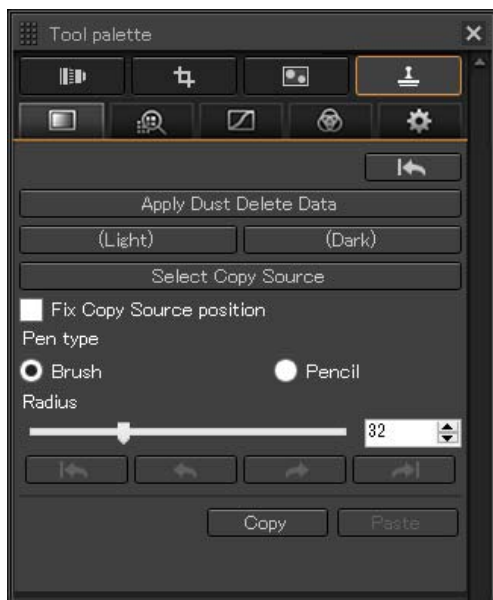

Performing Automatic Dust Erasure Processing

The Dust Delete Data that is appended to images can be used to automatically erase dust spots.

- 1 Select an image with dust delete data attached in the main window, etc.
- 2 Display the Dust Delete/Copy Stamp tool palette.
 - You cannot make adjustments with the Dust Delete/Copy Stamp tool palette in a window that only shows thumbnails.
- 3 When the image has redrawn itself, click the [Apply Dust Delete Data] button.



→ Dust spots are erased in a single operation.

- 4 Return to the main window.



32bit On 32-bit OSs, the results of erasing dust manually (repair function) (p.87) and erasing unwanted parts of an image (copy stamp function) (p.89) can only be checked in the window in which erasure was performed, in the print results, or in the image after being converted and saved.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences





Additional information

- **The dust-erased image can be reverted to its original condition at any time**

A dust-erased image is displayed or printed as a dust-erased image. However, since the dust on the image is not actually erased, you can always revert to the original image by clicking the  button in the Dust Delete/Copy Stamp tool palette or performing the “Re-Editing an Image” procedure (p.95).

- **Printing dust-erased images**

You can print as a dust-erased image by printing it in DPP.

- **To erase dust spots that cannot be erased with the automatic dust erasure processing**

In automatic dust erasure processing, dust spots are erased based on information relating to dust saved in the Dust Delete Data. However, there may be cases where you will not be able to erase dust spots depending on the type of dust. If this occurs, erase those dust spots using the repair function (p.87) or the copy stamp function (p.89).

- **The image becomes a dust-erased image when converted and saved**

The dust-erased RAW image actually becomes a dust-erased image when converted to a JPEG or TIFF image and saved (p.93).

- **Applying the dust erasure result to another image**

You can apply dust erasure to the same place in another image by clicking the [Copy] button to copy the dust erasure results and then displaying the other image to which you want to apply the results and clicking the [Paste] button.

Automatic Dust Erasure Processing in the Main Window

In the main window, you can also automatically erase dust spots in multiple images appended with Dust Delete Data.

Select multiple images appended with Dust Delete Data, and then select the [Adjustment] menu ▶ [Apply Dust Delete Data].

→ Dust spots in all the selected images are erased in a single operation.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



Manually Erasing Dust (Repair Function)

You can erase dust spots in an image by selecting them one by one.

- 1 In the main window, select the image from which you want to erase dust spots.
- 2 Display the Dust Delete/Copy Stamp tool palette.
- 3 Click the point from where dust is to be erased.

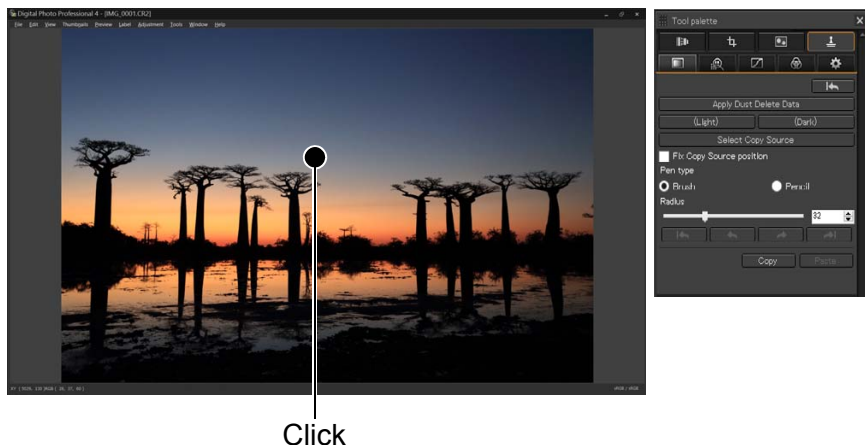


- The display changes to 100% view.
- The display position can be changed by dragging.

4 Click the button that matches the dust spot to be erased.

- If the dust spot is dark in color, click the [(Dark)] button, and if the dust spot is light in color, click the [(Light)] button.
- When you move the cursor over the image, the dust erasure range is indicated with [O].

5 Place the dust spot to be erased within the [O] and click.

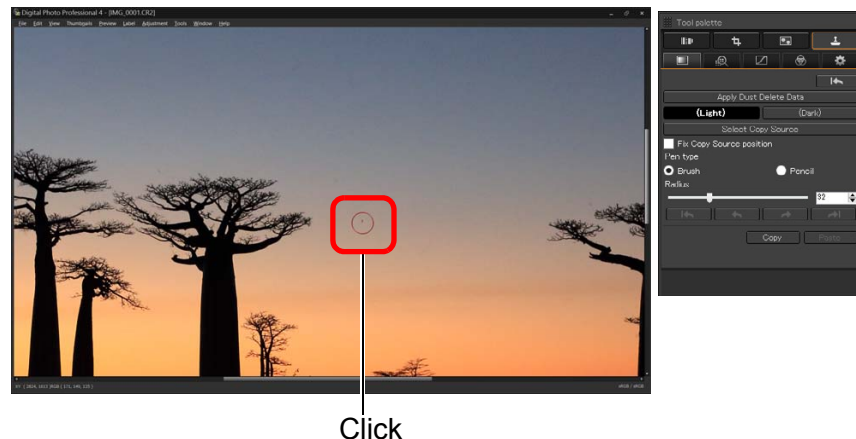

- The dust spot within the [O] is erased.
- Click on another part of the image to continue erasing dust spots within the displayed image.
- To erase dust in another part of the image, either right-click with the mouse, or click the button clicked in step 4 again to cancel dust erasure processing and perform the operation again from step 3.
- When the dust spot cannot be erased, [X] is displayed.

6 Return to the main window.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos


HDR PQ
Mode

Specifying
Preferences





Additional information

- **Click several times when dust spots are not erased completely**
Where unwanted dust spots are not erased even after performing step 5 once, they may be erased completely when you click several times.
- **Mainly spots of dust can be erased with the repair function**
Spots of dust can be erased with the repair function. You may be unable to erase lines of dust. In this case, use the copy stamp function ([p.89](#)).
- **The dust-erased image can be reverted to its original condition at any time**
A dust-erased image is displayed or printed as a dust-erased image. However, since the dust on the image is not actually erased, you can always revert to the original image by clicking the  button in the Dust Delete/Copy Stamp tool palette or performing the “Re-Editing an Image” procedure ([p.95](#)).
- **Printing dust-erased images**
You can print as a dust-erased image by printing it in DPP.
- **The image becomes a dust-erased image when converted and saved**
The dust-erased RAW image actually becomes a dust-erased image when converted to a JPEG or TIFF image and saved ([p.93](#)).



Useful functions of the copy stamp window

- **Switch between full screen display/normal screen display using shortcut keys**
You can also switch between full screen display/normal screen display by pressing the <Alt> + <Enter> keys.



For images shot with ISO speed range expansion set, noticeable noise may make it difficult to view dust spots in the copy stamp window, so using this function is not recommended.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Erasing Unwanted Parts of an Image (Copy Stamp Function)

You can correct an image by pasting a section copied from another part of the image to an unwanted part of the image.

1 Follow steps 1 to 3 in “Manually Erasing Dust (Repair Function)” (p.87).

2 Specify the section to be copied.

- Click on the section that is to be the copy source after clicking the [Select Copy Source] button.
- To change the section that is to be the copy source, perform the operation above again.
- To fix the position of the copy source, checkmark [Fix Copy Source position].

3 Correct the image.

- Click or drag on the part of the image you want to modify. [+] in the window indicates the copy source and [O] indicates the copy destination.
- The copied image is pasted in the position to which it was dragged.
- For [Pen type], you can select from [Brush] (the pasted image's borders simulate a brush) and [Pencil] (the pasted image's borders are sharp).

4 Return to the main window.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Setting Work Color Space

A different work color space (p.160) from the default settings (p.168) can be set for each image.

Display the Settings tool palette ▶ select the color space to be set.

Settings tool palette

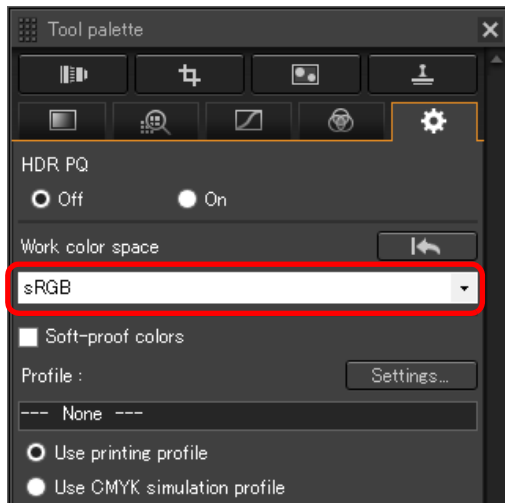

? A color space set individually does not change even when the default setting is changed

If you set an image with a color space different to the default setting and then subsequently change the default color space setting (p.160), this default setting will not be applied and the individually set color space will remain.

💡 The color space of a RAW image can be changed freely as many times as required

Since only the image processing conditions information changes, the color space of a RAW image can be changed at any time.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



Using the Soft-Proof Colors Function


By using the soft-proof colors function, you can apply a selected printing profile or CMYK simulation profile to the displayed image. The reliability of the soft-proof colors function depends on the monitor quality, the monitor and printer profiles, and surrounding lighting conditions where you are working.

1 Click the [Settings] button.

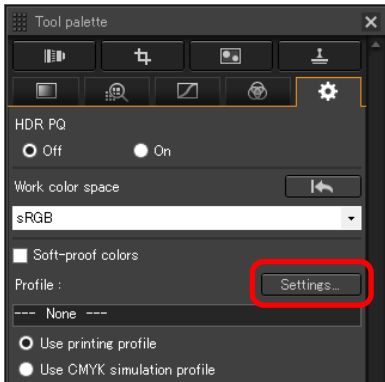


→ The [Color management] tab sheet in [Preferences] appears.

2 Select the profile to apply from the [Printing profile] or [CMYK simulation profile] list box, and click the [OK] button.

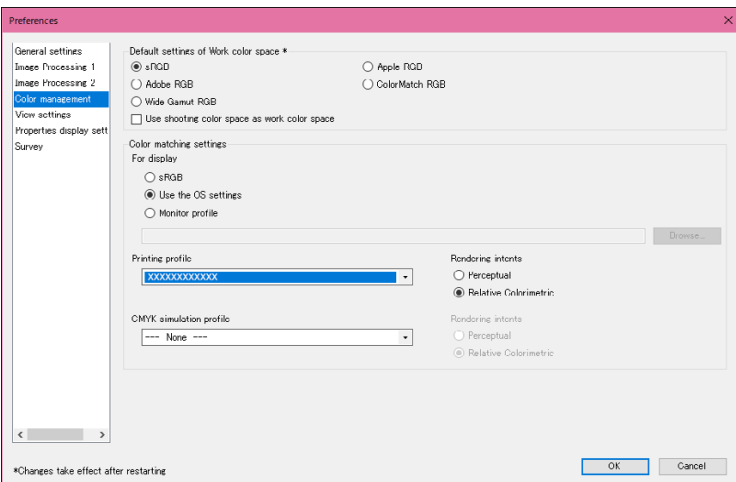

→ The [Color management] tab sheet in [Preferences] closes.

3 According to the profile selected in step 2, select either [Use printing profile] or [Use CMYK simulation profile], and checkmark the [Soft-proof colors] checkbox.

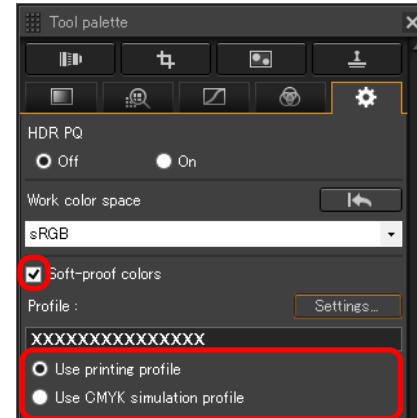

→ The profile selected in step 2 is applied to the displayed image including its thumbnail.
The profile is not applied to images displayed in the quick check window.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Specifying the Size when Opening RAW Images

This applies only to RAW images with the extension “.CR3” that were shot with [cRAW] selected on the camera.

This function specifies the image size when a RAW image is selected and opened in DPP. When the selected RAW image is converted and saved as a JPEG or TIFF image, it is also saved at the same size. This function is not available for images shot with the Dual Pixel RAW function set on the camera.

Select the RAW image ▶ display the Settings tool palette ▶ select the size when opening RAW images in DPP.

Settings tool palette

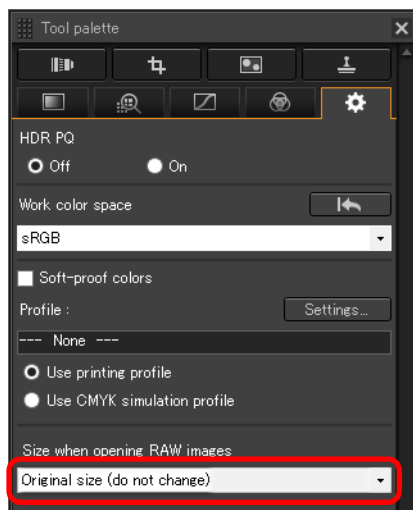

- The image size when opening RAW images in DPP is set.
- The default setting shows the size set in [Default size when opening RAW images] in the [Image Processing 2] tab sheet in [Preferences].
- The settings are saved as recipes for each image.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Saving Editing Results

Saving Editing Contents to an Image

All the contents adjusted with the tool palette (recipe) can be saved to the image or saved as a separate image.

Select the **[File] menu ▶ desired item.**

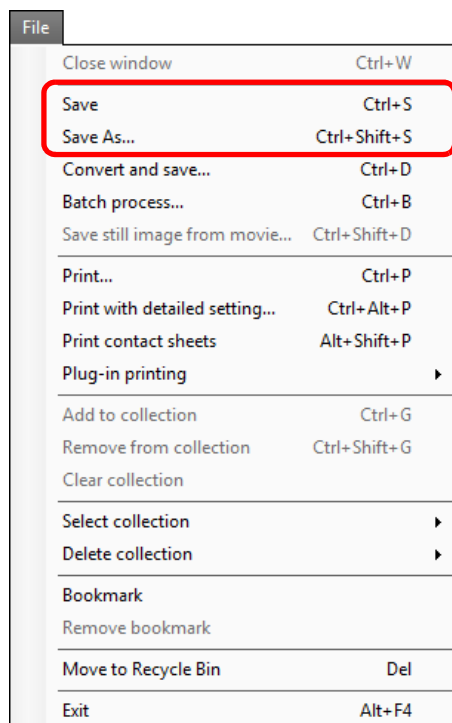


→ Your adjustments are saved to the image.

Saving as a separate image

To view, edit and print a RAW image with software other than DPP, convert to a more versatile JPEG or TIFF image and save.

If a JPEG or TIFF image is saved as described below, the image can be saved as a separate image with the adjustments (recipe) applied to it. The image is saved as a separate image, so the original image remains unaffected.

- 1 Select the image to be converted.
- 2 Select the **[File] menu ▶ [Convert and save]**.

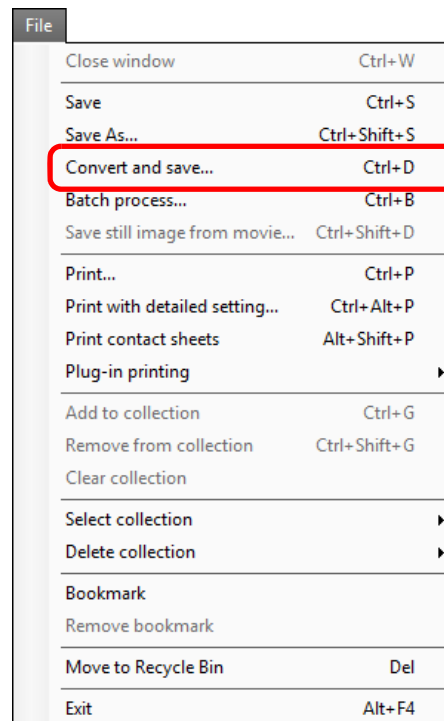

→ The [Convert and save] window appears.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos


HDR PQ
Mode

Specifying
Preferences



3 Specify the necessary settings, and then click the [Save] button.

- By default, the image is converted and saved to a JPEG image with the highest image quality, without changing the image size. Change the settings according to your requirements.

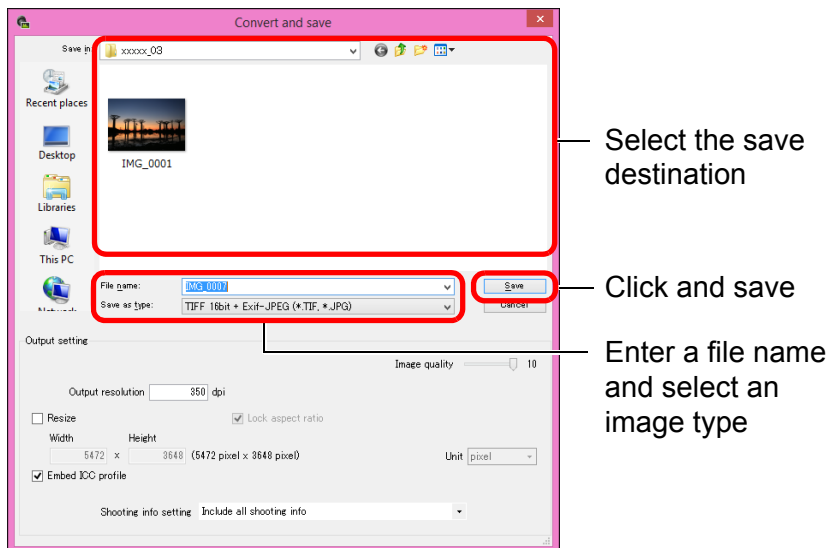

- The RAW image is converted to a JPEG or TIFF image which is then saved as a new image in the specified save destination.



To save the developing/editing results for the version you are currently using

DPP's RAW image development processing technology is continually being improved upon so that you can perform the latest image processing more appropriately.

Meaning that, between two different versions of DPP, processing results may differ very slightly even if with the same RAW image data, or the results of significant editing of RAW image data with an attached recipe may be different.

When you want to save the developing or editing results of the version you are currently using as it is, saving the image as a separate file (p.93) is recommended.



- By saving as a separate JPEG or TIFF image as explained above, some image deterioration that accompanies editing/saving occurs as when editing with general image editing software.
- By saving as explained above, a trimmed image (p.70) or dust-erased image (p.85 to p.89) actually becomes a trimmed image or dust-erased image.
- You can batch convert and save multiple images (p.134).

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Re-Editing an Image

Only the image processing conditions are changed in images adjusted with the tool palette (p.45 to p.90), so the “original image data itself” remains unaffected. (The trimming range or dust-erasure information of a cropped image (p.70) or dust-erased image (p.85 to p.89) is simply saved to the image.)

For this reason, you can undo any adjustments saved (p.93) to the image, trimming range and dust-erasure information, and revert to the condition when last saved, or when the image was shot.

1 Select the image that is to be re-edited.

2 Select the [Adjustment] menu ▶ desired item.

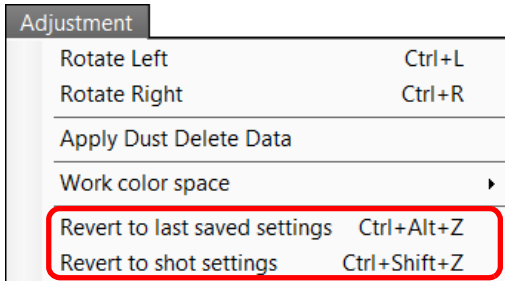

→ The image reverts to the conditions of the selected item.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

**Editing
Images**

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



Utilizing Adjustment Contents (Recipe)

All the adjustment contents (recipe) made using the tool palette can be saved as an individual recipe file (extension “.dr4”) and loaded and applied to another image.

You can edit images efficiently by selecting and adjusting one image from images shot with the same shooting environment and batch applying the adjustment results to a large number of images.

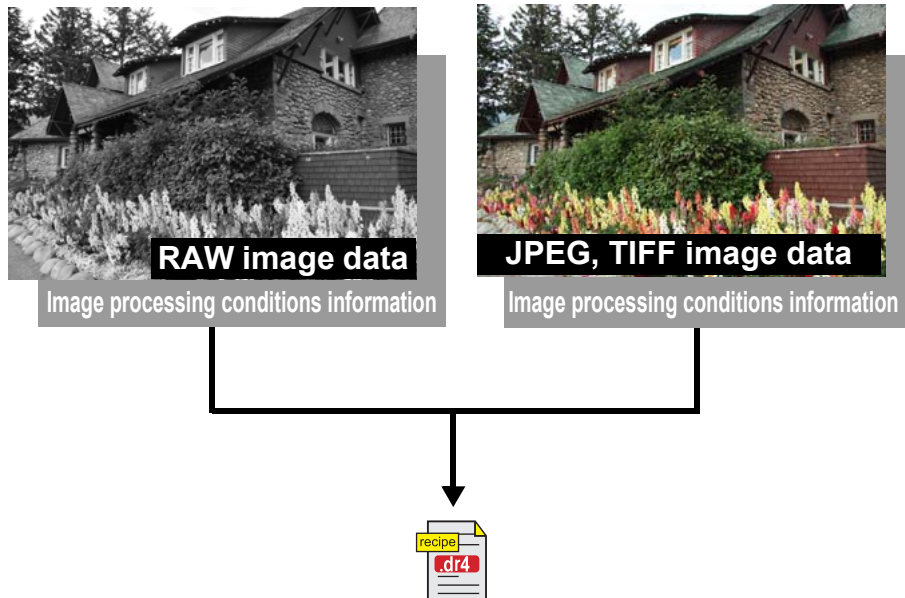

Contents adjusted using the tool palette can be handled individually as a recipe file (extension “.dr4”).



- A recipe file with contents that can only be adjusted in RAW images are not reflected even if it is applied to a JPEG or TIFF image.
- Recipes are not compatible between DPP version 4.x and DPP version 1.x to 3.x. Images with DPP version 1.x to 3.x recipe files attached are displayed with the shot settings in DPP version 4.x. Conversely, images with DPP version 4.x recipe files attached are displayed with the shot settings in DPP version 1.x to 3.x.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Copying a Recipe and Applying to Another Image

You can copy a recipe of an edited image and then apply it to another image.

- 1 **Select the image with the recipe you want to copy.**
- 2 **To copy all items of a recipe, select the [Edit] menu ▶ [Copy recipe]. To copy only selected items of a recipe, select the [Edit] menu ▶ [Copy selected recipe].**
 - The recipe is copied.
 - To select recipe items, select the [Edit] menu ▶ [Select and copy recipe settings] and select items in the window that appears. After specifying settings, click the [OK] button and close the window.
- 3 **Select the image to which the recipe is to be applied and then select the [Edit] menu ▶ [Paste recipe].**
 - The recipe is applied to the image.



When a recipe for an image is copied and applied to an image in a different orientation, the image orientation also changes. To prevent the orientation of the image from changing, select the [Edit] menu ▶ [Select and copy recipe settings] and remove the check mark from the [Rotate left / Rotate right: 0°] checkbox in the window that appears.

Saving a Recipe as a File

- 1 **Select an edited image, and then select the [Edit] menu ▶ [Save recipe in file].**
 - The [Save recipe in file] dialog box appears.
 - To save all of a recipe, select the [Save all recipes] option in the window displayed.
 - To select and save recipe settings, select the [Save selected recipes] option in the window displayed and then click the [Specify Recipe Details] button. In the window displayed, checkmark the recipe settings to be saved and then click the [OK] button.
- 2 **Select the destination folder, enter a file name, and then click the [Save] button.**

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Loading and Applying Recipes

1 Select the image to which a recipe is to be applied, and then select the [Edit] menu ▶ [Read and paste recipe from file].

→ The [Open] dialog box appears.

2 Select a recipe and click the [Open] button.

→ The recipe is applied to the image.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

**Editing
Images**

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Adjusting by Comparing Multiple Images

You can synchronize the areas in different images to be displayed among multiple preview windows, and adjust images while comparing them.

- 1 In the preview window, display the multiple images to be compared.
- 2 Align the images.
 - Select the [Window] menu ► [Arrange horizontally] or [Arrange vertically].
 - The preview windows are aligned.
- 3 Select the [Preview] menu ► [Sync preview position] and [Sync preview display size].
- 4 Enlarge the image.
 - Enlarge and display any of the preview windows.



- Other preview windows will also be displayed in the same position/enlargement ratio.

5 Move the area to be displayed.

- If you move the enlargement display area in one of the preview windows, the enlargement display area will also change in all other preview windows.
- To cancel synchronization, select the [Preview] menu ► [Sync preview position] and [Sync preview display size] again.



Synchronization only applies to the enlargement display position and the enlargement ratio. Adjustments to the images are not synchronized.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Editing Efficiently

Editing in the Edit Image Window

The thumbnail display and the preview window are combined, and images can be edited efficiently while quickly switching between images to be edited. Select the images to be edited beforehand in the main window.

1 In the main window, select the images you want to edit.

2 Switch to the edit image window.

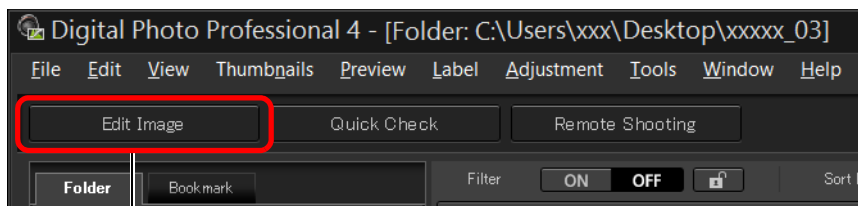


→ The main window switches to the edit image window.

Edit image window



3 Edit the image.

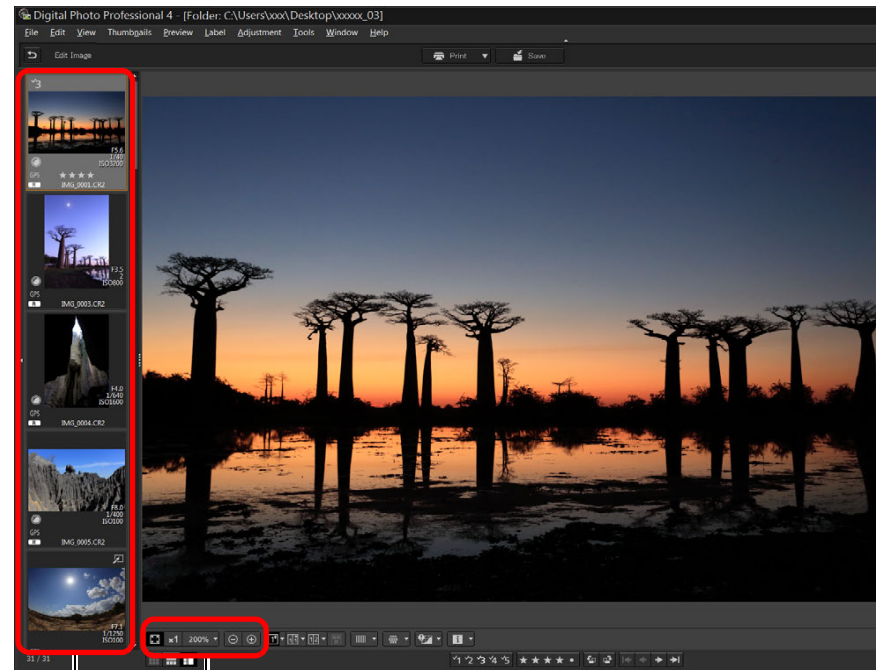

Change the display magnification

Select the image to be edited

The selected image is displayed as an enlargement in the middle of the window

- For information on icons displayed on the frame of a thumbnail, see “Image Frame Information in the Main Window and Edit Image Window” (p.166).
- The tool palettes, navigator palette, and histogram palette are displayed and you can edit the image.
- To revert to the condition before the last operation performed on the tool palette, select [Undo] in the [Edit] menu or press <Ctrl> + <Z> keys.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




4 Click the area you want to enlarge.

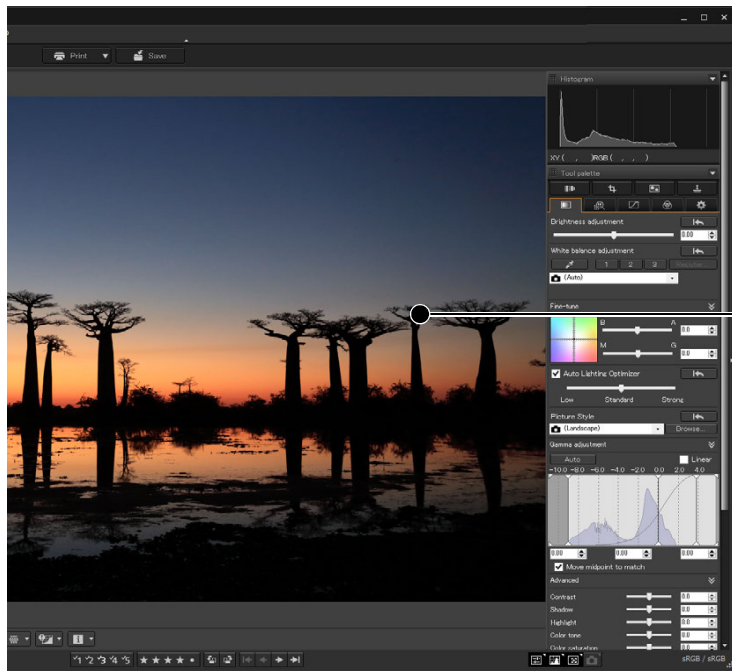

- The area you clicked is enlarged to 100% (actual pixel size).
- To change the display area, drag on the image or drag the enlargement display area (p.19) of the navigator palette.
- Click again to revert to the full view ([Fit to window]).
- To return to the main window, click the [↩] button on the toolbar.

Changing the Thumbnail Display Position to Horizontal

Select the [View] menu ▶ [Horizontal Thumbnails].

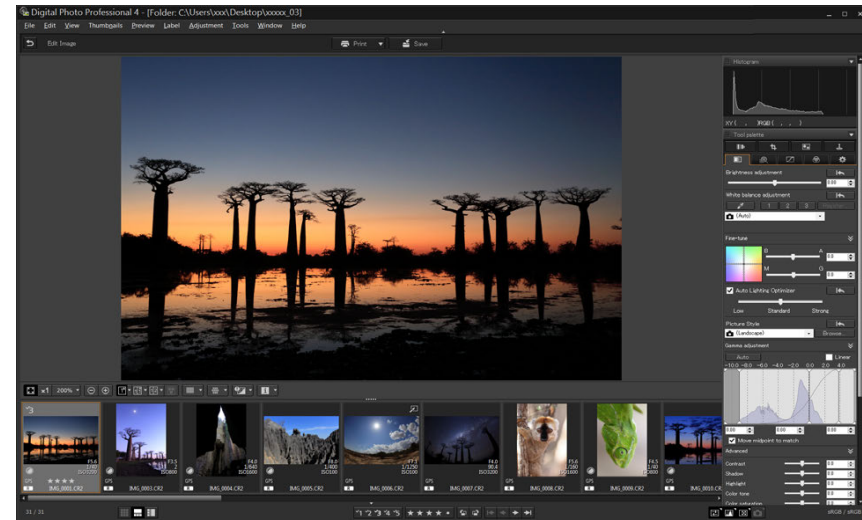

- If you select [Vertical Thumbnails], the thumbnail display reverts to the vertical position.



With the edit image window, you can only select images from a folder. To gather images from several folders for editing, see “Gathering and Editing Images in the Collection Window” (p.102).

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Gathering and Editing Images in the Collection Window

You can gather selected images together in Collection folders for viewing, comparison and editing.

You can gather images from several folders as well as from a single folder, allowing you to work with them efficiently.

- 1 Click [+ Add collection] in the [Collection] area in the main window.

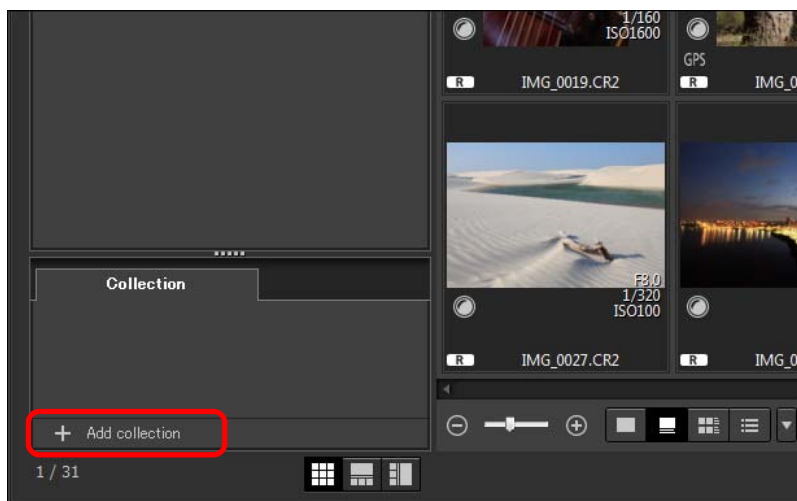


- A new collection folder is created in the [Collection] area.
- Enter a name for the collection folder.
- To create additional collection folders, repeat the operation. Up to 20 folders can be created.

- 2 Select the [File] Menu ▶ [Select collection], and select a collection folder to gather images from the collection folder names displayed.

- 3 Select images or image folders in the main window. Select the [File] menu ▶ [Add to collection].

- The images are added to the selected collection folder, and the number of selected images in the collection folder is displayed. When an image set to single-image display (p.23) is added, the number of images is indicated as two images.
- You can also add images to a collection folder by selecting images and folders and then selecting [Add to collection] from the menu that appears when you right-click the mouse.

- 4 Select a collection folder in the [Collection] area.

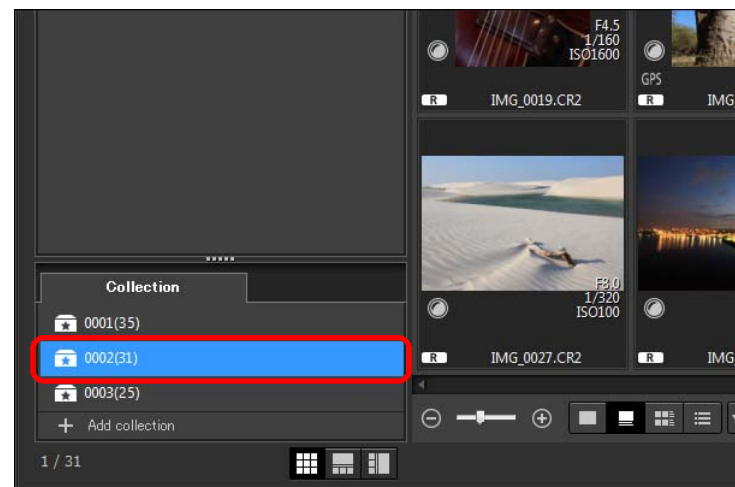

- Images in the selected folder are displayed.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



5 Check the displayed images.

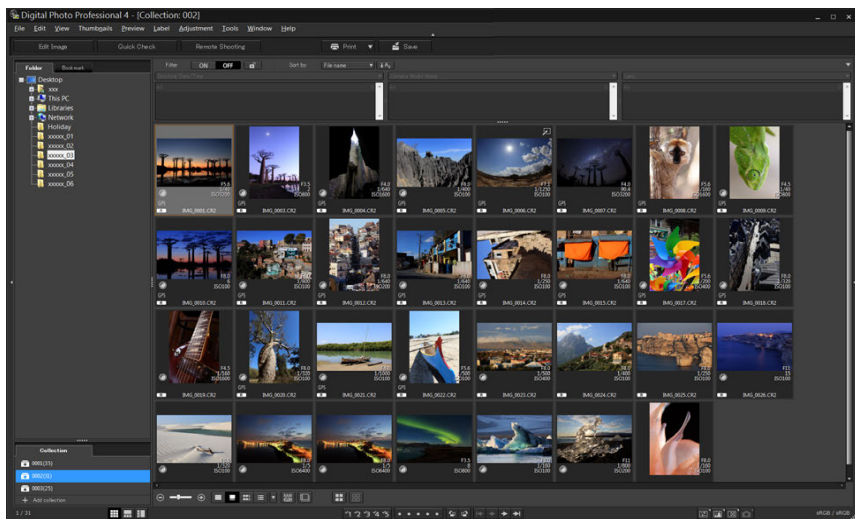

6 Edit the images.

- Edit the displayed images.
- Displayed images are retained in the collection folders even after exiting DPP.

! **32bit** On 32-bit OSs, only up to 1000 images can be displayed per collection folder. Starting with the 1001st image, images are handled in the same way as non-supported images. Try to maintain 1000 images or less per folder.

To remove images from collection folders

• Removing selected images

Select images in a collection folder, select images, and select [Remove from collection] in the [File] menu. (You can also remove images from a collection folder by selecting the images, right-clicking with the mouse, and selecting [Remove from collection] from the menu that appears.) Note that even if you remove an image from a collection folder, the original image remains unaffected.

• Removing all images

Select [Clear collection] in the [File] menu. Note that even if you remove all images from a collection folder, the original images remain unaffected.

• Deleting a collection folder

Select a collection folder in the collection area, then select [Delete collection] from the menu that appears when you right-click with the mouse. Note that if you delete a collection folder, the original images remain unaffected.

! **Modifications to the image are applied to the original image**
Modifications made to images in a collection folder are all applied to the original image.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Compositing Images

You can combine two images into a single image. You can further combine images by adding another image to the composited image. Since the composited image is saved as a separate image, the original images remain as they are.




32bit On 32-bit OSs, this function is not available.



- This function can be used with all image types (p.4) supported by DPP.
- The color space of a composited image will be the color space of the background image.
- Image information is not appended to a composited image.


1 Select a background image in the main window.

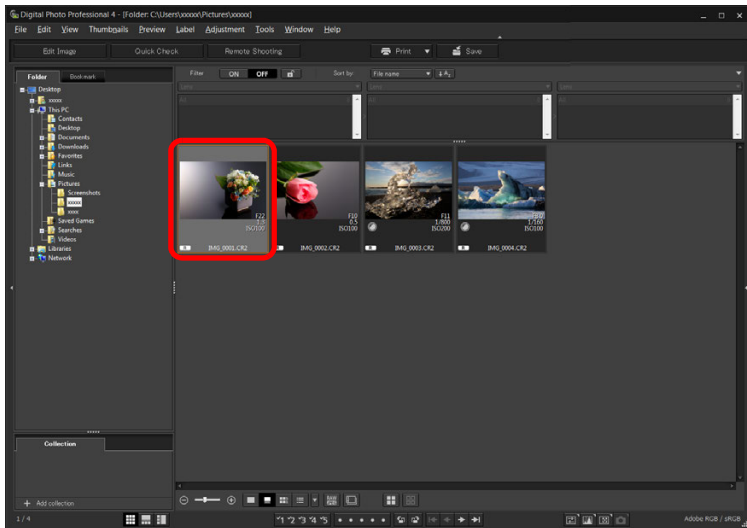

- You can also select a background image from the edit image window or [Collection] window.

2 Select the [Tools] menu ▶ [Start Compositing tool].

→ The compositing tool window appears.

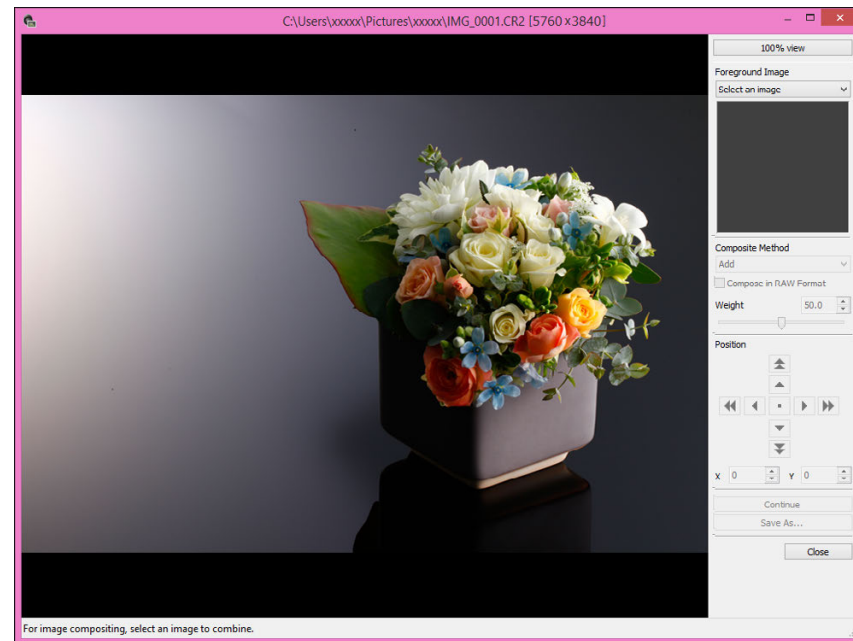

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos


HDR PQ
Mode

Specifying
Preferences



3 Select the image to combine.


- Select the image to combine from the [Foreground Image] list box.

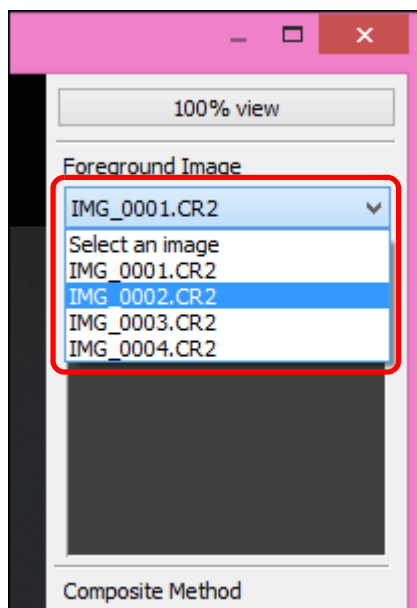

- The selected image is displayed in the [Foreground Image] thumbnail display.
- A preview of the combined background image and [Foreground Image] is displayed in the composite preview.
- The following images can be combined.
 - When a background image is selected in the main window: images in same folder as background image
 - When a background image is selected in the [Collection] window: images in the [Collection] window
 - When a background image is selected in the edit image window: images displayed in the thumbnail display area
- You can also combine images of different sizes.

4 Select a compositing method.


- Select a compositing method from the [Composite Method] list box.

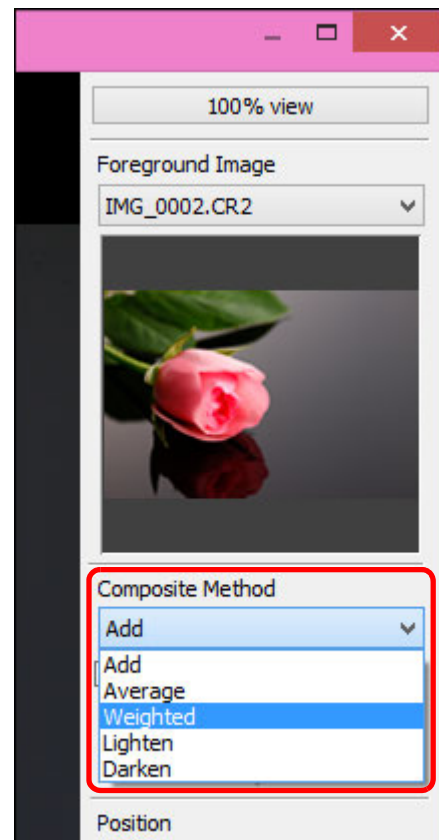

- The compositing method selected in the composite preview is applied.
- The compositing method can be selected from five types: Add, Average, Weighted, Lighten, and Darken. For details on each compositing method, see “Compositing Methods” (p.107).
- If you select [Weighted], you can set the proportion of the image to be combined. Use the [Weight] slider at the bottom of the [Composite Method] list box or directly enter a value to set the proportion.
- By clicking the [100% view] button, the image is displayed at 100% magnification (actual pixel size).



5 Position the images.

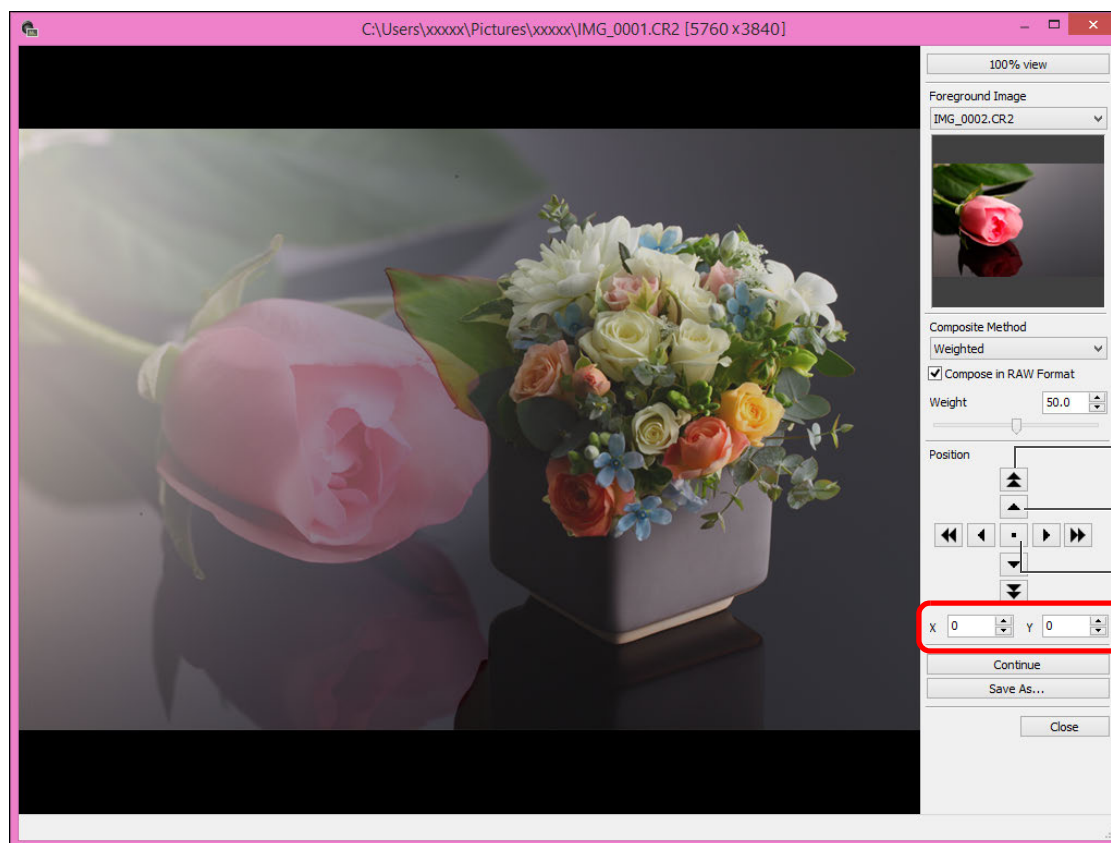

Shift large amount (50 pixels)

Shift small amount (1 pixel)

Align image centers

You can also directly enter the position coordinates of the [Foreground Image] to align it.

- By default, the background image and the [Foreground Image] are displayed with their centers aligned.
- [Compose in RAW Format]
Checkmark the [Compose in RAW Format] checkbox as necessary.




- You can set [Compose in RAW Format] under the following conditions.
Both the background image and [Foreground Image] are RAW images, and all the following conditions are met.
 - The cameras used to shoot were of the same model
 - The ISO speed setting at the time of shooting was the same
 - The highlight tone priority setting at the time of shooting was the same
 - The image sizes (original size) are the same



- The following functions are not available for images composited with [Compose in RAW Format].
 - Auto Lighting Optimizer (p.58)
 - Picture Style Auto (automatically set to Standard) (p.49)



6 Click the [Save As] button.

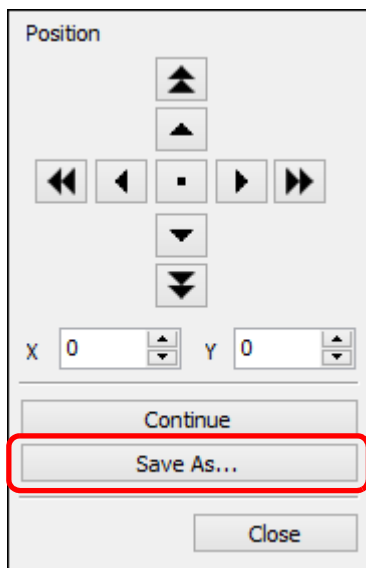

- Specify the required settings in the window that appears and then click the [Save] button.
- By clicking the [Continue] button, images are combined to create a new background image, and you can continue by combining another image.
- To finish, click the [Close] button.

Compositing Methods

- **Add**
The background image and [Foreground Image] are added and images are combined.
- **Average**
The background image and the [Foreground Image] are combined in proportions of 50% each.
If you want to change the proportion of the [Foreground Image], select [Weighted].
- **Weighted**
Set the proportion of the [Foreground Image] and then combine the background image and [Foreground Image].
- **Lighten**
The background image and the [Foreground Image] are compared, with only brighter portions of the [Foreground Image] being combined.
- **Darken**
The background image and the [Foreground Image] are compared, with only darker portions of the [Foreground Image] being combined.



You can display this function as a function button in the main window's toolbar ([p.125](#)).

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Creating HDR (High Dynamic Range) Images


You can create images with a wide dynamic range where clipping in highlights and shadows has been reduced, and images that appear like paintings. This is suited for scenes such as still-lives and landscapes. This function is most effective when using three images with different exposures for the same scene (negative exposure, standard exposure, positive exposure) to create an HDR image. However, you can also create an HDR image from two images, or even only one. Since an HDR image is saved as a separate image, the original images remain as they are.

* HDR stands for High Dynamic Range.

! **32bit** On 32-bit OSs, this function is not available.

- This function can be used with all image types (p.4) supported by DPP.
- Image information is not appended to an HDR image.


1 Select an image in the main window.

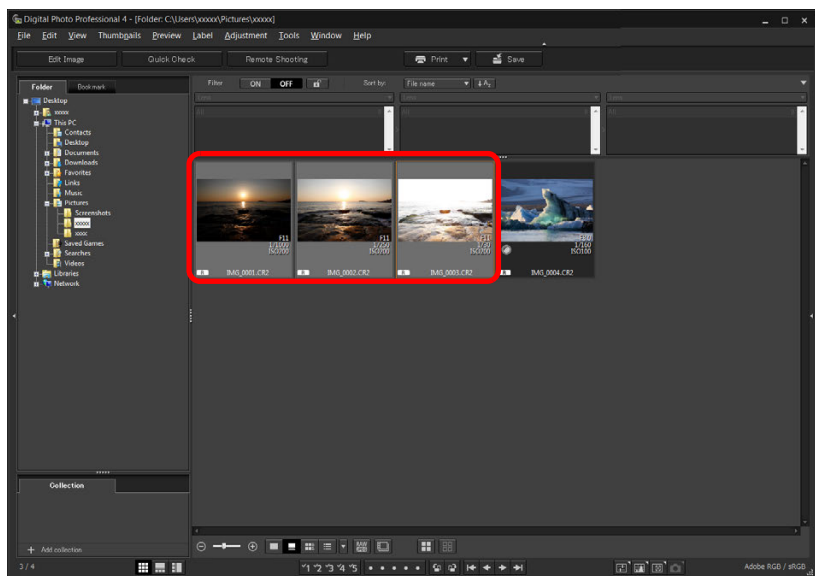

2 Select the [Tools] menu ▶ [Start HDR tool].

- The [Select Images] window appears.
- You can also display the [Select Images] window from the edit window and edit image window.

3 Specify the required settings, then click the [Start HDR] button.

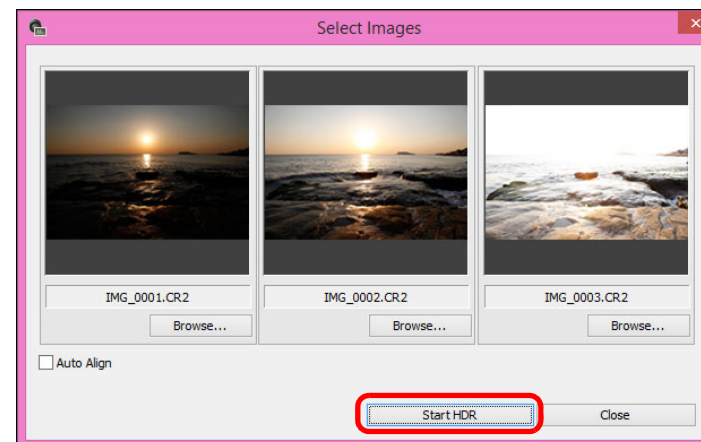

- To change the selected image or add another image, click the [Browse] button, and in the [Open] dialog box that appears, select the image file and click the [Open] button.
- If you select two images of the same size, you can checkmark the [Auto Align] checkbox for auto image alignment. However, auto image alignment may not work properly with repetitive patterns (lattice, stripes, etc.) or flat, single-tone images.
- By clicking the [Start HDR] button, the [Adjust Image] window appears.

! After using auto image alignment, the periphery of the images is partially deleted.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



4 Make required selections to adjust the image.

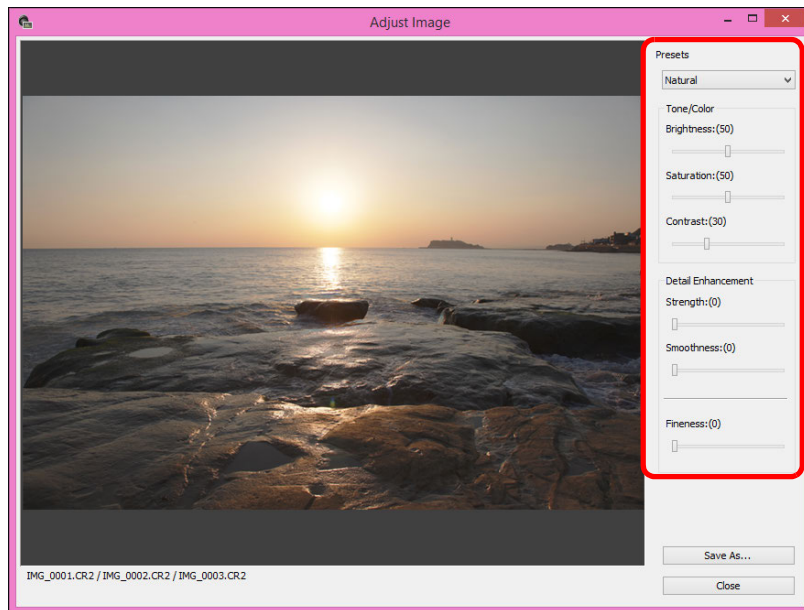

- Sliders in [Adjust Image] window

[Tone/Color]

- [Brightness]: Adjusts the overall brightness of the image. Move the slider to the right to brighten the image, and to the left to darken the image.
- [Saturation]: Adjusts the overall color saturation of the image. Move the slider to the right to make the color deeper, and to the left to make the color weaker.
- [Contrast]: Adjusts the overall contrast of the image. Move the slider to the right to make contrast stronger and to the left to make contrast weaker.

[Detail Enhancement]

- [Strength]: Adjusts the overall contrast and contrast of details together. Move the slider to the right for a stronger effect.
- [Smoothness]: Adjusts the overall smoothness of the image. Move the slider to the right for a smooth and natural impression.
- [Fineness]: Adjusts the clearness of details. Move the slider to the right for a sharper outline.

- [Presets] and finishing effects

With [Presets], you can select from the five preset finishing effects below from a pulldown menu ([Natural] is selected by default), instead of operating the sliders individually. By selecting a finishing effect, each slider moves according to the setting. You can also operate and adjust the sliders after selecting an effect.

- [Natural]: In high-contrast scenes, rendering in areas where highlights or shadows are usually clipped is corrected, for a finish with reduced highlight and shadow clipping.
- [Art standard]: Gives a finish with painting-like tonality for an impressive image.
- [Art vivid]: For a more vivid look than with [Art standard].
- [Art bold]: For a more vivid look than with [Art standard], that makes the subject pop out.
- [Art embossed]: Tones down vividness more than [Art standard], for an old-fashioned feel.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



5 Click the [Save As] button.

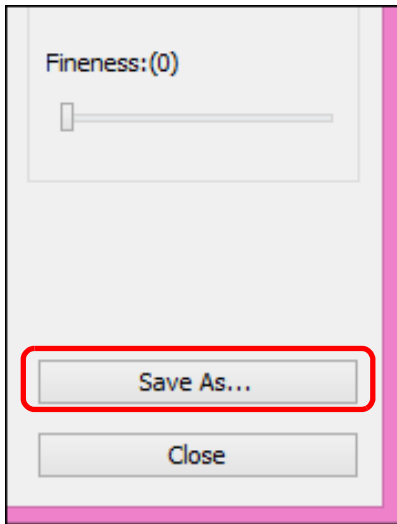

→ Specify the required settings in the window that appears by clicking the [Save As] button and click the [Save] button.

 You can display this function as a function button in the main window's toolbar ([p.125](#)).

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Using the Dual Pixel RAW Optimizer

By setting the Dual Pixel RAW function on the camera compatible with the function before shooting RAW images, images are recorded as “special RAW images (Dual Pixel RAW images)” with dual pixel information appended from the imaging sensor. This is called Dual Pixel RAW shooting. Using this function, the [Dual Pixel RAW Optimizer], with Dual Pixel RAW images, you can make use of the Dual Pixel data recorded with the Dual Pixel RAW image for microadjustment of the position of maximum sharpness and resolution using the depth information contained within the file, repositioning the viewpoint or foreground bokeh for a more pleasing result, and reducing the appearance of ghosting in images.



Cautions for Dual Pixel RAW shooting

Note the following when shooting in Dual Pixel RAW.

- Common to all functions
 - Effects are most easily gained when the lens aperture value is f/5.6 or lower.
 - Effects may be different between shooting in vertical orientation and horizontal orientation.
 - It is recommended that the ISO speed be ISO 1600 or lower.
- Only for “Microadjustment of the position of maximum sharpness and resolution using the depth information contained within the Dual Pixel RAW file”
 - It is recommended that the lens focal length be at least 50 mm.
 - It is recommended that this function be used when the camera is at a distance from the subject.*
 - * Use the following as a guide to subject distances according to focal length.
 - When the lens focal length is 50 mm, the subject distance should be approx. 1 m - 10 m / 3.3 ft. - 32.8 ft.
 - When the lens focal length is 100 mm, the subject distance should be approx. 2 m - 20 m / 6.6 ft. - 65.6 ft.
 - When the lens focal length is 200 mm, the subject distance should be approx. 4 m - 40 m / 13.1 ft. - 131.2 ft.




You can display this function as a function button in the main window's toolbar (p.125).

Microadjustment of the Position of Maximum Sharpness and Resolution Using the Depth Information Contained within the Dual Pixel RAW File

Microadjust the position of maximum sharpness and resolution, using the depth information contained within the Dual Pixel RAW images.

- 1 In the main window or edit image window, select the Dual Pixel RAW image you want to adjust, and then select [Start Dual Pixel RAW Optimizer] from the [Tools] menu.

→ The Dual Pixel RAW Optimizer window appears.

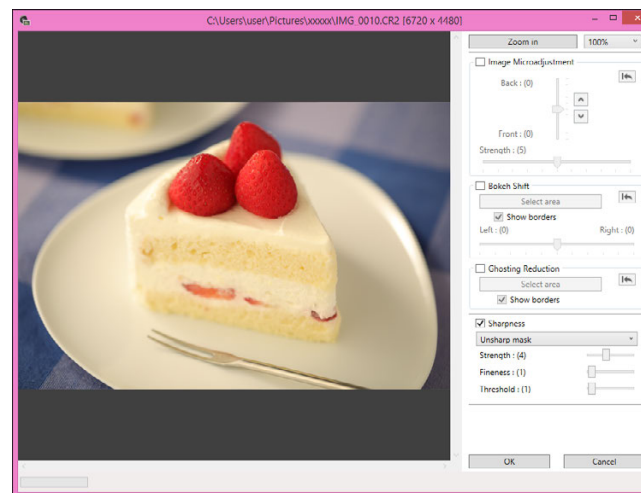

- 2 Checkmark the [Image Microadjustment] checkbox.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



3 Adjust the image.

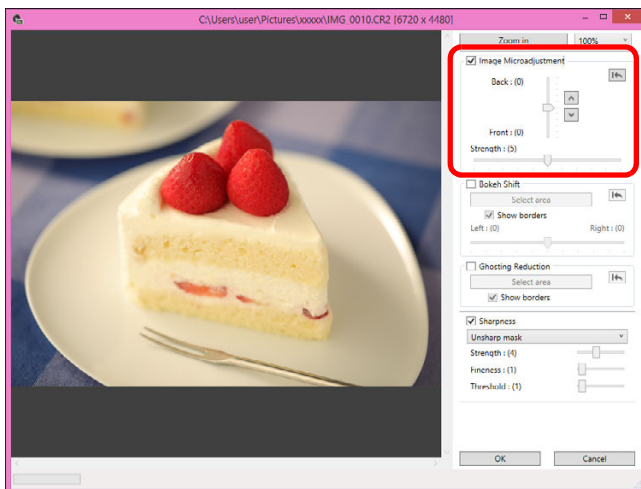

- Use the slider to adjust the resolution based on depth information and the level of resolution.

4 Click the [OK] button.

- Adjustment results are applied to the image.
For information on saving adjustment results to images, see “Saving Editing Results” (p.93).

- If the subject's outline or any bokeh look unnatural, or there is an increase in noise or noticeable changes in hue or brightness, lower the level of adjustment.
- This function cannot be used at the same time as “Reposition the viewpoint or foreground bokeh for a more pleasing result” or “Reduces the appearance of ghosting in images”.

Reposition the Viewpoint or Foreground Bokeh for a More Pleasing Result


Reposition the viewpoint or foreground bokeh for a more pleasing result, using the dual pixel information recorded in Dual Pixel RAW images.

- 1 In the main window or edit image window, select the Dual Pixel RAW image you want to adjust, and then select [Start Dual Pixel RAW Optimizer] from the [Tools] menu.

→ The Dual Pixel RAW Optimizer window appears.

- 2 Checkmark the [Bokeh Shift] checkbox.

- 3 Specify the area to adjust.

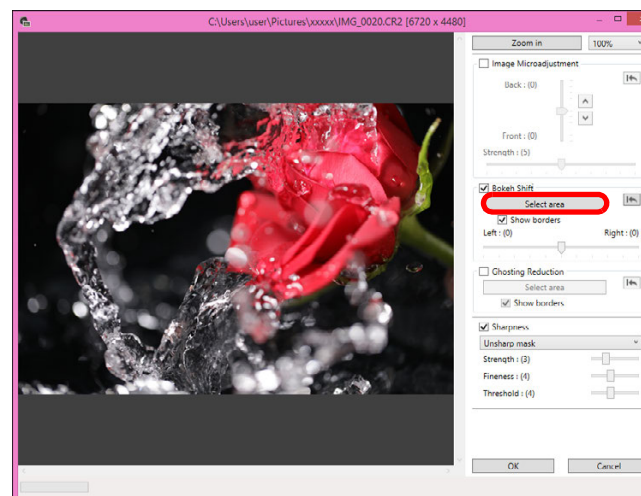

- Click the [Select area] button and drag on the image to specify the area to be adjusted, and right-click with the mouse to fix the area.
You can also remove the check mark from the [Show borders] checkbox to hide the border.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



4 Adjust the image.

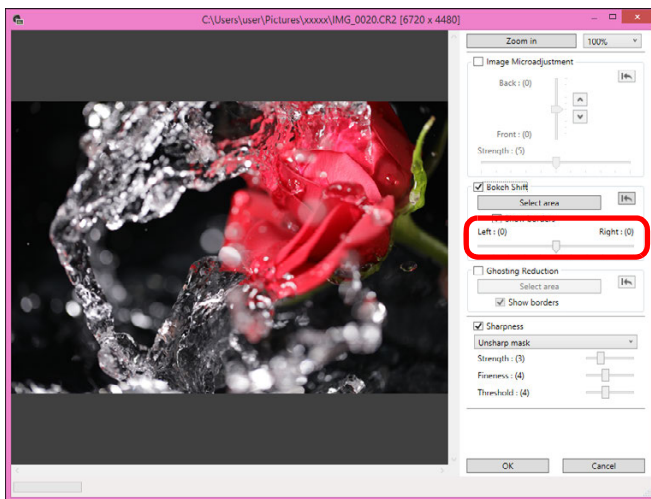

- Use the slider to adjust the viewpoint.

5 Click the [OK] button.

- Adjustment results are applied to the image.
For information on saving adjustment results to images, see “Saving Editing Results” (p.93).

- If the subject's outline or any bokeh look unnatural, or there is an increase in noise or noticeable changes in hue or brightness, lower the level of adjustment.
- Resolution may expand in the depth direction according to the level of adjustment.
- If the border of the selected area in the image appears unnatural, lower the level of adjustment.
- This function cannot be used at the same time as “Microadjustment of the position of maximum sharpness and resolution using the depth information contained within the Dual Pixel RAW file” or “Reduces the appearance of ghosting in images”.


Reduces the Appearance of Ghosting in Images

Reduce the appearance of ghosting in images, using the dual pixel information in Dual Pixel RAW images.

- 1 In the main window or edit image window, select the Dual Pixel RAW image you want to adjust, and then select [Start Dual Pixel RAW Optimizer] from the [Tools] menu.

→ The Dual Pixel RAW Optimizer window appears.

- 2 Checkmark the [Ghosting Reduction] checkbox, and specify the area.

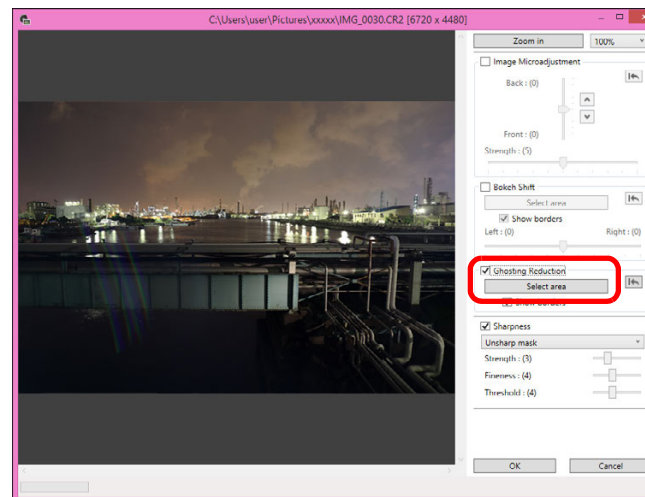

- Click the [Select area] button and drag on the image to specify the area to be adjusted, and right-click with the mouse to fix the area.
You can also remove the check mark from the [Show borders] checkbox to hide the border.

→ Any ghosting and flare in the specified area is reduced.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



- 3 Click the [OK] button.**
- Adjustment results are applied to the image.
For information on saving adjustment results to images, see “Saving Editing Results” (p.93).

- There may be cases where the subject's outline and any bokeh look unnatural, or where an increase in noise or noticeable changes in hue or brightness occur.
- There may be cases where the border of the selected area in the image looks unnatural.
- This function cannot be used at the same time as “Microadjustment of the position of maximum sharpness and resolution using the depth information contained within the Dual Pixel RAW file” or “Reposition the viewpoint or foreground bokeh for a more pleasing result”.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Using Depth Compositing

Depth compositing generates a single image from several images that is in focus over a wide area. This function combines images with the Depth Compositing tool, and outputs the combined result as a depth composite image. It is then possible to also correct the output image using the Depth Compositing Editing tool.

This function can also be used with images shot without using focus bracketing on the camera.

See “Cautions when shooting images for depth compositing” (p.116) and “Cautions for using depth compositing” (p.117).



32bit On 32-bit OSs, this function is not available.

Supported Images


Cameras	EOS 5D Mark IV, EOS R, EOS Ra, EOS RP, EOS 90D, EOS M6 Mark II, PowerShot G5 X Mark II, PowerShot G7 X Mark III
Lenses	RF, EF, and EF-S lens groups (excluding TS-E lenses and fisheye lenses)
Supported formats	CR2, CR3, JPG, TIFF ^{*1}
Shooting conditions	The camera, lens, shutter speed, aperture value, focal length, image format, and image size must be the same.

^{*1} TIFF images converted and saved in DPP

- Even if the above conditions are met, the following images are not supported by depth compositing.
 - RAW images created by multiple-exposure shooting
 - Images without shooting information
 - Images saved as HDR PQ mode display images
 - Images of 1600 x 1600 pixels or less, or 9999 x 6666 pixels or more

Using the Depth Compositing Tool

- Select multiple images in the main window, etc.**
 - For images shot using focus bracketing on the camera, you can perform depth compositing even if you select only one image.
- Select the [Tools] menu ▶ [Depth Compositing] ▶ [Start depth compositing tool].**
 - The Depth Compositing tool window appears.

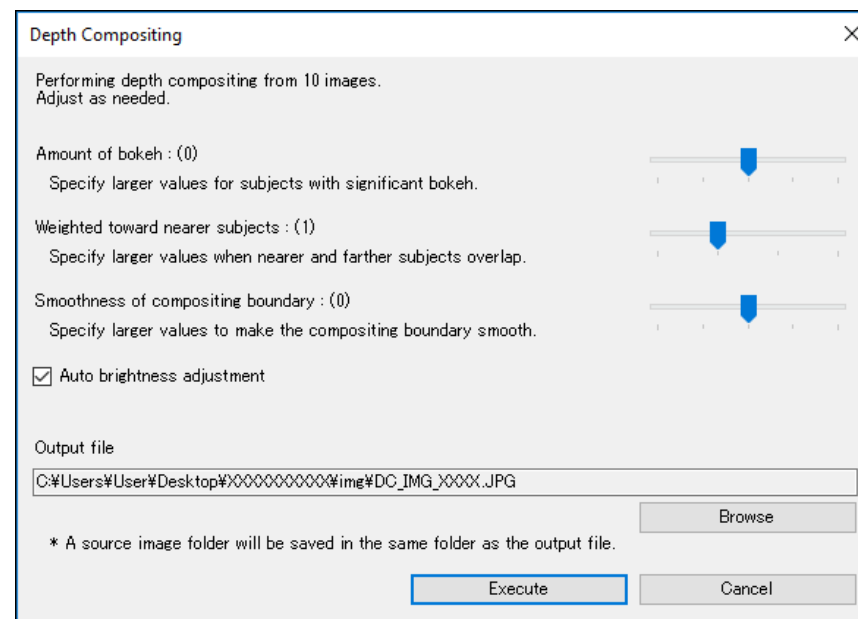

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



3 Adjust and set items as necessary, and then click the [Execute] button.

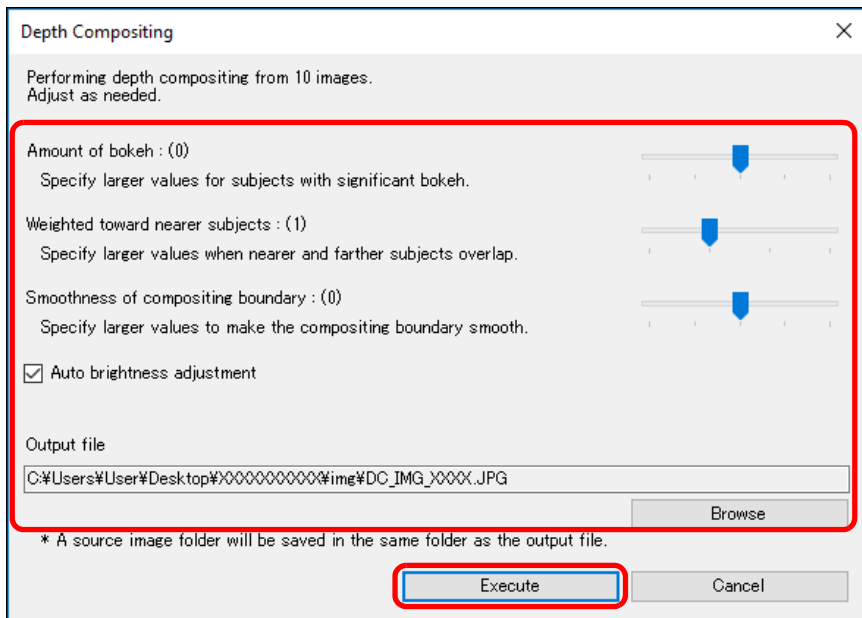

- Images are combined and a depth composite image is output.
- A source image folder (folder name: DPP_DC_...) is output in the same folder as the depth composite image. The source image folder is used to correct the depth composite image with the [Depth Compositing Editing Tool].
- To change the output destination or format of a depth composite image, click the [Browse] button to make the settings in the window that appears.
- [Auto brightness adjustment] suppresses any change in brightness between images used for depth compositing with automatic correction when brightnesses are slightly different.

 You can display this function as a function button in the main window's toolbar (p.125).



Cautions when shooting images for depth compositing

- After performing depth compositing, the combined result may have a narrower angle of view than when images were shot. When shooting with focus bracketing, shooting with a wider angle of view is recommended. After depth compositing, you can crop the image if necessary.
- For best results, set the aperture value in a range of f/5.6–11 before shooting.
- Be sure to use a tripod and lock the camera firmly in place before shooting.
- Repeating patterns such as lattice patterns and stripe patterns, or images where the entire screen is flat and lacking contrast may not be combinable.
- When shooting multiple images, start by focusing on the image nearest to you and work progressively farther away.
- When shooting multiple images, images where the focus differs largely may result in a combined image with uneven focus or that may not be combinable.
- Depth compositing assumes that images of still subjects are being combined. Images shot of moving subjects may not be combinable.
- If multiple subjects are in the screen, images may not be combinable depending on how subjects are arranged, for example, subjects spaced far apart.
- The lenses below are recommended.
RF35mm F1.8 MACRO IS STM, RF50mm F1.2 L USM, RF28-70mm F2 L USM, RF24-105mm F4 L IS USM
EF16-35mm f/4L IS USM, EF24-70mm f/4L IS USM, EF100mm f/2.8L MACRO IS USM, EF180mm f/3.5L MACRO USM
EF-S35mm f/2.8 MACRO IS STM, EF-S60mm f/2.8 MACRO USM, EF-S18-135mm f/3.5-5.6 IS USM
EF-M28mm f/3.5 MACRO IS STM, EF-M15-45mm f/3.5-6.3 IS STM, EF-M18-150mm f/3.5-6.3 IS STM

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Cautions for using depth compositing


- When the Depth Compositing tool is started up, the content of recipes that are attached to images in focus is reflected in the depth composite image (excluding the following items).
 - Stamp
 - Dust delete data
 - Reducing color moiré (Partial Adjustment tool palette)
 - Angle adjustment (Trimming/Angle Adjustment tool palette)
 - Size setting when opening selected RAW image in DPP (p.92)
 - Color adjustment for a specific color gamut (including [Monochrome])
 - Dual Pixel RAW Optimizer
 - Auto Lighting Optimizer
 - Shadows/highlights
- The Depth Compositing tool does not start up if an image in focus is not supported.

Using the Depth Compositing Editing Tool

If intended results were not obtained with the Depth Compositing tool, this function copies the portion of the image to be corrected from a source image to the depth composite image (in this tool, the [Edited Image]).

- 1 **Select the depth composite image in the main window, etc.**
- 2 **Select the [Tools] menu ▶ [Depth Compositing] ▶ [Start depth compositing editing tool].**

→ The Depth Compositing Editing tool window appears.

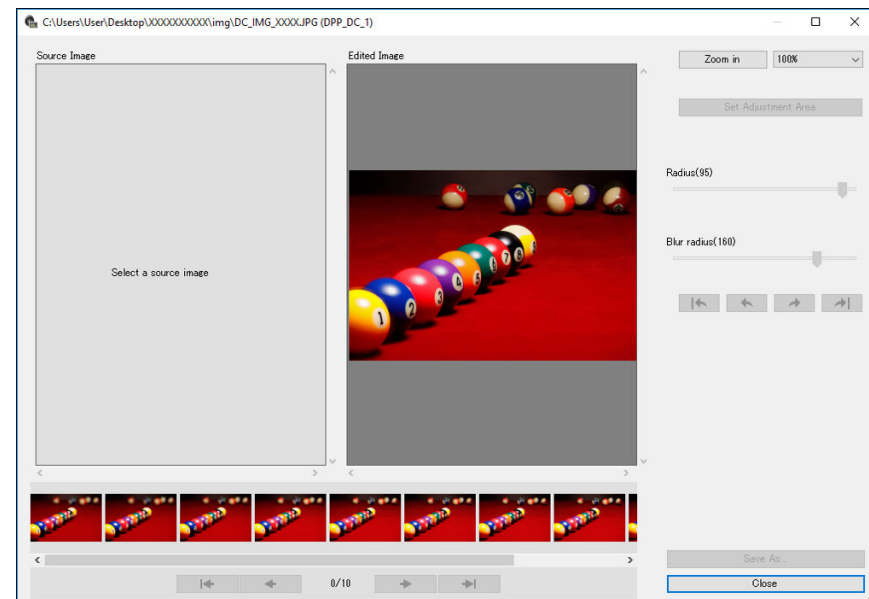

- A thumbnail of the source image is automatically displayed at the bottom of the screen. However, thumbnails of source images are not automatically displayed if the name of the depth composite image or the source image folder is changed or the save location is moved. Select the source image folder that was output at the same time the depth composite image was output.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



3 Select a source image and modify it as necessary.

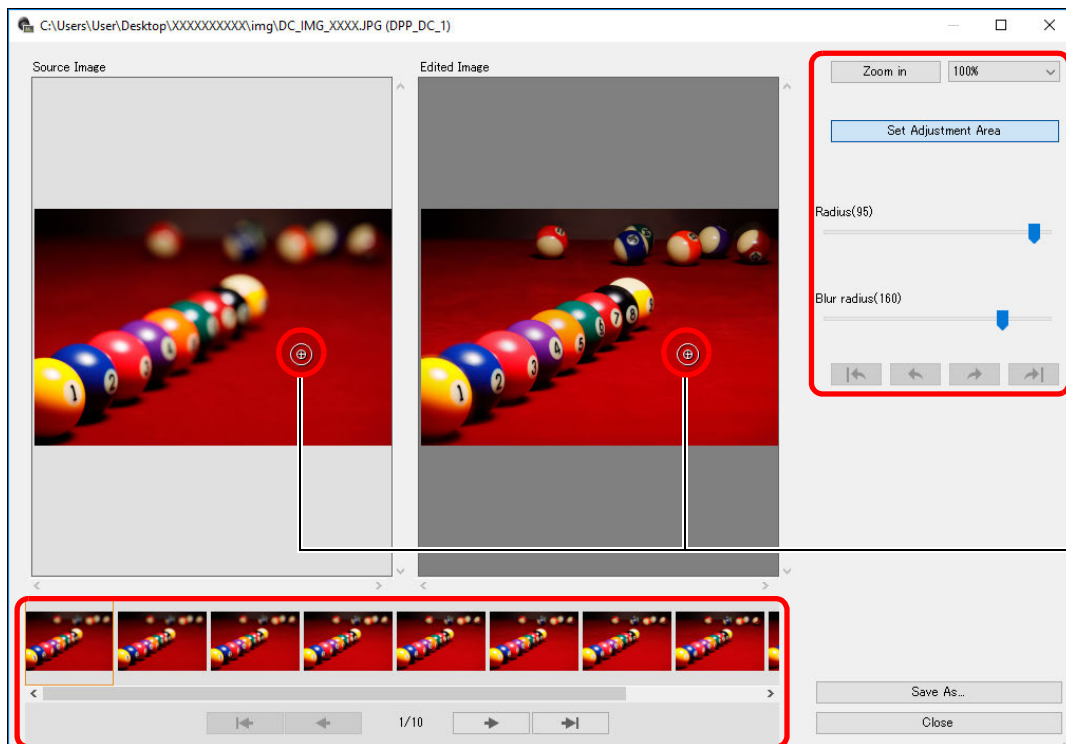

Circular cursor

- Select a source image from the thumbnails of source images displayed at the bottom of the screen.
- If the [Source Image] and [Edited Image] are shots of different areas, a black frame may be displayed around the [Source Image].
- Clicking the [Set Adjustment Area] button displays a circular cursor. Click or drag the portion of the [Edited Image] that you want to correct with the circular cursor, and the same portion of the [Source Image] is copied.
- Use [Radius] to set the size of the adjustment area, and use [Blur radius] to set blurring at the border of the adjustment area.

- You can return through the corrections you made with the [[] [] [] []] buttons. Available buttons, from the left, are [Undo All], [Undo], [Redo], and [Redo All]. However, if you changed to another source image, you cannot return through corrections you made using the source image before the change.
- A recipe attached to a depth composite image is not applied in the [Edited Image] in this function. Also, depth composite image recipes are not attached to image files saved with this function.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



4 Save the image.

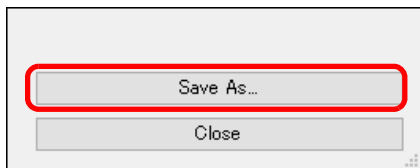

- Click the [Save As] button to select and save required settings.
- To exit, click the [Close] button.

 You can display this function as a function button in the main window's toolbar ([p.125](#)).

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Using the RAW Burst Image Tool

This function can be used with rolls (continuous-shot image files) captured in RAW burst mode on Canon digital cameras.

A roll is edited, saved, printed, etc. as a single RAW image in DPP, however, a “representative image”^{*} is selected automatically for this purpose.

For detailed information on RAW burst mode, refer to the Instruction Manual included with a RAW burst mode-capable camera.


You can use this tool to do the following:

- Change the representative image in a roll
- Save one image in a roll
- Extract and save any range in a roll

^{*} Representative image: the image displayed in thumbnails, etc. representing all the images in a roll


Starting Up the RAW Burst Image Tool

1 Select a roll in the main window, etc.

- Only rolls shot with RAW burst mode on a Canon digital camera are supported.
(Thumbnail icon: )

2 Select the [Tools] menu ▶ [Start RAW Burst Image tool].


- The RAW Burst Image Tool window is displayed.
- To exit, click the [Close] button.

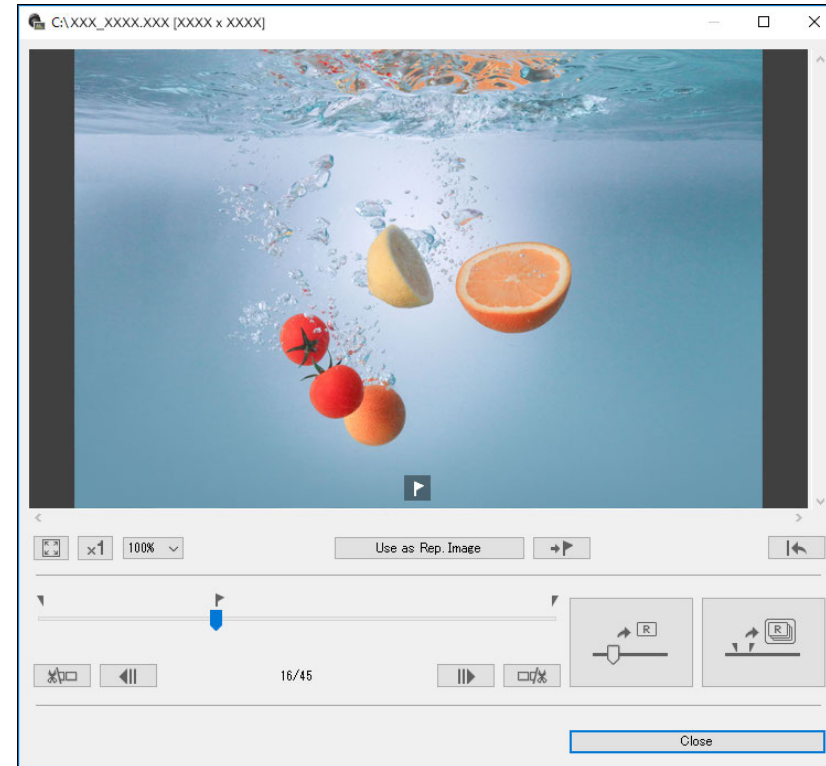Introduction/
ContentsDownloading
ImagesViewing
ImagesSorting
ImagesEditing
ImagesPrinting
ImagesProcessing
Large Numbers
of RAW ImagesRemote
ShootingPlaying Back
Movies and Saving
Still PhotosHDR PQ
ModeSpecifying
Preferences

You can display this function as a function button in the main window's toolbar ([p.125](#)).



RAW Burst Image Tool window functions

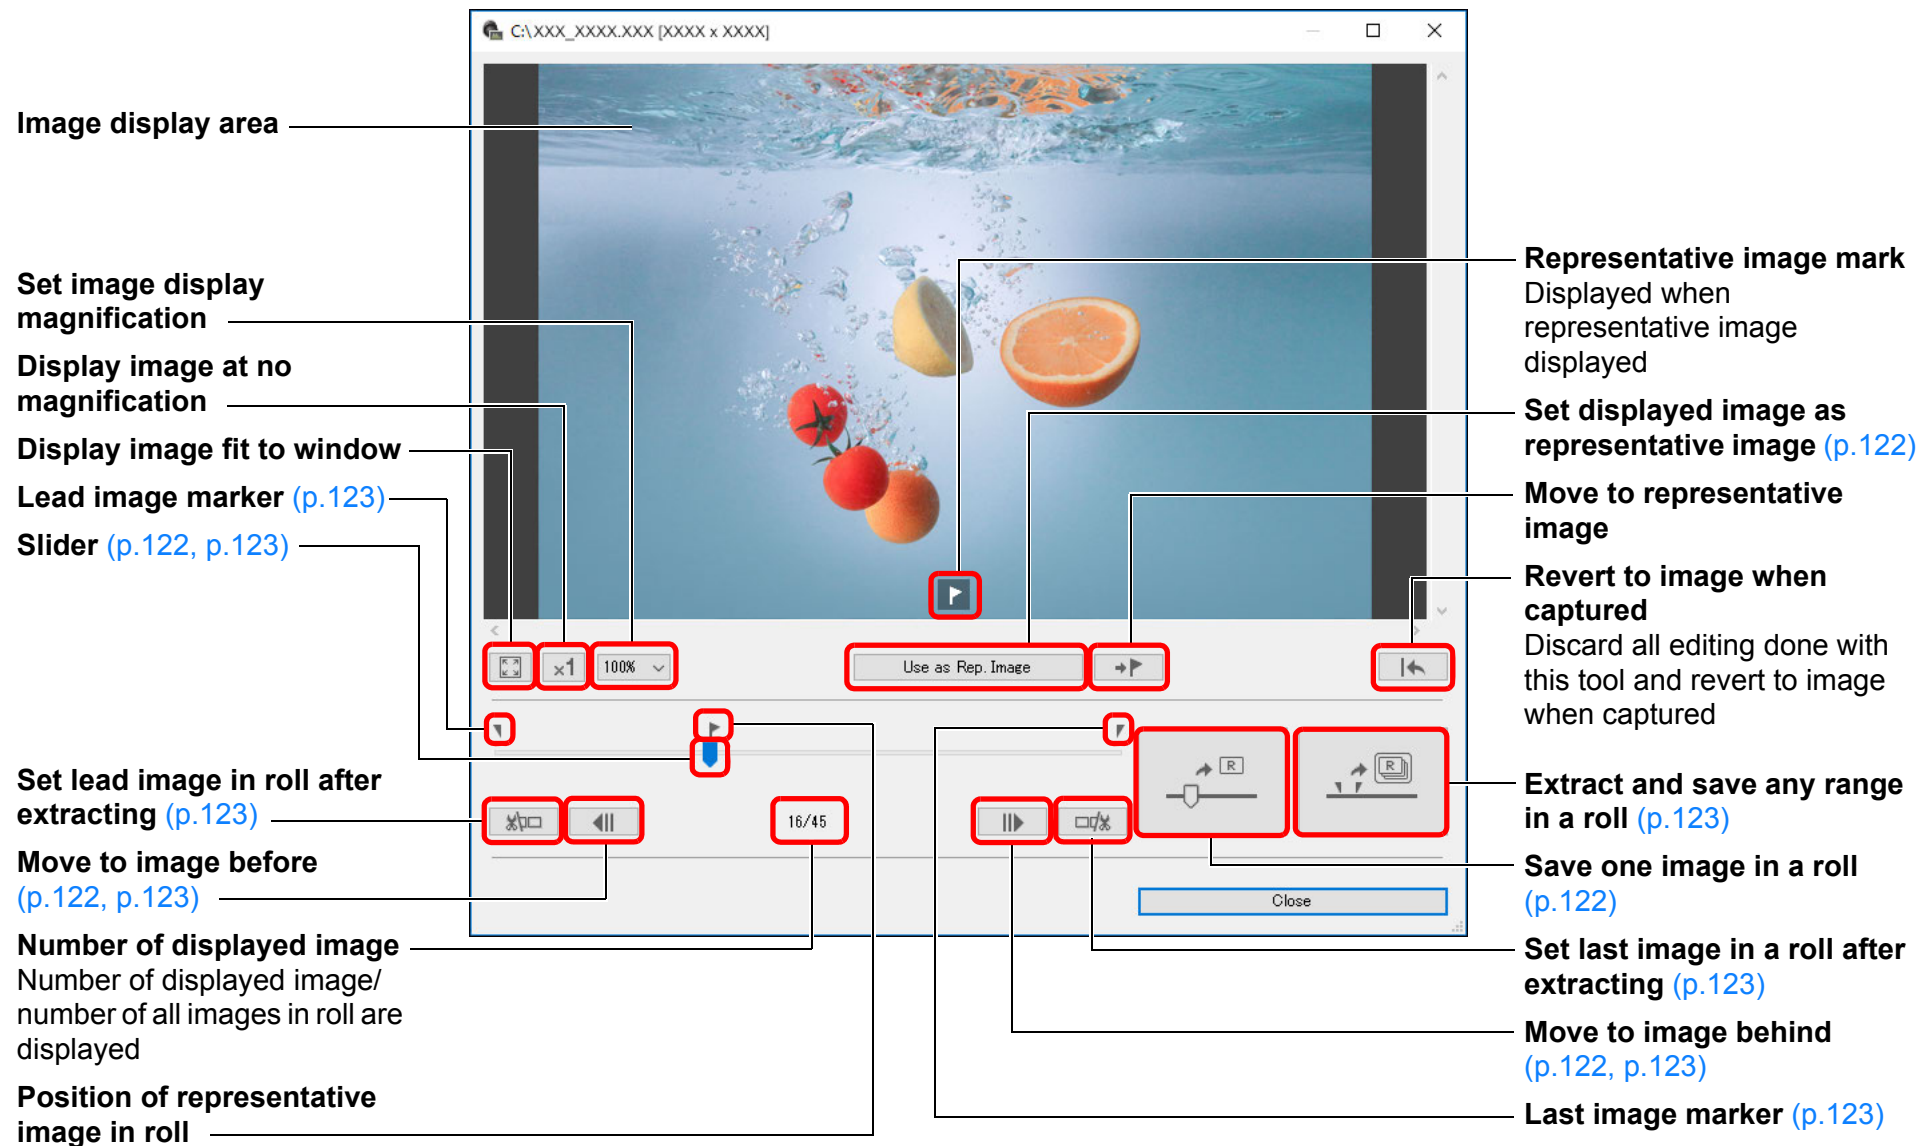

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Changing the Representative Image in a Roll

You can change the representative image to any image in a roll.

1 Display the RAW Burst Image Tool window.


- Perform steps 1 to 2 of “Starting Up the RAW Burst Image Tool” (p.120).
- The RAW Burst Image Tool window is displayed.

2 Display the image you want to be the representative image.

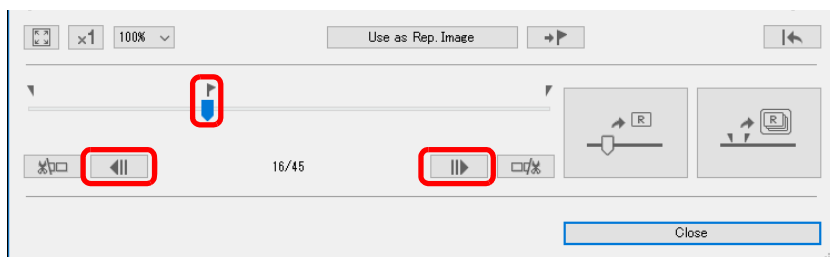

- Use the slider or [] and [] buttons to display the image you want to set as the representative image in the image display area.
- The position of the current representative image is indicated with a [] mark above the slider.

3 Change the representative image.

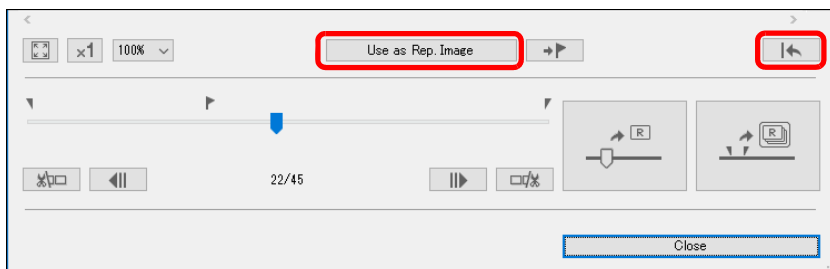

- Click the [Use as Rep. Image] button.
- The representative image changes to the currently displayed image.
- To revert to the image when captured, click the [] button.
- To exit, click the [Close] button.


Saving One Image in a Roll

You can extract any one image in a roll and save it.

1 Display the RAW Burst Image Tool window.


- Perform steps 1 to 2 of “Starting Up the RAW Burst Image Tool” (p.120).
- The RAW Burst Image Tool window is displayed.

2 Display the image you want to save.

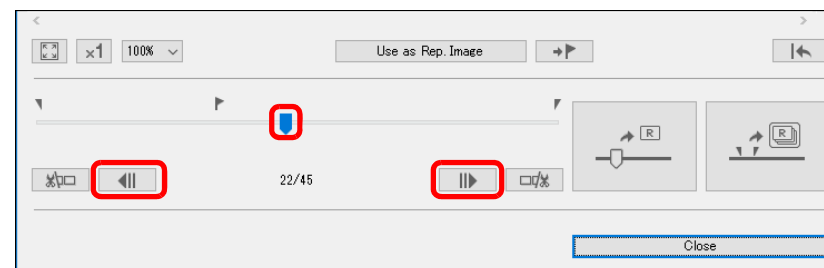

- Use the slider or [] and [] buttons to display the image you want to save in the image display area.

3 Save the image.

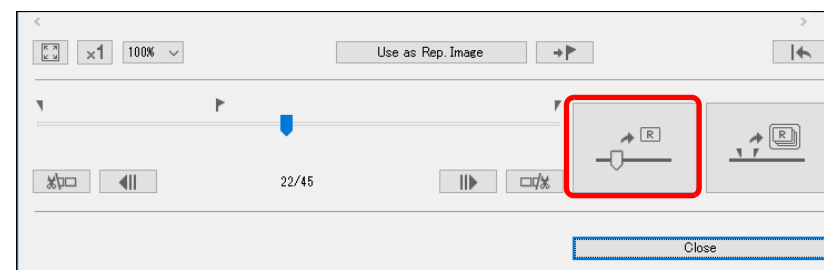

- Specify the necessary settings in the window that appears by clicking the [] button and save the image.
- To revert settings to those when captured, click the [] button.
- To exit, click the [Close] button.


Extracting and Saving Any Range in a Roll

You can extract any range in a roll and save it as a separate roll.

1 Display the RAW Burst Image Tool window.

- Perform steps 1 to 2 of “Starting Up the RAW Burst Image Tool” (p.120).
- The RAW Burst Image Tool window is displayed.

2 Set the lead image.

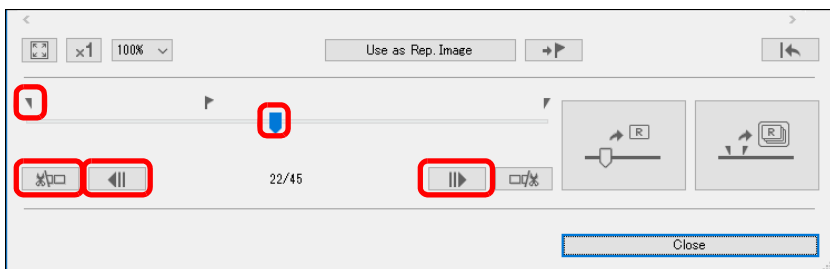


- Use the slider or [] and [] buttons to display the image you want to set as the lead image in the image display area, and then click the [] button.
- The lead image marker () moves, and the lead image in the roll is set.

3 Set the last image.



- Use the slider or [] and [] buttons to display the image you want to set as the last image in the image display area, and then click the [] button.
- The last image marker () moves, and the last image in the roll is set.

4 Save the roll.

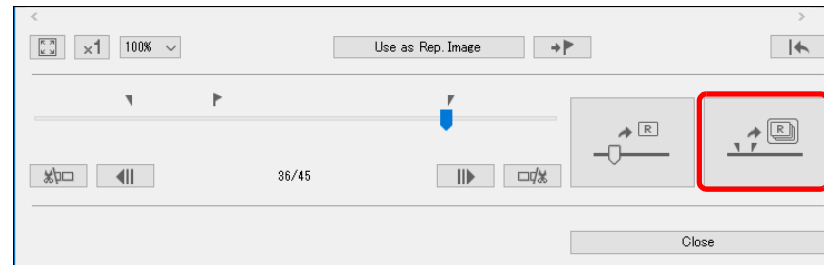

- Specify the necessary settings in the window that appears by clicking the [] button and save the roll.
- To revert settings to those when captured, click the [] button.
- To exit, click the [Close] button.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images


Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences





- Editing performed with this function is not supported with these functions: “Copying a Recipe and Applying to Another Image” (p.97), “Saving a Recipe as a File” (p.97), and “Loading and Applying Recipes” (p.98).
- Editing performed with this function cannot be reverted to the states in [Revert to shot settings] or [Revert to last saved settings] in the [Adjustment] tab in the menu even if they are selected. However, you can press this function's  button to revert the image to the captured image.
- Even after changing the representative image in a roll with this function, shooting information for the roll displayed in the main window, etc. is information for the representative image at the time of shooting.
- Adjustments (recipe) made to a roll in the main window, etc. are not applied in the window for this function (except for 90° image rotation).


Advanced

Transferring a RAW Image to Photoshop


A RAW image can be converted to a TIFF image (16bit) and transferred to Adobe Photoshop.

Select the [Tools] menu ▶ [Transfer to Photoshop].

→ Photoshop starts up and the transferred image is displayed.

 A single image can be transferred at a time

Only one image can be transferred at a time. To send multiple images at a time, see p.136.

-  Compatible versions of Photoshop are 7.0 or later.
- Transferred images are automatically converted to TIFF images (16bit) to which an ICC profile (p.167) is added. The ICC profile contains information about [Preferences] (p.160) or work color space (p.90) set for each image as described and the appropriate color information is relayed to Photoshop.
- When you exit Photoshop, only the original RAW image remains, and the transferred image will disappear. Saving the transferred image as a separate image in Photoshop is recommended.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Customizing the Main Window Toolbar


You can display buttons for frequently-used functions in the main window's toolbar.

You can also change how the buttons are laid out.

1 Select the [Tools] menu ▶ [Customize toolbar].

→ The [Configure Toolbar] window appears.


2 Select functions to display in the toolbar.

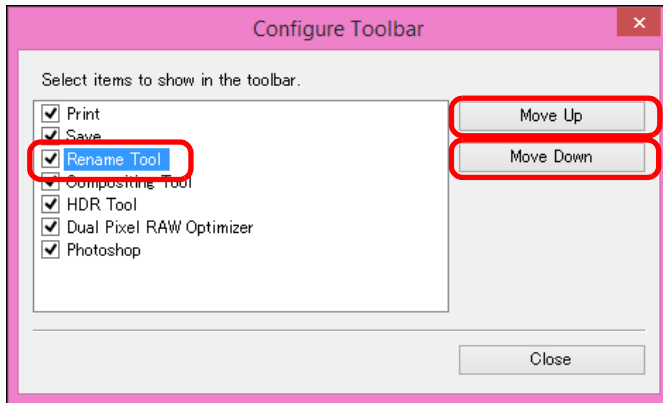

- To rearrange buttons, select the function you want to change, and then click the [Move Up] or [Move Down] button.
 - After specifying settings, click the [Close] button and close the window.
- The settings are applied to the main window's toolbar.

[Introduction/
Contents](#)[Downloading
Images](#)[Viewing
Images](#)[Sorting
Images](#)[Editing
Images](#)[Printing
Images](#)[Processing
Large Numbers
of RAW Images](#)[Remote
Shooting](#)[Playing Back
Movies and Saving
Still Photos](#)[HDR PQ
Mode](#)[Specifying
Preferences](#)

5 Printing Images

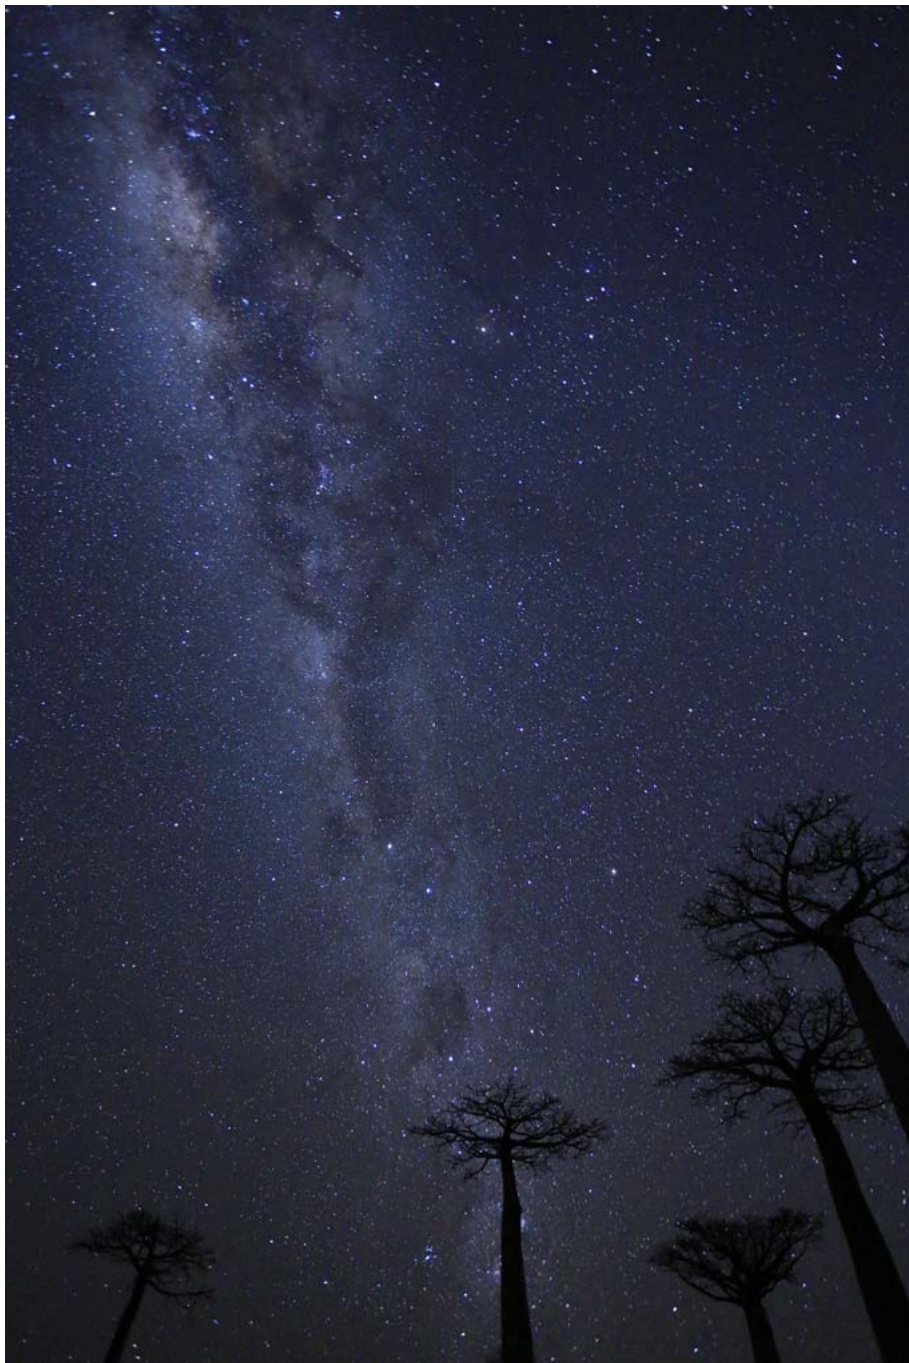

Printing an Image	127
Printing with Shooting Information.....	128
Printing a Thumbnail List (Contact Sheet Printing)	129
Plug-in printing.....	130

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Printing an Image

You can print images with a printer. As an example, the procedure to print one image on one sheet of paper is described here.

1 Select the image to be printed.

2 Select the [File] menu ▶ [Print].

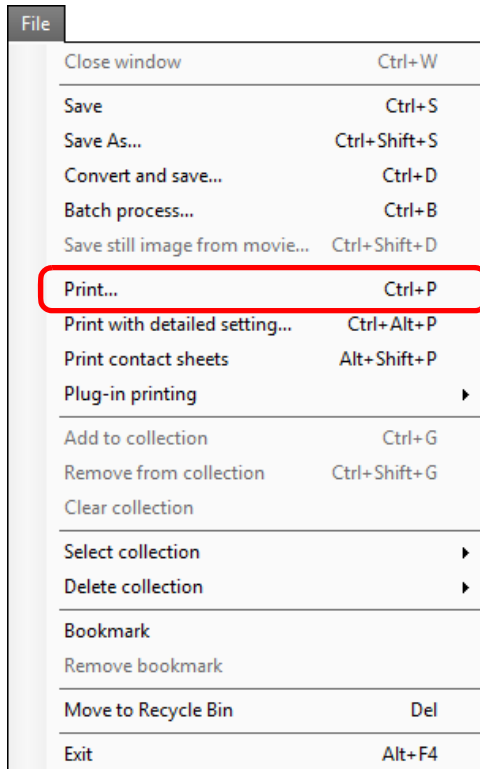

→ The printer's print settings dialog box appears.

3 Print.

- Specify the optimum settings for printing photographs in the printer's print settings dialog box and click the [OK] button.

→ Printing begins.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Printing with Shooting Information

You can freely layout one image on one sheet of paper and print together with titles and shooting information, etc.

- 1 Select one image to be printed.
- 2 Select the [File] menu ▶ [Print with detailed setting].
- 3 Specify the required settings for printing, and then click the [Print] button.

Switches the settings tab sheet

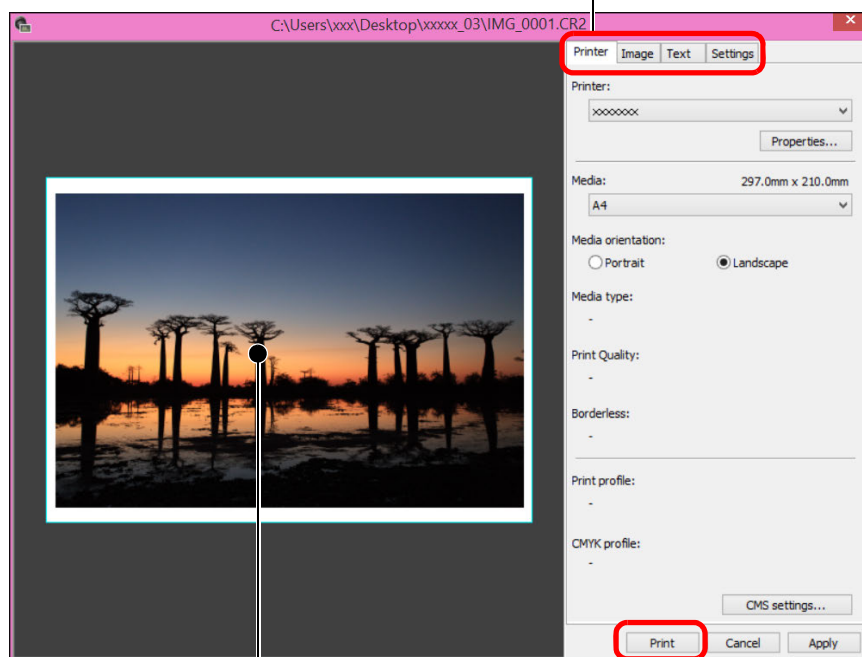

Print preview

- The image can be moved by dragging.
- Drag the four corners of the image to change the size.
- For the shooting information, click [i] on the [Text] tab sheet and select the necessary items in the window that appears.



To maintain the settings

The settings of each tab sheet in step 3 are memorized when printing or the [Apply] button is clicked. The settings can be applied to another image when printing.

Memorized settings are options in [Printer], [Media], [Media orientation], [Registration marks], [Header], [Footer], and [Image Information], and settings in the [Settings] tab sheet.



- You can set printer profiles ([p.161](#)).
- If CMYK simulation is set, the image is printed in the set colors.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Printing a Thumbnail List (Contact Sheet Printing)

You can print rows of multiple images on one sheet of paper.

- 1 Select images to be printed in a thumbnail list.
- 2 Select the [File] menu ▶ [Print contact sheets].
- 3 Specify the required settings for printing, and then click the [Print] button.

Switches the settings tab sheet

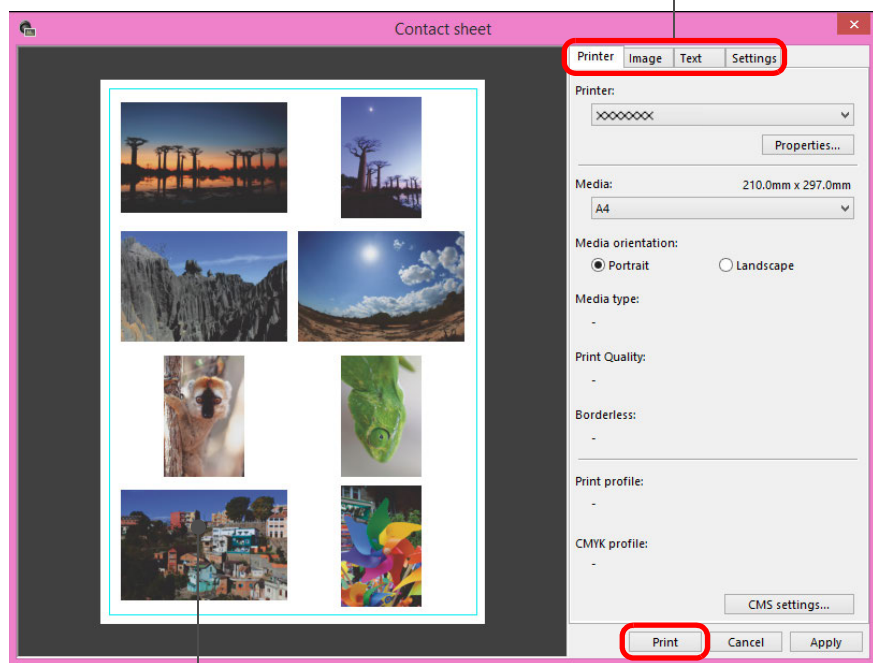

Print preview



To maintain the settings

The settings of each tab sheet in step 3 are memorized when printing or the [Apply] button is clicked. The settings can also be applied to another image when printing.

Memorized settings are [Printer], [Media], and [Media orientation], and settings in the [Image] and [Settings] tab sheets.



- You can set printer profiles ([p.161](#)).
- If CMYK simulation has been set, the image is printed in the set colors ([p.160](#)).
- By using this function in the edit image window, all images in the window (not only the selected ones) are printed in a thumbnail list.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Plug-in printing

- 1 Select the [File] menu ▶ [Plug-in printing] ▶ Plug-In for the printer you use.
→ The Plug-In starts up.
- 2 Specify the required settings for printing photographs and then print.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



6 Processing Large Numbers of RAW Images



Batch Apply White Balance to Images (Personal White Balance)	132
Registering Personal White Balance	132
Applying Personal White Balance	133
Batch Save as JPEG or TIFF Images (Batch Processing).....	134
Batch Transfer Images to Image Editing Software	136
Batch Change the File Name of Images.....	137
Changing the File Name of Images in the Order in the Main Window	137

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences






Batch Apply White Balance to Images (Personal White Balance)

The white balance adjustments made to a RAW image shot in a specific shooting environment can be registered as personal white balance. You can then perform efficient white balance adjustment by applying this personal white balance to a large number of RAW images shot in the same shooting environment.

Personal white balance data for versions before DPP 4 cannot be applied.

Registering Personal White Balance

- 1 Adjust the white balance (p.52, p.53).**
 - To adjust white balance, select a setting other than [ ()] from the [White balance adjustment] list box (p.51). Registering the adjustments is not possible if [ ()] is selected.
- 2 In the Basic adjustment tool palette, click the [Register] button.**
 - The [Register personal white balance] dialog box appears.
- 3 Select the button number to be registered from the list and click the [OK] button.**

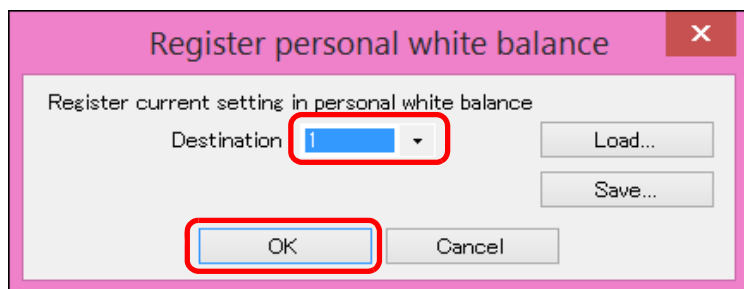

? To use the registered personal white balance on another computer

- 1 In step 3, click the [Save] button to write as a file.
- 2 Copy the file to another computer.
- 3 In DPP on another computer, display the window of step 3.
- 4 Click the [Load] button and in the window that appears, select the copied file.

! You cannot change or adjust white balance with multiple-exposure RAW images created on the camera.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos


HDR PQ
Mode

Specifying
Preferences



Applying Personal White Balance

- 1 In the main window, select the image to which a personal white balance is to be applied.
- 2 Select the [View] menu ▶ [Tool palette].
→ The tool palette appears.
- 3 Click the personal white balance number button that is to be applied.

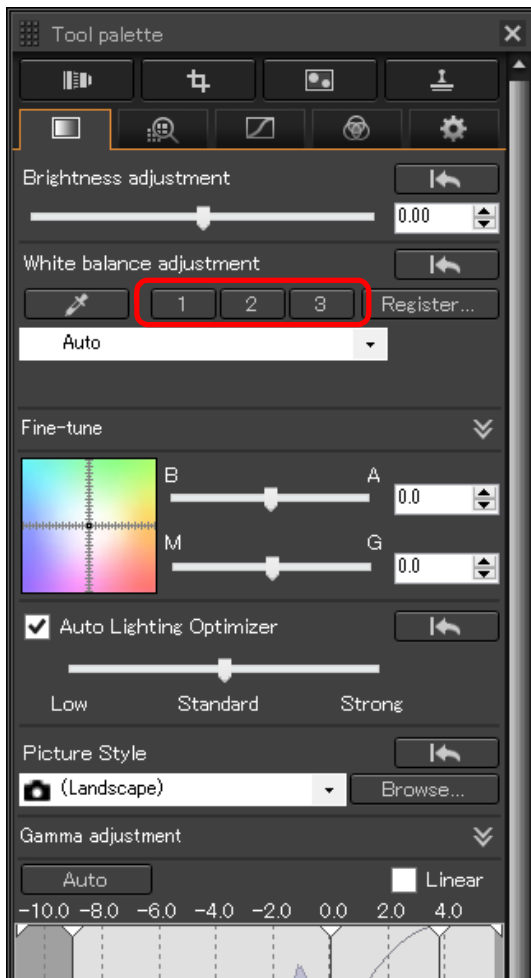

→ Personal white balance is applied to all the selected images.

Batch Save as JPEG or TIFF Images (Batch Processing)

You can batch convert and save edited RAW images to highly versatile JPEG or TIFF images.


The images are saved as separate images, so the RAW images remain unaffected.

1 In the main window, select multiple images to be converted.

2 Select the [File] menu ▶ [Batch process].

→ The [Batch settings] window appears.

3 Specify the required settings, and then click the [Execute] button.

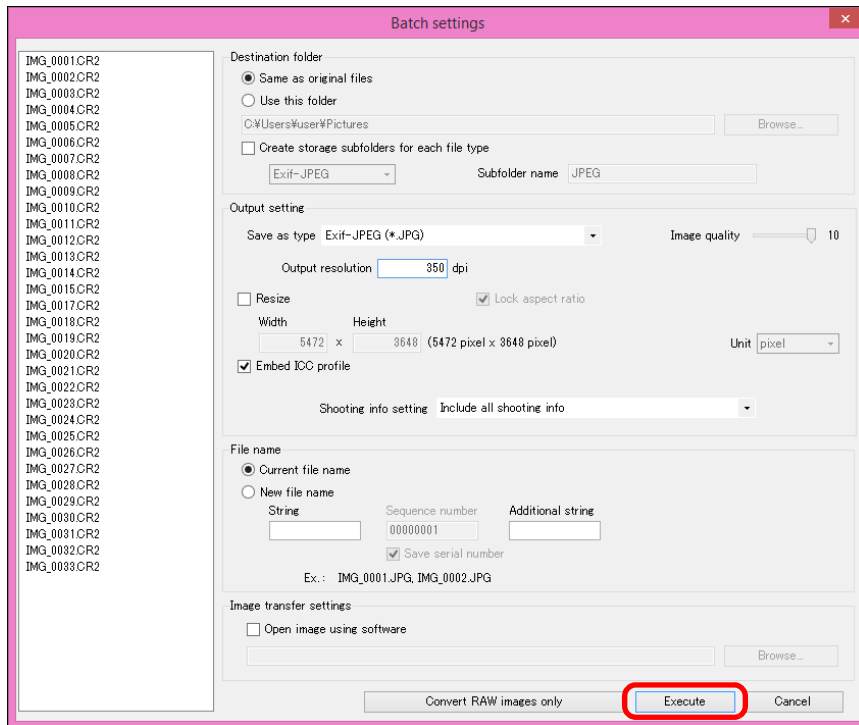

→ The batch processing dialog box appears and saving begins.

→ When all the images are saved, the [Exit] button appears in the batch processing dialog box.

4 In the processing dialog box, click the [Exit] button.



- If you have selected [New file name] in [File name], [Sequence number] has to be set.
- By saving as explained above, a trimmed image (p.70) or dust-erased image (p.85 to p.89) actually becomes a trimmed image or dust-erased image.
- You can also use this function in the edit image window. However, all images in the window (not only the selected ones) are converted and saved.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Saving images with recipe is not possible

In the [Batch settings] window, you cannot perform [Save] or [Save As] (p.93) to edited RAW images.

To save the developing/editing results for the version you are currently using

DPP's RAW image development processing technology is continually being improved upon so that you can perform the latest image processing more appropriately.

Meaning that, between two different versions of DPP, processing results may differ very slightly even if with the same RAW image data, or the results of significant editing of RAW image data with an attached recipe may be different.

When you want to save the developing or editing results of the version you are currently using as it is, converting and saving images as JPEG or TIFF images is recommended.

Skillful batch saving

● While saving is being performed, you can continue working in another window

Since the saving function operates independently in the background, you can continue with an operation in another window such as the main window or the preview window during the saving process.

● To convert all images and save, do not select an image in the main window

If you do not perform step 1 and perform step 2 with no image selected in the main window, all the images displayed in the main window will be converted and saved.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



Batch Transfer Images to Image Editing Software

You can transfer multiple images to image editing software. Unlike “Transferring a RAW Image to Photoshop” (p.124), you transfer images that have first been converted and saved as a separate image, so the transferred image will not be deleted after exiting the destination software. The software used here as an example is Adobe Photoshop.

- 1 In the main window, select multiple images to be transferred.
- 2 Select the [File] menu ▶ [Batch process].
→ The [Batch settings] window appears.
- 3 Perform settings required for transferring (e.g. file format).
- 4 Checkmark [Open image using software].

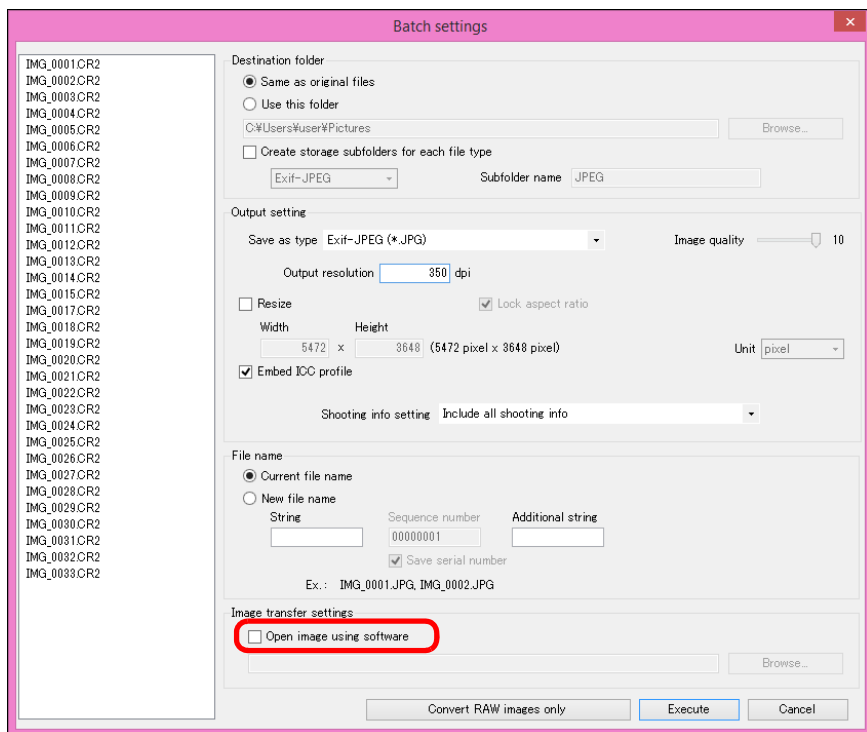

→ The [Open] dialog box appears.

5 Select Photoshop.

- In the [Open] dialog box, select a Photoshop file or a shortcut and click the [Open] button.
- The [Open] dialog box closes and [Image transfer settings] in the [Batch settings] window is set to Photoshop.

6 Click the [Execute] button.

- The processing dialog box appears and batch transfer begins.
- When the first image has been transferred, Photoshop starts up and transferred images are displayed in transferred order.



- To reset the transfer destination to another software, click the [Browse] button in [Image transfer settings], and in the [Open] dialog that appears, select the software and click the [Open] button.
- You can also use this function in the edit image window. However, all images in the window (not only the selected ones) are transferred.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos


HDR PQ
Mode

Specifying
Preferences



Batch Change the File Name of Images

- 1 In the main window, select multiple images of which the file names are to be changed.
- 2 Select the [Tools] menu ▶ [Start Rename tool].
→ The rename window appears.
- 3 Specify the required settings and click the [Execute] button.

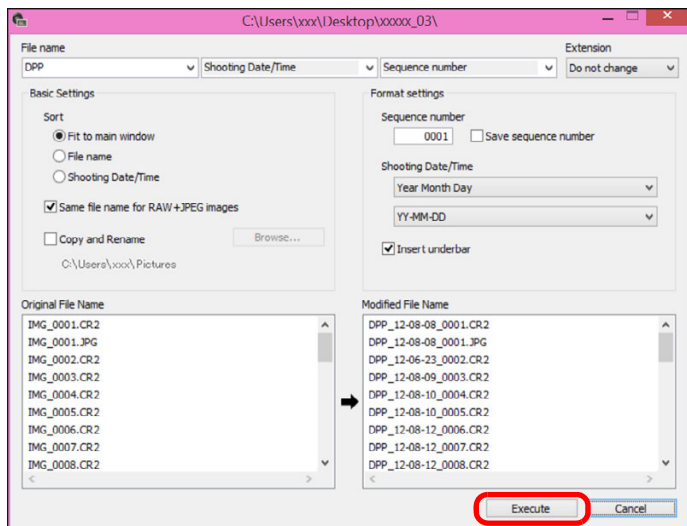

→ Processing begins and the file names are changed.

? Changes cannot be made when the file name is duplicated


If a file name in red text appears in [Modified File Name], the file name is duplicated. Changes cannot be made if even one file name is duplicated. Change the settings so that duplication does not occur.

- You can change the file name of only one image in the main window by selecting the thumbnail, right-clicking with the mouse, and selecting [Rename] from the menu that appears.
- You cannot start up the rename tool from the [Collection] window (p.102). You also cannot change the file name of one image.

Changing the File Name of Images in the Order in the Main Window

When you change the order of the images in the main window, you can change in one operation the names of the files for the images, in the order they were rearranged.

- 1 Change the order of the images in the main window (p.36).
- 2 In the main window, select multiple images of which the file names are to be changed.
- 3 Select the [Tools] menu ▶ [Start Rename tool].
- 4 Select [Fit to main window].

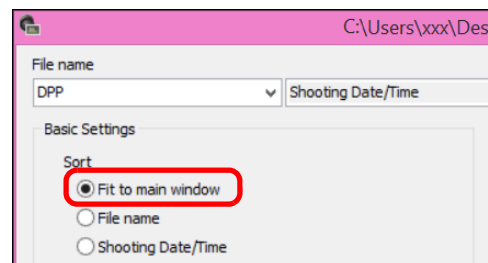

- 5 Specify the required settings.
 - To copy an image, checkmark [Copy and Rename].
- 6 Click the [Execute] button.
→ The file names are changed and the order in the main window is maintained.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



7 Remote Shooting

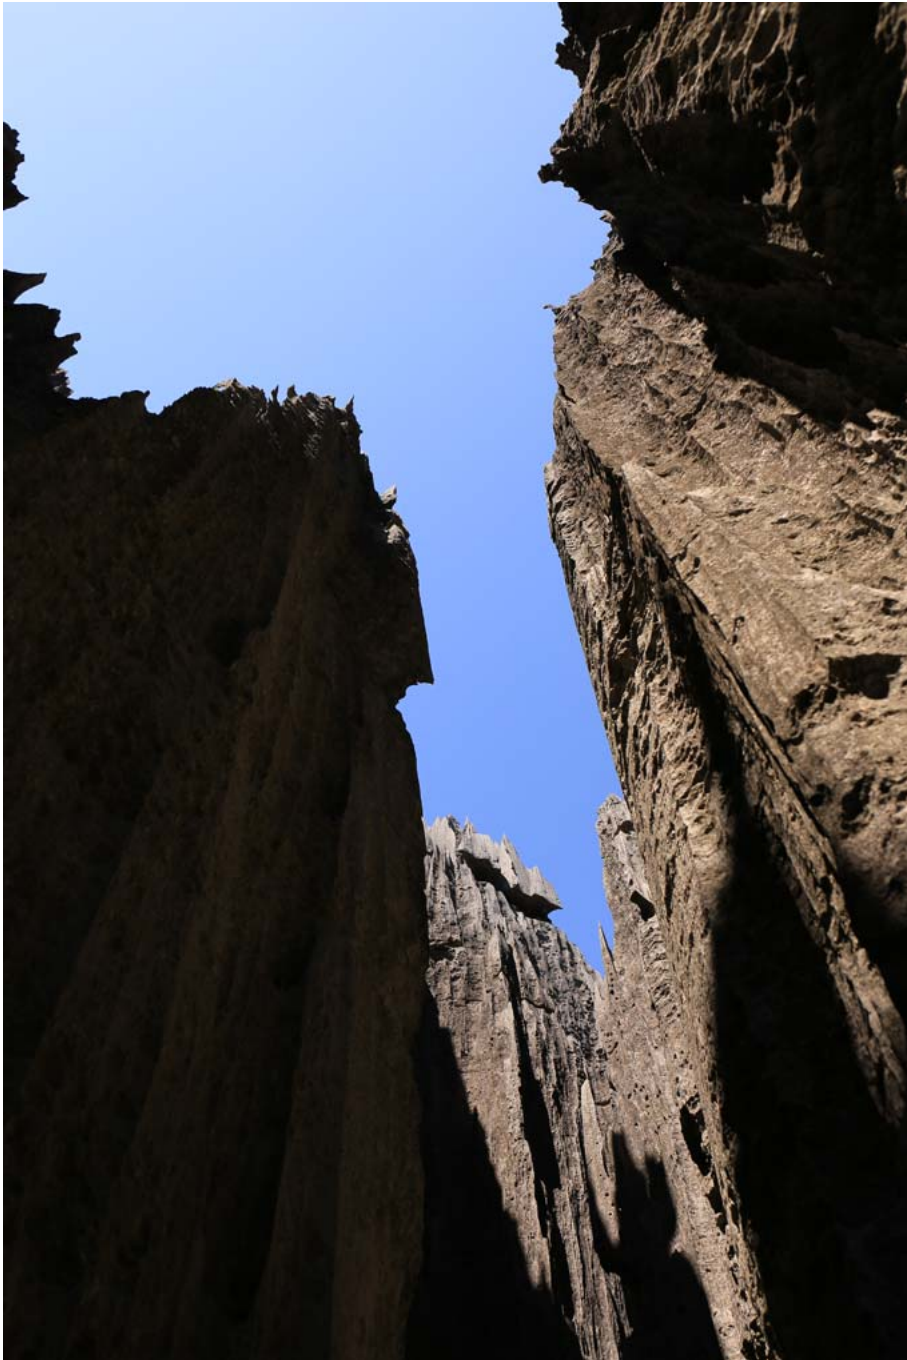

Remote Shooting.....	139
Registering Click White Balance in the Camera.....	142

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

**Remote
Shooting**

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




Remote Shooting

You can perform remote shooting by using “EOS Utility” which enables communication with a camera in combination.


For remote shooting, “EOS Utility Ver. 3.x” must be installed on your computer. For information on cameras compatible with “EOS Utility Ver. 3.x”, refer to “EOS Utility Ver. 3.x Instruction Manual” (electronic manual in PDF format). This function is not available on EOS M series cameras other than the EOS M50, or PowerShot cameras.

1 Click the [Remote Shooting] button on the toolbar in the main window.

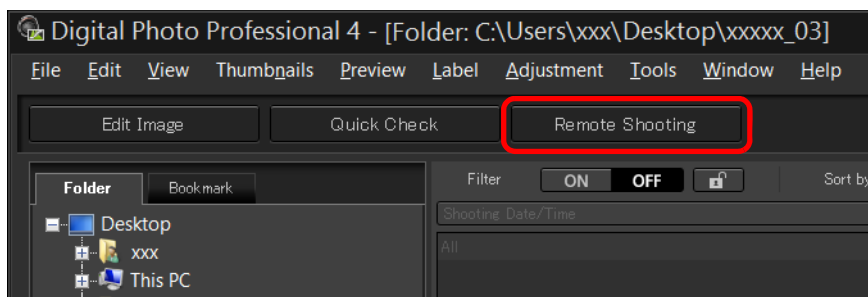

→ Remote shooting setting window appears.

2 Set the [Destination] in the Specify Remote Shooting Folder window.

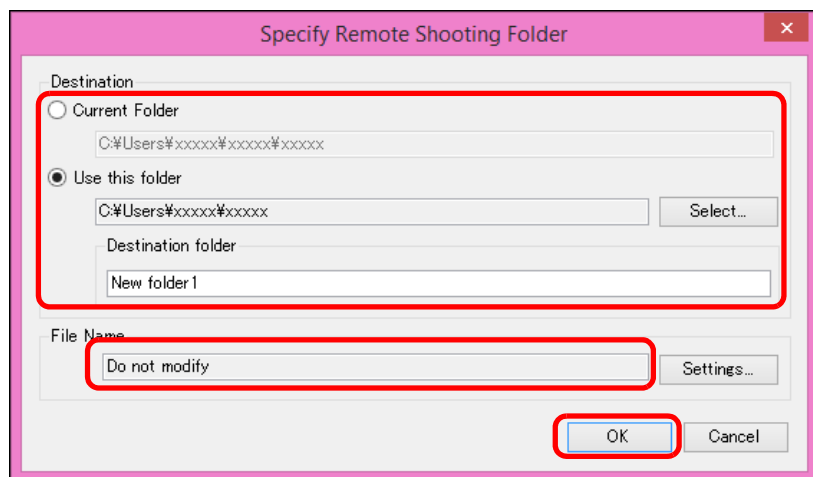

- To save to the currently selected folder, select [Current Folder].
- To create a new folder for saving images, select [Use this folder], click the [Select] button, then select the destination and enter a name for [Destination folder].
- After specifying settings, click the [OK] button.
- The remote shooting window appears.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences






You can change the [File Name] for Specify Remote Shooting Folder window.
(If [Do not modify] is selected, images are saved with the file names set on the camera.)

- 1 Click the [Settings] button to display the Set file name for captured image window.

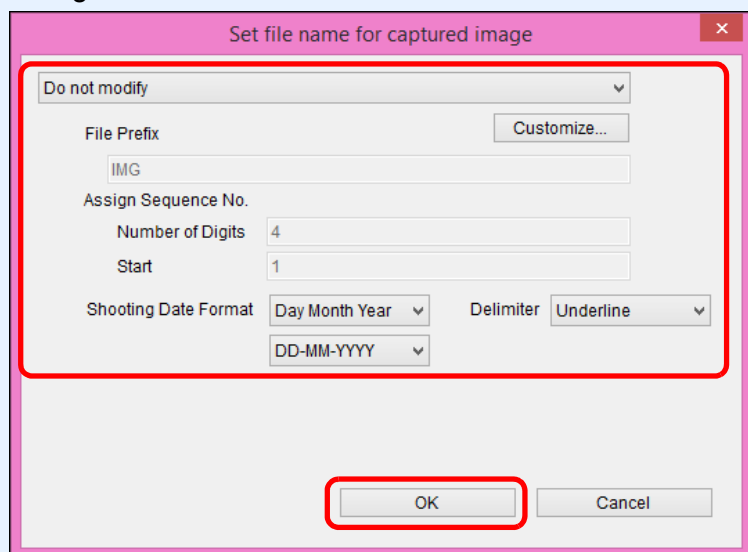


- 2 Select a naming rule for image file names from the list box.
You can click the [Customize] button and customize naming rules for file names.
 - You can individually set prefix characters, number of digits for serial numbers, and the start number for file names.
 - If you are using the shooting date in file names, you can specify the date format (order and style for year-month-date) and dividing characters on the Set file name for captured image window.
- 3 After specifying settings, click the [OK] button.
 - The Set file name for captured image window closes.
 - After clicking the [Remote Shooting] button, you can click the [📷] button at the bottom right of the main window to show/hide the [Camera Control] palette.

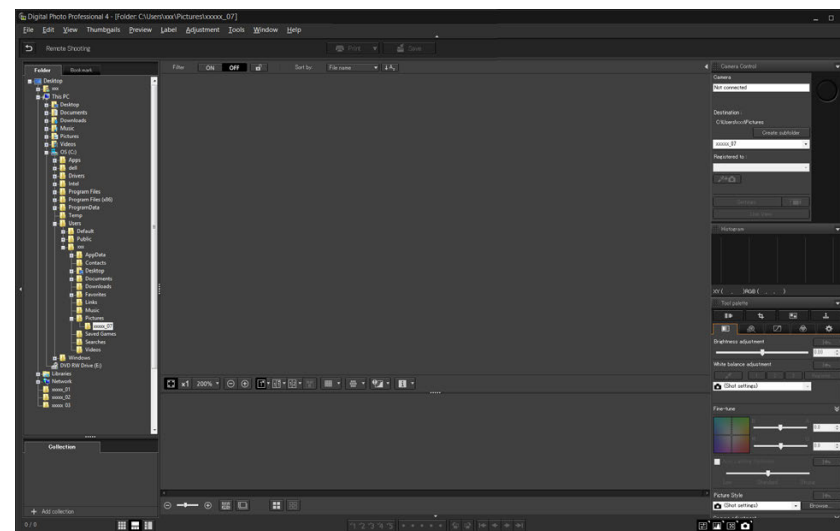

- You can perform shooting while checking the image by switching the window to multi-layout.

- 3 Connect a camera and a computer, and turn on the camera's power.


- 4 Click the [Live View] button.

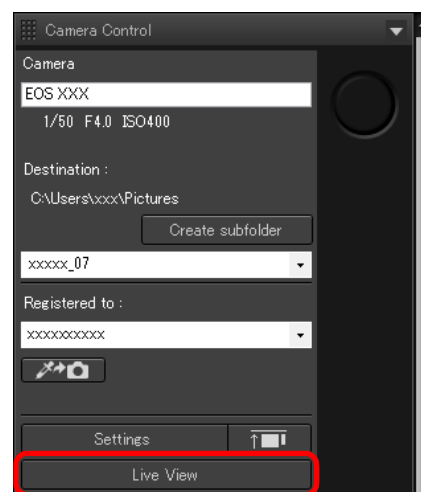

- Live View window of "EOS Utility" appears.




5 Specify the required settings.

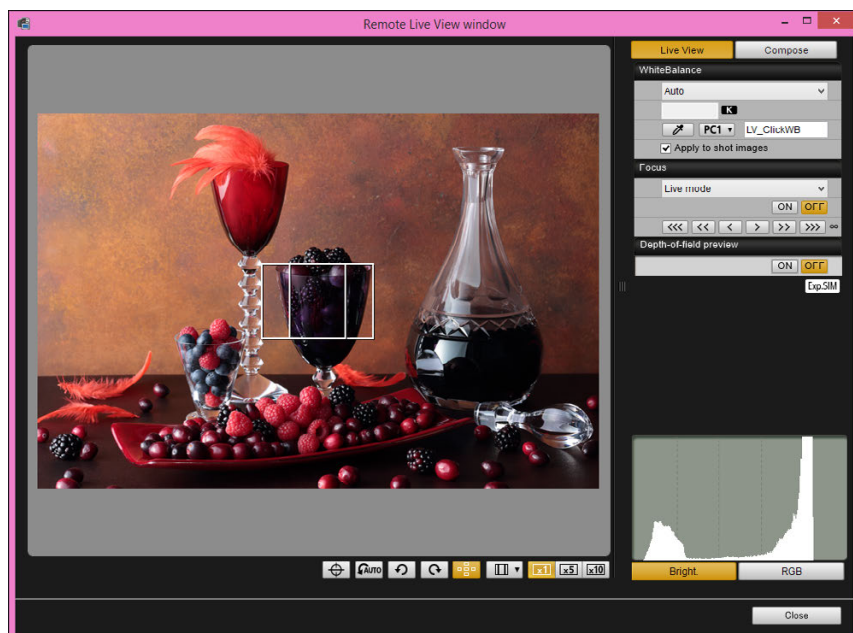


- For detailed instructions on setting procedures, refer to “EOS Utility Instruction Manual” (PDF electronic manual).

6 Click the [Settings] button.

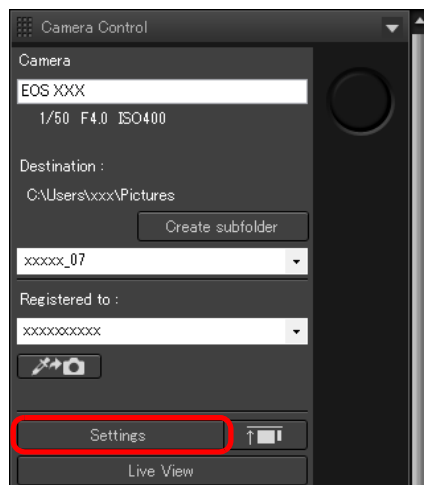


- The capture window of “EOS Utility” appears.


7 Specify the required settings.

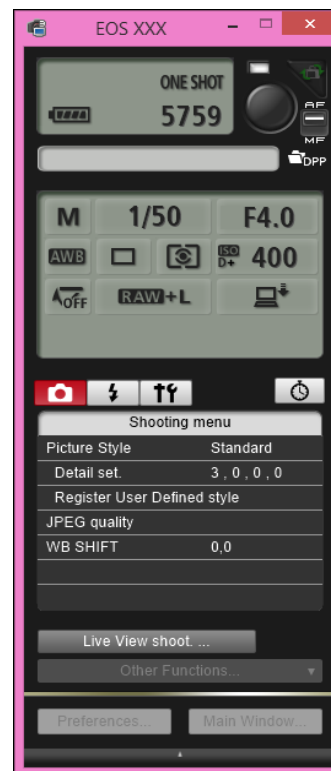



- For detailed instructions on setting procedures, refer to “EOS Utility Instruction Manual” (PDF electronic manual).


8 Take the picture.

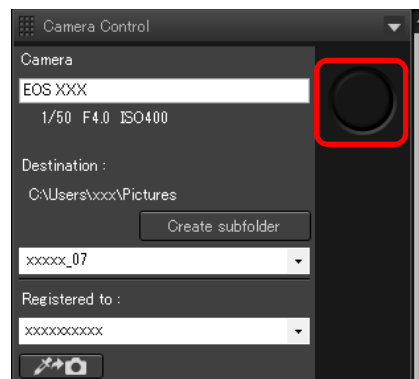

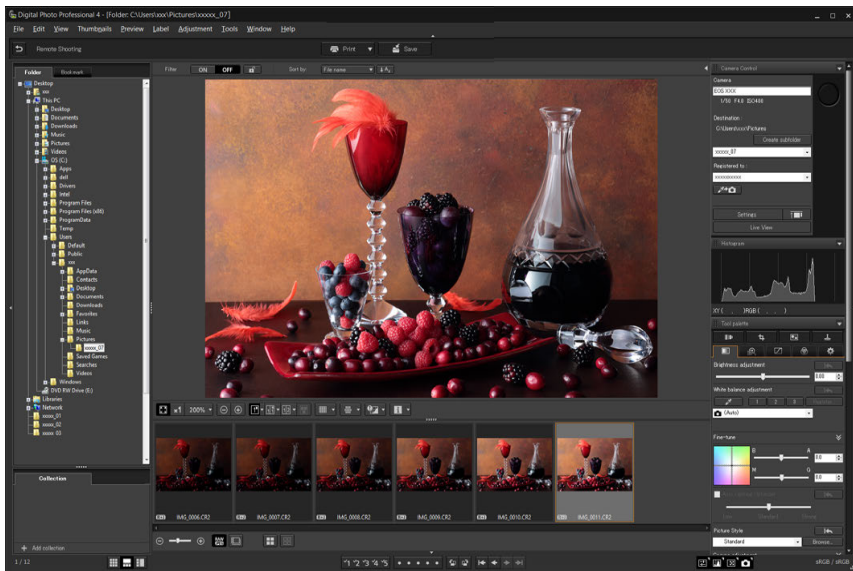

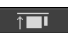- The shot image is displayed.
 - The shot image will be saved in the folder created in step 2.
 - The images in the folder mentioned above will be displayed in the thumbnail display area.
- You can also create a sub-folder in the folder mentioned above to save images. To create a sub-folder, click the [Create subfolder] button on the remote shooting window, enter [Folder name] on the screen appeared, then click the [OK] button.
- Press the [] button to display DPP and EOS Utility windows uniformly in line.
 - Supported with EOS Utility version 3.8 and later.
 - If you are using multiple monitors, DPP's main window and EOS Utility's remote window can only be lined up uniformly when on the same monitor.

 Do not exit “EOS Utility” when remote shooting is being set or performed.

-  In the cases below, perform shooting with EOS Utility.
 - You want to autofocus with EOS Utility's shoot button
 - You want to perform continuous shooting
- You can perform shooting while comparing the shot image with a pinned image by pinning an image (p.21). This is convenient for image selection.

Registering Click White Balance in the Camera

During remote shooting, you can register click white balance to the connected camera. To use this function, EOS Utility version 3.4.20 or later must be installed on your computer.


This function is not available on EOS M series cameras other than the EOS M50, or PowerShot cameras.

1 Display the shot image to be used as the standard for white balance.



- This function supports only RAW images with a “.CR2” or “.CR3” extension.

2 Select the destination where to register click white balance.

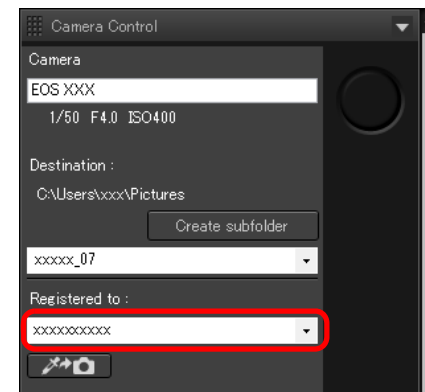

- Select the destination where to register white balance from the [Registered to] list box. Options in the list box depend on the camera model.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos



HDR PQ
Mode

Specifying
Preferences

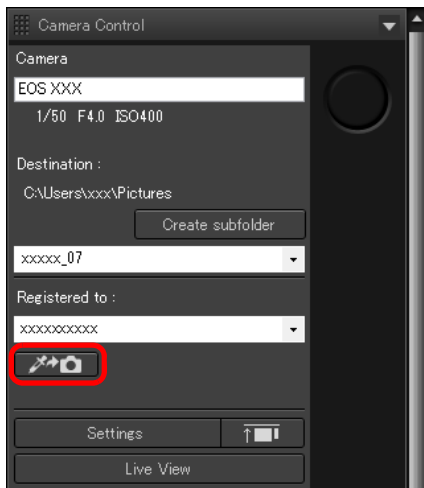

3 Select a point that is to be the standard for white balance in the shot image, and register the white balance in the camera.



- Click the [] button, and in the displayed image in step 1, click on a point that is to be the standard for white balance with the mouse.
- The white balance is registered to the destination selected in step 2, and applied to displayed images.
- Click [] again to exit the function.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



8 Playing Back Movies and Saving Still Photos



Playing Back Movies and Saving Still Photos 145

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Playing Back Movies and Saving Still Photos

In systems running 64-bit versions of Windows 8.1 or later, you can use DPP to play back MOV or MP4 movies shot using a supported camera and save still photos from the movies as JPEG or TIFF images. To use this function, [Play with Digital Photo Professional 4] must be selected in [Movie file playback] in the [General Settings] tab sheet in [Preferences].

Note that you cannot edit movies in DPP.

1 Double-click the movie thumbnail in the main window (thumbnail layout).



→ The preview window appears.

● If the preview control panel does not appear, select the [Preview] menu ► [Preview control panel].

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



2 Use the preview control panel for each operation.

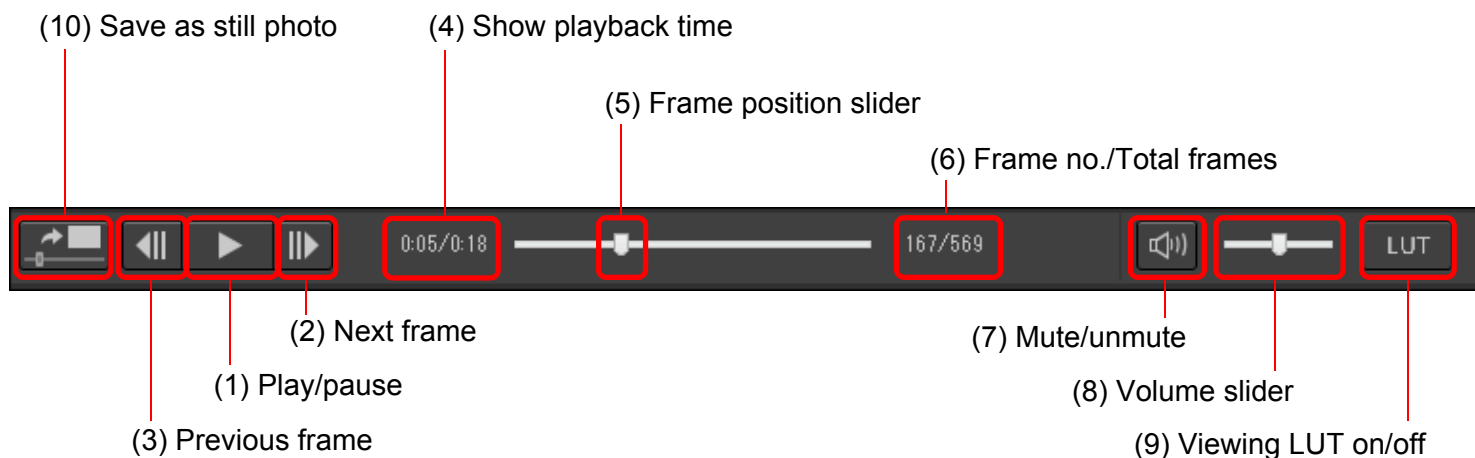

- (1) Play/pause**
Play and pause the selected movie.
- (2) Next frame**
Move forward one frame. When movie playback is paused, this allows you to advance the movie one frame at a time.
- (3) Previous frame**
Move back one frame. When movie playback is paused, this allows you to rewind the movie one frame at a time.
- (4) Show playback time**
Shows the playback time.
- (5) Frame position slider**
By dragging the slider left or right, you can move the playback position while a movie is playing or paused.
- (6) Frame no./Total frames**
Shows the current frame number in the movie being played back or shown and the total number of frames.
- (7) Mute/unmute**
Turns audio output on or off.
- (8) Volume slider**
Drag the slider left or right to adjust the volume for the movie being played back.
- (9) Viewing LUT on/off**
Enables or disables Viewing LUT for movies shot with Canon LOG specified. This setting can also be changed during movie playback.
- (10) Save as still photo**
Allows you to capture a still photo of the movie frame currently being displayed. When you click the button, the [Convert and save] window (p.94) appears. Specify the necessary settings, and then click the [Save] button to save the image. Note that you cannot save a still photo while the movie is playing back. Pause the movie and then save the still photo.

● If the preview control panel does not appear, select the [Preview] menu ► [Preview control panel].

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images


Remote
Shooting


Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



 On some supported cameras, shooting a movie generates a “.THM” file that is saved together with the movie file. The “.THM” file has the same image number as the movie file and records the shooting information. In DPP, the movie file and “.THM” file must be stored in the same folder when the movie is played back.

 You can also play back movies in the following windows:

- Main window (multi-layout)
- Edit image window
- Remote shooting window (multi-layout)
- Multi-function preview window

• In Preferences, you can change the movie playback application to that used by your computer’s OS or to EOS MOVIE Utility.
(p.157)
For information on EOS MOVIE Utility, refer to the EOS MOVIE Utility Instruction Manual.

9 Using HDR PQ Mode



HDR PQ Mode.....	149
System Requirements for HDR PQ Mode	149
Displaying Images in HDR PQ Mode	150
Cautions when Using HDR PQ Mode.....	152
Saving Images Displayed in HDR PQ Mode in JPEG/ TIFF Format.....	154
Saving Images Displayed in HDR PQ Mode in HEIF Format	155

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences




HDR PQ Mode

HDR stands for High Dynamic Range and refers to technology that enables expression of “a wider range of brightness” than with the conventional range. The conventional range of brightness is referred to as SDR (Standard Dynamic Range) = “standard brightness range” when compared to HDR.

The “PQ” in this function’s name, HDR PQ, stands for Perceptual Quantization and refers to the gamma curve of the input signal for displaying HDR images. It is capable of brightness up to 10,000 cd/m² and approximates human visual characteristics. HDR PQ mode displays RAW images shot with a supported camera in HDR PQ (10-bit) on an HDR display compliant with the HDR standard. (Actually displayed images depend on monitor performance.)

You can also edit and save images.

In addition, DPP has the function “Creating HDR (High Dynamic Range) Images” (p.108). However, this function assumes that display is in conventional SDR, and combines exposure-bracketed images (HDR compositing) to achieve image expression that uses a wide range of gradation from shadows to highlights, and is thus different from HDR PQ mode.

 **32bit** On 32-bit OSs, this function is not available.

System Requirements for HDR PQ Mode

System Requirements

OS (operating system)	Windows 10 (Version 1607 or later), Windows 8.1, Windows 7 (all 64-bit versions)*
CPU	Core i series 3.4 GHz or higher
RAM (memory)	4.0 GB or more of RAM (8.0 GB or more recommended)
Supported images	RAW, CRAW, and DPRAW images shot with the EOS R or EOS Ra RAW and DPRAW images shot with the EOS 5D Mark IV HEIF images saved in DPP

* Since HDR PQ cannot be displayed in Windows 8.1/7, images are displayed in SDR according to the characteristics of the display so that they approximate display in HDR PQ as much as possible.

Systems where images are displayed accurately in HDR PQ

OS (operating system)	Windows 10 (64-bit version) Version 1709 or later
GPU (video card)	Video cards: NVIDIA GeForce GTX 10 series, AMD Polaris architecture, etc. (4 GB or more video memory recommended)
Display	Products that meet HDR10 standards*
Cable	HDMI 2.0a/b

* Images may not be displayed correctly depending on display performance.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



Displaying Images in HDR PQ Mode


This section explains how to display images where system requirements are as described in “Systems where images are displayed accurately in HDR PQ” on the previous page. Additionally, in Windows, you must specify the HDR option for display settings.

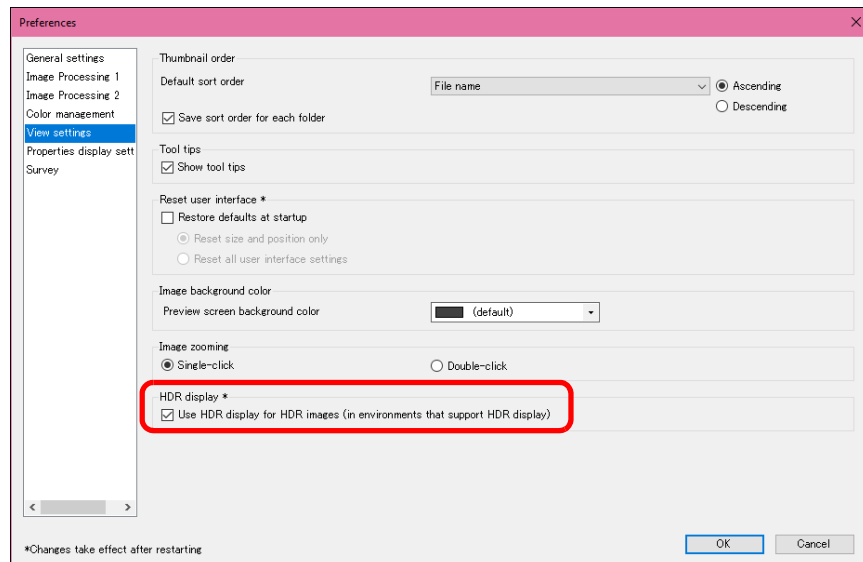


- 1 Check that checkbox in [Preferences] ▶ [View settings] tab sheet ▶ [HDR display] is checked.



- If not checked, checkmark the checkbox, click the [OK] button, and then restart DPP.

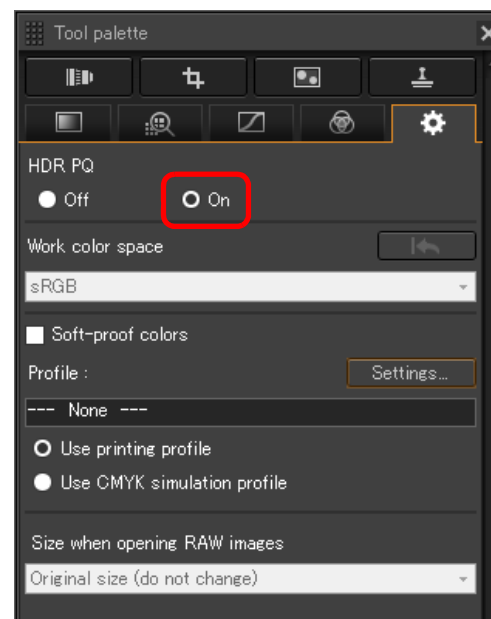- 2 Select an image in the main window, etc., and then open the Settings tool palette and select [On] in [HDR PQ].



- The image is displayed in HDR PQ mode.
- Images are displayed in HDR PQ only in the main window, the edit image window, the preview window, second windows, and the enlargement check screen. In other windows, images are displayed in SDR according to the characteristics of the display so that they approximate display in HDR PQ as much as possible.
- The following icons are displayed in the preview window and thumbnail frames for images displayed in HDR PQ mode.
 - Thumbnail frame: 
 - Preview window (when connected to an HDR display): 
 - Preview window (when connected to an SDR display, when the computer's OS is Windows 8.1/7): 

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences





- **HDR PQ mode display when an SDR display is connected**

You can use images in HDR PQ mode also when connected to an SDR display.

When an SDR display is connected, the image is displayed according to the characteristics of the SDR display so that the image approximates display in HDR PQ on an HDR display as much as possible.

However, the large difference in regions that can be rendered between HDR displays and SDR displays results in a different impression of colors and gradations.

- **HDR PQ mode display on a computer with a Windows 8.1/7 OS**

If the computer's OS is Windows 8.1/7, images are displayed in SDR according to the characteristics of the display so that they approximate display in HDR PQ on an HDR display as much as possible. However, the large difference in regions that can be rendered between HDR PQ and SDR results in a different impression of colors and gradations.

- **Recommended display environments for mixed HDR PQ mode images and SDR images**

It is recommended that you have a multiple-monitor environment using two displays, an SDR display and an HDR display, when using both HDR PQ and SDR display for images. On the SDR display, you can display the DPP thumbnail display, tool palettes, and SDR images, and you can use the HDR display to display the HDR images.

Cautions when Using HDR PQ Mode

Item		Restriction
Display function	Quick check window (p.31)	Displayed in SDR according to the characteristics of the display so that images approximate display in HDR PQ as much as possible
	Displaying AF points (p.22)	Not displayable*
	Displaying grid lines (p.22)	
	Highlight/shadow warning (p.23)	Not displayable
	Displaying properties in preview image (p.24)	Not displayable*
Basic Adjustment tool palette	Auto Lighting Optimizer (p.58)	Unavailable
	Changing the Picture Style (p.49)	The following Picture Styles are available - [Standard], [Portrait], [Landscape], [Fine Detail], [Neutral], [Faithful], [Monochrome]
	Using Picture Style Files (p.51)	Unavailable
	Linear (p.57)	
	Automatic adjustment of gradation and luminance (p.57)	
Detailed Adjustment tool palette	Reducing color moiré in images (p.69)	Unavailable
Partial Adjustment tool palette	Reducing color moiré (p.83)	Unavailable
Settings tool palette	Setting the work color space (p.90)	Not selectable
	Setting the size of RAW images when opening (p.92)	Unavailable
Tools	Compositing images (p.104)	Unavailable
	Generating HDR (High Dynamic Range) images (p.108)	
Simulation function	Using the soft-proof colors function (p.91)	Unavailable*
	Color matching settings (color setting of the monitor) (p.161)	

* The function is available when using an SDR monitor.

● Since recipes that become attached to images when HDR PQ is set to On and when HDR PQ is set to Off are not compatible, neither can be applied to the other.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Switching between HDR and SDR modes clears the following recipes:

Basic Adjustment tool palette	Auto Lighting Optimizer / linear / Picture Style* / gamma adjustment
Tone Adjustment tool palette	Tone curve adjustment (RGB), brightness, contrast
Settings tool palette	Work color space, size when opening RAW images
Color Adjustment tool palette	Hue and saturation adjustments for the entire image, color adjustments for specific gamuts
Detailed Adjustment tool palette	Reducing color moiré
Partial Adjustment tool palette	Partial adjustments and reducing color moiré
Dust Delete / Copy Stamp tool palette	Stamp
	Dust delete data

* The recipe is cleared if the Picture Style was set to a style other than [Standard], [Portrait], [Landscape], [Fine Detail], [Neutral], [Faithful] or [Monochrome].




Image quality enhancement in HDR PQ mode has been introduced as of Digital Photo Professional 4.10.40. To keep using previous adjustment results, select the check box for [HDR PQ image quality settings*] in [Image Processing 2], in [Preferences].



Saving Images Displayed in HDR PQ Mode in JPEG/TIFF Format

You can save the editing results of images displayed in HDR PQ mode in the same way as SDR images.

- See “Saving Editing Results” (p.93) for information on how to save images.
- When saving an image displayed in HDR PQ mode as a separate image (JPEG or TIFF image), it is saved as an SDR image. The image is processed so that it approximates display in HDR PQ on an HDR display as much as possible. However, the large difference in regions that can be rendered between HDR PQ and SDR results in a different impression of colors and gradations.
- For information on saving images in HEIF format, see “Saving Images Displayed in HDR PQ Mode in HEIF Format” (p.155).

 When an image displayed in HDR PQ mode is saved as a separate image (JPEG or TIFF image), the work color spaces of the saved images are all fixed at sRGB.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode


Specifying
Preferences



Saving Images Displayed in HDR PQ Mode in HEIF Format

Images displayed in HDR PQ mode can be saved in HEIF format (extension .heic) only if Canon HEVC Codec is installed. HEIF stands for High Efficiency Image File Format. If you save in HEIF format, you can save images and maintain the wide dynamic range of HDR PQ.

- Canon HEVC Codec can be downloaded from the Canon Web site.
- See “Saving Editing Results” ▶ “Saving as a separate image” (p.93) for information on saving images. When selecting the image type in step 3, select [HEIF (*.HEIC)] from [Save as type] and then save the image.
- You cannot select the image quality or compression rate when saving in HEIF format.
- You can [Save], [Save As], [Convert and save], or [Batch process] HEIF images.
- You can save a HEIF image as a JPEG or TIFF image. (It is saved as an SDR image.)
The image is processed so that it approximates display in HDR PQ on an HDR display as much as possible. However, the large difference in regions that can be rendered between HDR PQ and SDR results in a different impression of colors and gradations.
See “Saving Editing Results” (p.93) for information on how to save an image as a JPEG or TIFF image.

-  When a HEIF image is saved as a JPEG or TIFF image, the work color spaces of the saved images are all fixed at sRGB.
- HEIF files generated with software other than DPP are not compatible with HEIF files saved in DPP (both, extension .heic). Only HEIF files saved in DPP can be loaded into DPP.
- Images saved in HEIF format cannot be printed using Print Studio Pro software for Canon inkjet printers.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



10 Specifying Preferences



Specifying Preferences.....	157
General Settings.....	157
Image processing	158
Color Management.....	160
View Settings.....	161
Properties Display Settings	162
Survey	162

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Specifying Preferences


You can change the various functions of DPP in the [Preferences] window. Check the contents of each window and set.

Refer to the detailed explanations if available, as well as to each window.

1 Select the [Tools] menu ▶ [Preferences].


→ The [Preferences] window appears.

2 Select a tab sheet, specify the settings, and then click the [OK] button.

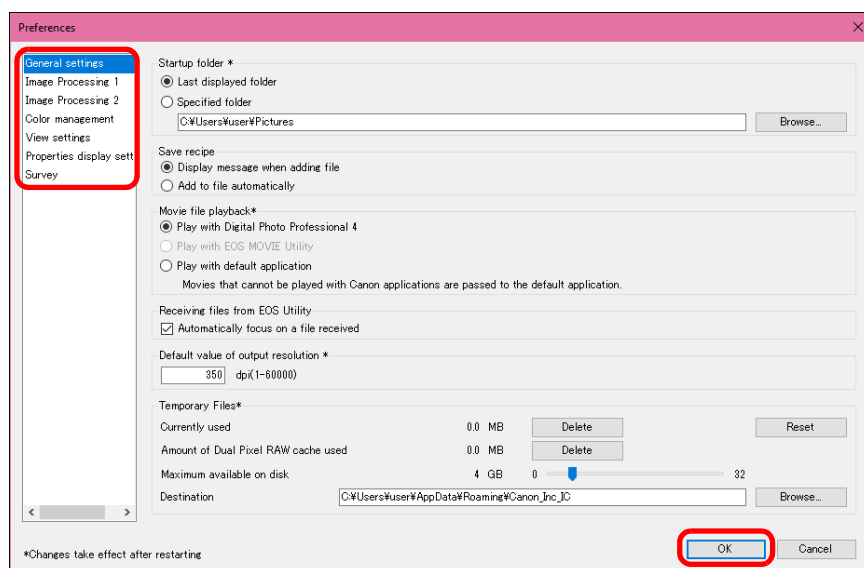

General Settings

You can specify the folder that opens when DPP is started up, saving of recipes, etc.

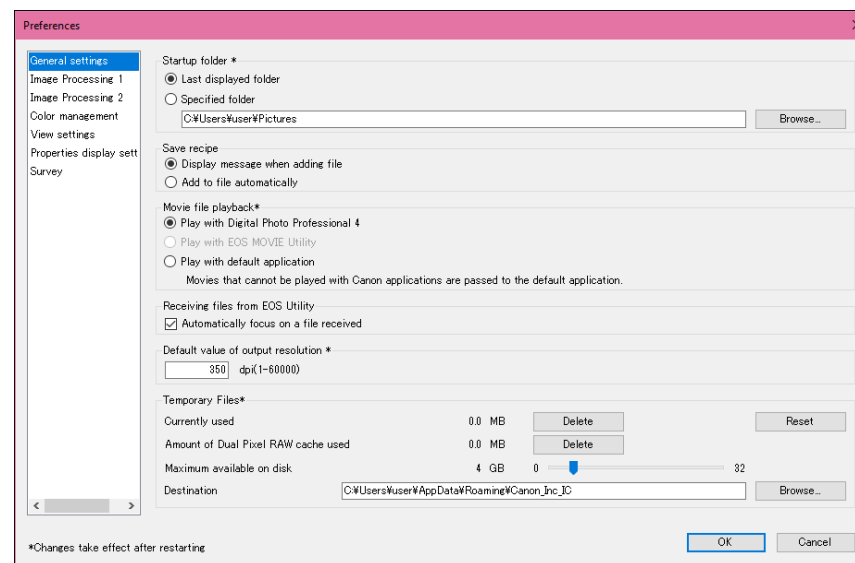

● Movie file playback

Choose the application used for playing back movie files. Movies that cannot be played back in DPP or EOS MOVIE Utility are played back with the movie playback application specified with the computer's OS settings. For information on EOS MOVIE Utility, refer to the EOS MOVIE Utility Instruction Manual.

- ! If you have changed the movie playback application to EOS MOVIE Utility, and playback does not start after starting up EOS MOVIE Utility, check compatible models with the EOS MOVIE Utility Instruction Manual.
- If the movie playback application specified with the computer's OS settings is set to EOS MOVIE Utility, MOV and MP4 files shot with the models that are not compatible with EOS MOVIE Utility will not be played back. Check the OS settings and change the movie playback application.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images


Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences

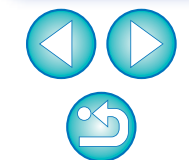

● Default value of output resolution

When saving JPEG or TIFF images created by converting RAW images (p.93, p.134), the resolution of the JPEG or TIFF images can be set.

● Temporarily saved files

You can delete temporarily saved files that were created and improve operation speed, change file save destinations, or set a limit on disk usage. Any changes you made will be applied when you start up DPP again.

- [Delete] button: Click the [Delete] button to delete temporarily saved files.
- [Maximum available on disk]: Set with the slider (setting range: 0 to 32 GB). Once usage reaches the limit, files are erased starting with the oldest.
- [Destination]: Click the [Browse] button to change the save destination in the dialog that appears.
- [Reset] button: Click the [Reset] button to revert all changes to the original settings.


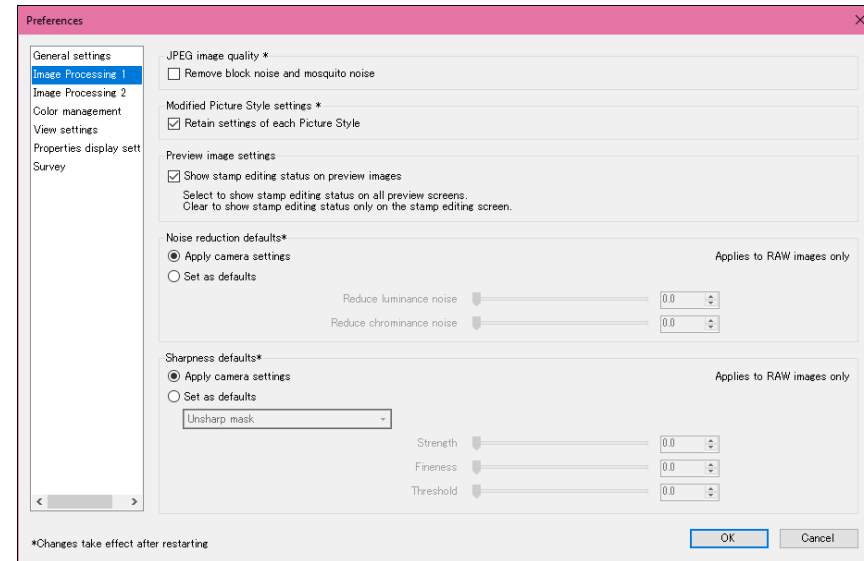
 **32bit** On 32-bit OSs, only deleting temporarily saved files is possible.

Image processing

You can specify settings for processing images in DPP.

Image Processing 1



● JPEG image quality

[Remove block noise and mosquito noise]

- You can improve the quality of a JPEG image by reducing the noise particular to JPEG images. This setting is also effective when RAW images are converted to JPEG images and saved (p.93, p.134) and for JPEG images that to be saved with a different name. The higher the JPEG image's compression rate, the better the effect. And when the compression rate is low, the effect of noise reduction may not be noticeable.

● Modified Picture Style settings

If you checkmark the checkbox, setting values for [Color tone], [Color saturation], [Contrast], [Unsharp mask], [Sharpness], and other options will be retained for each Picture Style.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



● Noise reduction defaults

You can set a default beforehand for the noise reduction level. Only RAW images are supported.

- When [Apply camera settings] is selected, you can pre-set a noise reduction level that suits the camera settings beforehand as the default.
- When [Set as defaults] is selected, you can pre-set a preferred default setting for the noise reduction level beforehand.

For images not having a recipe attached, the default noise reduction level set here is applied. If you changed settings, they will be applied to images as the default noise reduction level when you start up DPP again.

For images with a recipe attached, the noise level recorded in the recipe remains as it is and the default for noise reduction level set here is not applied.

● Sharpness defaults

You can set a default beforehand for the sharpness. Only RAW images are supported.

- When [Apply camera settings] is selected, you can pre-set a sharpness that suits the camera settings beforehand as the default.
- When [Set as defaults] is selected, you can pre-set preferred default settings for the sharpness and unsharp mask beforehand.

For images not having a recipe attached, the defaults for sharpness and unsharp mask set here are applied. If you changed settings, they will be applied to images as the default sharpness level when you start up DPP again.

For images with a recipe attached, the sharpness level recorded in the recipe remains as it is and the defaults for sharpness and unsharp mask set here are not applied.


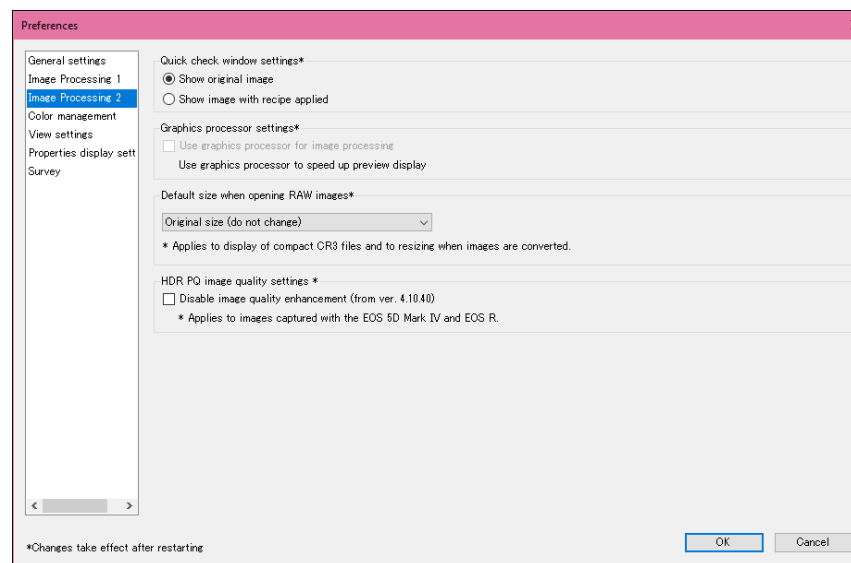
 **32bit** On 32-bit OSs, the [Preview image settings] menu is not displayed.

Image Processing 2



● Quick check window settings

You can specify image display settings for the quick check window. By selecting [Show image with recipe applied], images with a recipe attached are displayed with the recipe applied. Any changes you made will be applied when you start up DPP again.

● Graphic processor settings

If you checkmark [Use graphics processor for image processing], the graphics processor is used to allow a faster preview display. The CPU handles convert and save tasks as well as print tasks as usual. Settings will be applied the next time DPP is started up.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



- To use this function, a NVIDIA CUDA (Compute Capability 2.0 or higher) GPU* with at least 1.0 GB of video memory is necessary. Additionally, the latest NVIDIA GPU driver must be installed.
* GPU is an abbreviation of “Graphics Processing Unit”.
The [Use graphics processor for image processing] checkbox is available only when a supporting GPU is installed.
- If the OS or other application software is using the GPU, processing by the GPU may not be possible in some circumstances. In such a case, the CPU handles processing as usual.

● Default size when opening RAW images

This applies only to RAW images with the extension “.CR3” that were shot with [cRAW] selected on the camera.

This specifies the size defaults when RAW images are opened in DPP. This default size is also set when RAW images are converted and saved as JPEG or TIFF images.


The settings are applied the next time DPP is started up.

● HDR PQ image quality settings

Image quality enhancement in HDR PQ mode has been introduced as of Digital Photo Professional 4.10.40. To keep using previous adjustment results, select the check box for [HDR PQ image quality settings*].

Color Management

You can specify settings relating to color management, such as settings for work color space, conditions for color matching, etc.

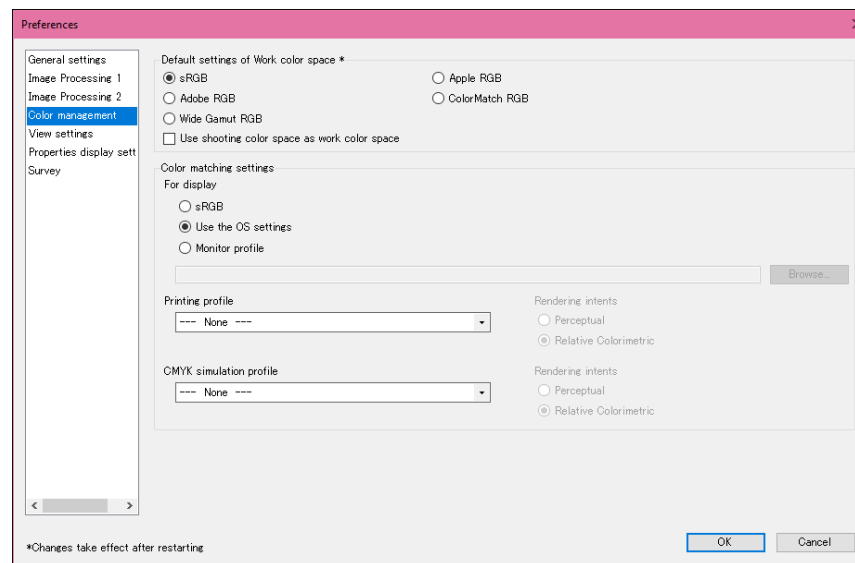

● Default settings of Work color space

You can select the color space (p.168) to be applied as a default setting of RAW images from five types. The color space set will be applied as the color space when a RAW image is converted and saved (p.93, p.134) or printed (p.127 to p.130).

- If you change the color space, and you restart DPP, the set color space is applied as the default color space.
- You can check the color space that is set in an image in all windows except the quick check window.
- If you checkmark [Use shooting color space as work color space], the color space specified with the camera when the image was shot will be set as work color space.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences





Changes are not applied to the edited image

Even if the default setting is changed, the new default setting is not applied to edited (i.e., adjusted using the tool palette, cropped, dust-erased) images. Change the settings individually.



You can set a color space that is different from the default settings for each image (p.90).

Color matching settings (color setting of the monitor)

Where a profile (p.167) is attached to the monitor you are using, you can display an image in more faithful colors by setting the profile.

- If you select [Use the OS settings], the color profile set in Windows will also be applied in DPP. If you are using multiple monitors, the profile set for each monitor is applied to DPP.
- Select the [Monitor profile], click the [Browse] button. You can select a profile for your monitor in the dialog box that appears.



Precise coloring with a third-party monitor color reader

If you use a profile created using a third-party monitor color reader, images can be displayed in even more precise colors.

Printing profile (color setting of the printer)


Where a profile is not attached to the printer you are using to print images, you can print an image, simulating the colors displayed on screen by setting the profile in DPP.



When you set a profile for printing in DPP, set the color adjustment function of the printer driver to off. If it is left on, the image may not be printed in colors close to those displayed on screen.

View Settings

You can set layout for screen display.

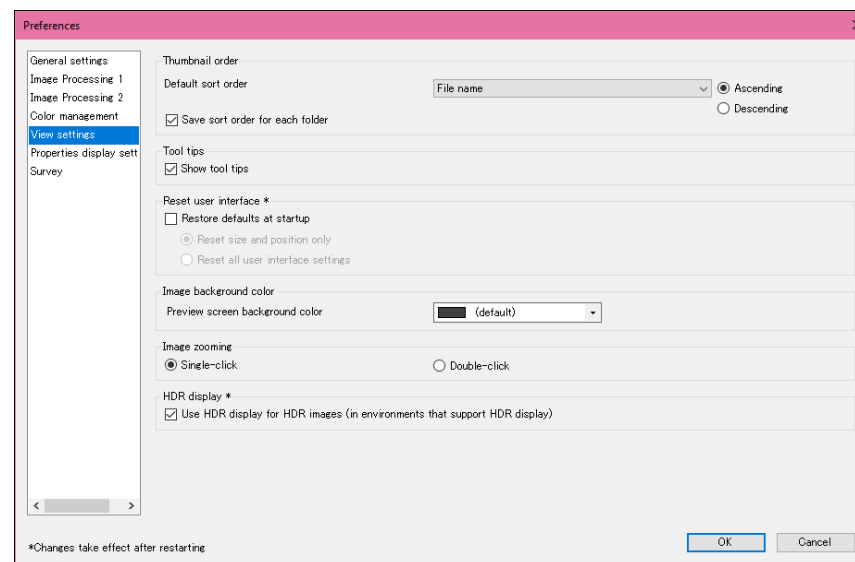

Thumbnail order

Specify the default order of images in the main window, and that the order of rearranged images be maintained. If you checkmark the checkbox, the order of rearranged images is maintained starting the next time you select a folder (p.36).

Reset user interface

You can reset user interface settings.


Choose from either of 2 reset states.

By checkmarking the [Restore defaults at startup] checkbox, settings revert to their original settings for next time you start up DPP. The checkmark is also removed from the checkbox for the next startup.



Properties Display Settings

You can specify settings for shooting and recipe information that appears with thumbnails and in the preview window.

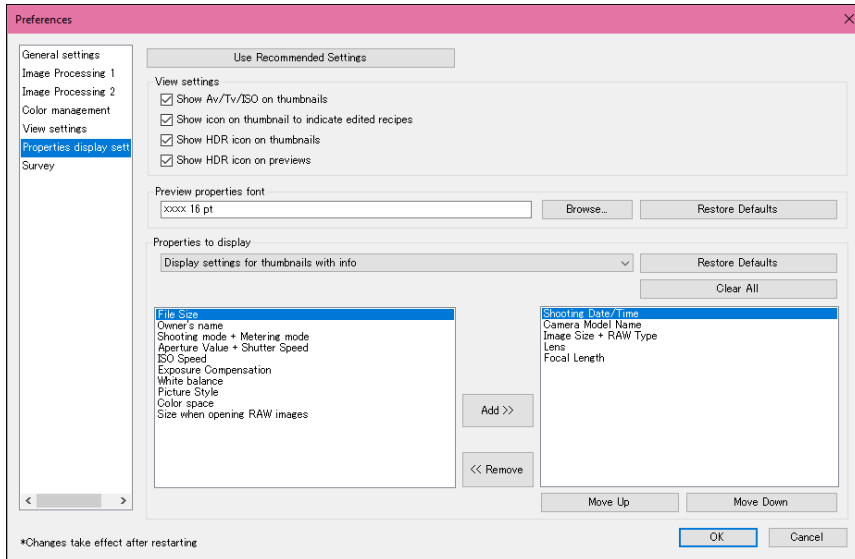

● View settings

You can specify information that appears on thumbnails or previews. If the [Show Av/Tv/ISO on thumbnails] checkbox is checked, Av/Tv/ISO information is displayed on thumbnails if thumbnails are set at Size 3 or larger.


● Preview properties font

You can specify the font used for information displayed in the preview window.

● Properties to display


You can specify detailed settings for [Display settings for thumbnails with info], [Display settings for thumbnail list], and [Display settings for preview properties].

Items that can be selected appear in the list box at left, and actually displayed items appear in the list box at right. Specify items with the [Add >>] button and [<< Remove] button. You can also change the display order with the [Move Up] button and [Move Down] button.

 All the property items may not be displayed depending on the combination of window, preview window, or the size of thumbnails.

Survey

You can change survey send settings.

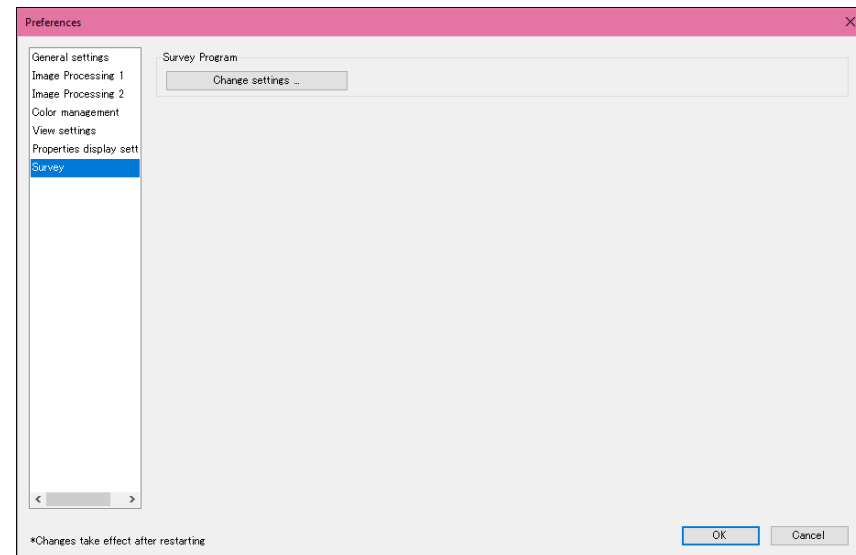

- Click the [Change settings] button and change settings in the dialog box that appears.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences





Troubleshooting	164
Deleting the Software (Uninstalling)	165
Image Frame Information in the Main Window and Edit Image Window.....	166
Glossary	167
Index.....	169
About This Instruction Manual.....	173
Trademarks	173

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Troubleshooting

If DPP is not operating correctly, refer to the subjects below.

Installation can not be completed correctly

- Select an administrator-level privilege ([Computer administrator], [Administrator], etc.) when setting the user. You cannot install the software if the user setting other than an administrator-level privilege is selected. For detailed information on selecting an administrator-level privilege, refer to your computer User's Manual.

DPP does not work

- DPP does not operate correctly on a computer if its system requirements are not met. Use DPP on a computer with compatible system requirements (p.3).
- Even if your computer has the RAM capacity (memory) described in the system requirements (p.3), if other applications are running at the same time as DPP, you may not have sufficient RAM (memory). Exit any applications other than DPP.

The card reader does not detect the SD card

- Depending on the card reader and computer OS used, SDXC cards may not be correctly detected. In such a case, connect your camera and computer with the provided interface cable, and transfer the images to your computer using EOS Utility.

Images are not displayed properly

- Images that are not supported by DPP are not displayed. (Thumbnail images are displayed as [?].) On a 32-bit version PC, when more images than the maximum displayable amount are detected, images beyond the maximum are not displayed. (Thumbnail images are displayed as [?].) There are various types of JPEG and TIFF images, so JPEG images other than Exif 2.2, 2.21 or 2.3 compatible images and TIFF images other than Exif compatible images may not be displayed properly (p.4).

A recipe could not be pasted (applied) to another image

- Since recipes are not compatible between RAW images and JPEG or TIFF images, neither can be applied to the other.

Colors are subdued in the image when viewed with other software

- If a RAW image which has a color space other than sRGB is converted and saved as a JPEG or TIFF image (p.90, p.160), the colors will be subdued when viewed in software that is only compatible with sRGB color space. In such a case, set the RAW image's color space to sRGB, convert and save again as a JPEG or TIFF image, and then view the image.
- The Auto Lighting Optimizer (p.58) is a function compatible with cameras equipped with the Auto Lighting Optimizer. Adjustments made with the Auto Lighting Optimizer cannot be applied to RAW images shot with the cameras not compatible with this function.

The colors of the image displayed on screen and the colors of the printed image do not match

- If the color of the monitor that displays an image is not adjusted correctly, or if the profile for a printer that is to print image is not set up, the color of the image displayed on screen and the color of the printed photograph may differ greatly. If the color of the monitor that displays images is corrected and the profile for a printer is set up correctly (p.161), the color of a printed photograph and the color of an image on screen can be more closely matched. Using a Canon printer automatically sets up the profiles for the printer, so you only need to set the color of the monitor to bring the colors closer to each other.

Printing a large number of images in batches cannot be performed

- If a large number of images are printed in batches, printing may stop in the middle or the images may not be printed. Reduce the number of images to print or increase the memory on your computer.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Deleting the Software (Uninstalling)

- Exit any applications before uninstalling the software.
- Log in under an administrator-level privilege when uninstalling the software.
- Uninstall the software according to the OS software uninstalling method.
- To prevent computer malfunctions, always restart your computer after you have uninstalled the software. Re-installing the software without first restarting your computer is particularly likely to result in computer malfunctions.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Image Frame Information in the Main Window and Edit Image Window (p.13, p.100)



^{*1} Displayed on RAW+JPEG images displayed as a single image (p.15).





[] is displayed in RAW images.


[] is displayed in Dual Pixel RAW images.


^{*2} When aspect ratio information is attached to an image shot with any supported camera other than the EOS 5D Mark II, the image is displayed as a cropped image.

^{*3} Displayed on images shot on a GPS function-compatible Canon camera.

^{*4} Shows that the movie is split and includes movies other than that shown in the thumbnail. The following icons may be displayed:

-  : No final movie
-  : No initial or final movie
-  : No initial movie
-  : All split movies present

[] is displayed in an image frame when editing is not possible.

Movies played back using software other than DPP are displayed with a [] icon in the thumbnail image.

For information on icons displayed in HDR PQ mode, see "Displaying Images in HDR PQ Mode" (p.150).

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Glossary

RAW image

EOS DIGITAL camera RAW images are recorded in an uncompressed 14bit or 12bit format.

Because RAW images are special images in an undeveloped status, you need software with development processing functions such as DPP in order to view them. The advantage of the undeveloped RAW images is that you can make a variety of adjustments to RAW images with almost no deterioration of the image.

* “RAW” meaning “in a natural condition” or “not processed or refined”.

JPEG image

The most ordinary image in non-reversible compressed 8bit format.

The advantage of this is that by saving at a high compression rate, the file size can be small, even for image data that has a high pixel count. Because during saving and compression part of the data is thinned out to make the file size small, every time you edit or save, the image deteriorates.

With DPP, even if you repeat editing/saving, only the recipe data is modified, and no overwriting or compression occurs so the original image data does not deteriorate.

* JPEG is an abbreviation of “Joint Photographic Experts Group”.

TIFF image

Bitmap-format image recorded in a 8bit/16bit uncompressed format.

Because TIFF images are in uncompressed format, they are suitable for saving an image while maintaining the original high image quality.

* TIFF is an abbreviation of “Tagged Image File Format”.

Recipe

The “Image processing conditions information” for RAW images that can be edited in DPP is called a “recipe”.

Further, in DPP, you can perform image editing on JPEG and TIFF images that use “recipes” as with RAW images.

bit number

Binary unit of information volume in the color of an image. The number shows the number of bits per pixel.

The larger the number of bits, the more the color numbers and the gradation becomes smoother. A one-bit image is a black-and-white image.

Color Management System (Color Matching)

Digital cameras that shoot images, monitors that display images, and printers that print images each have a different way of creating color. For this reason, there may be a difference between the color of an image when viewed on a monitor and when printed.

A color management system is a system for managing color in order to bring these colors closer together. With DPP, you can more closely match color between different devices using ICC profiles between different devices.

ICC profiles

ICC profiles are files containing color information such as color characteristics and color space for various devices, set by the ICC (International Color Consortium). Most devices such as the monitor we use to view images or the printer we use to print images can be managed (color management) using these ICC profiles and the color between different devices can be more closely matched.

DPP has color management that uses these ICC profiles.

Tone Curve

A tone curve shows values before adjustment (input) as the horizontal axis on a graph, and the values after adjustment (output) as the vertical axis. Since the values of before adjustment and after adjustment are the same before any adjustment is made, the tone curve displays as a straight line from bottom left to top right, and by changing this tone curve, you can adjust in detail the image’s brightness, contrast and color. The more you go right on the horizontal axis, the more the plus value it becomes, and the higher you go on the vertical axis, the more the plus value it becomes.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Color space

A color space is the reproducible color range (color gamut characteristics). DPP supports the following five kinds of color space.

sRGB : Standard color space for Windows. Widely used for the standard color space of monitors, digital cameras, and scanners.

Adobe RGB : A wider color space than sRGB. Mainly used for printing for business purposes.


Apple RGB : Standard color space for Macintosh. A slightly wider color space than sRGB.

ColorMatch RGB : A slightly wider color space than sRGB. Mainly used for printing for business purposes.

Wide Gamut RGB : A wider color space than Adobe RGB.

Refer to the color chart below for the color area of each color space.

Color chart of color spaces compatible with DPP

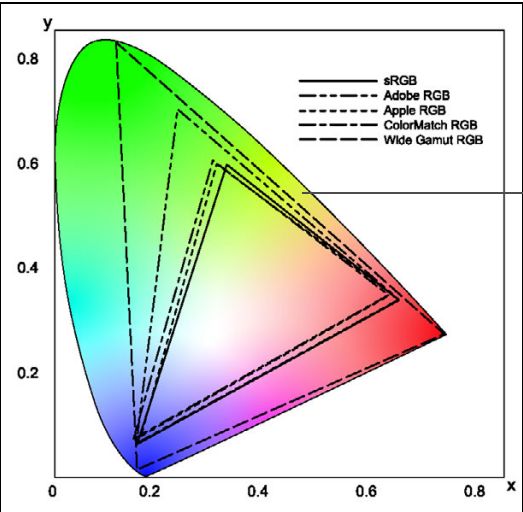

Color range that can be seen by the human eye

		Gamma value	White point (color temp.)
————	sRGB	2.2	6500K(D65)
-----	Adobe RGB	2.2	6500K(D65)
.....	Apple RGB	1.8	6500K(D65)
-----	ColorMatch RGB	1.8	5000K(D50)
-----	Wide Gamut RGB	2.2	5000K(D50)

CMYK simulation profiles

A profile that simulates colors when printing in a CMYK environment (printing machine, etc.). With DPP, you can simulate color with four types of profile.

Euro Standard : Profile normally used for book printing in Europe, suitable for simulation of standard European printing.

JMPA : Profile normally used for book printing, etc. in Japan, suitable for simulation of magazine advertising standard color printing.

U.S.Web Coated : Profile normally used for book printing in North America, suitable for simulation of North American standard printing.

JapanColor2001 type3 : Profile becoming a standard in the Japanese printing industry, suitable for simulation of JapanColor standard printing.

Rendering intent

Rendering intents are color conversion methods when printing an image. The conversion method of each rendering intent is shown below.

Perceptual : Before and after conversion, all colors are converted to maintain the relationship between colors. Even where colors slightly change, you can print a natural-looking image which has maintained color harmony. However, depending on the image, the saturation may change overall.

Relative Colorimetric : There will not be much conversion to colors which are similar before and after conversion, but colors which are not similar are converted appropriately. Because there are little changes to similar colors which comprise most of an image, you can print a natural-looking image in which the saturation has not changed greatly. However, depending on the image, there are cases where the overall tone of an image changes somewhat as colors which are not similar and highlights change.

Index

A

Adjust JPEG Images.....	45
Adjust TIFF Images.....	45
Adjusting	
Adjustment Contents (Recipe)	98
Apply Adjustments.....	97
Automatic Adjustment (Gradation, Luminance).....	57
Brightness	48, 61
Brightness of Highlights.....	54
Brightness of Shadows.....	54
Click White Balance	52, 62
Color Saturation	55
Color Temperature	53
Color Tone.....	55
Contrast.....	54, 61
Copy Adjustments	97
Dynamic Range.....	56, 65
Filter Effect	56
Hue.....	66, 67
Monochrome	55, 67
Personal White Balance	132
Picture Style File	51
Saturation	66, 67
Save Adjustments	97
Sharpness	59
Tone Curve Adjustment.....	63
Toning Effect	55, 56
White Balance	51
Adjusting Brightness	48
Adjusting Tone Curve	63
Adjustment Contents (Recipe).....	96, 167
Adobe RGB.....	168
AF Points	22
Apple RGB	168
Arrange Images	36
Auto Lighting Optimizer.....	58
Automatic Adjustment (Gradation, Luminance)	57
Automatic Dust Erasure Processing	86

B

Basic Adjustment Tool Palette.....	48
Batch Apply White Balance to Images (Personal White Balance).....	132
Batch Change the File Name of Images.....	137
Batch Convert/Save Images (Batch Process)	134
Batch Process (Batch Save JPEG and TIFF Images).....	134
Batch Process of Multiple Images	
Change File Name	137
Convert/Save (Batch Process).....	134
Personal White Balance	132
Recipe Data	96
Transfer.....	136
Batch Settings Window.....	134, 136
Batch Transfer Images	136
Batch Transfer Images to Image Editing Software	136
Before/After Comparison Display	24
bit Number	167
Bookmark	40
Brightness.....	61

C

Change File Name.....	137
Change the Display	14
Changing the File Name of Images in the Order in the Main Window.....	137
Check Mark	33, 34, 166
Chromatic Aberration Correction	74
Chrominance Noise Reduction	68
Click White Balance.....	52, 62, 142
CMYK Simulation	168
Collection Window	102
Color Blur Correction	74
Color Chart	168
Color Management (Color Matching)	167
Color Space	168
ICC Profiles	167
Color Management (Preferences)	160

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Color saturation.....	55
Color Setting of the Monitor (Profiles).....	160
Color Setting of the Printer (Profiles).....	161
Color Space.....	168
Adobe RGB.....	168
Apple RGB.....	168
Color Space Setting for Each Image.....	90
ColorMatch RGB.....	168
sRGB.....	168
Wide Gamut RGB.....	168
Color Space Setting for Each Image.....	90
Color Temperature.....	53
Color Tone.....	55
ColorMatch RGB.....	168
Compositing Images.....	104
Contrast.....	54, 61
Convert One Image.....	93
Convert to JPEG or TIFF Image and Save.....	93, 134
Copy Stamp (Image Correction).....	89
Copying and Pasting (Applying) Recipes.....	97
Correct Images (Copy Stamp Function).....	89
Cropping.....	70
Customize toolbar.....	125
D	
Default Color Space Setting.....	160
Delete Images.....	39
Deleting	
Delete Images.....	39
Delete the Software.....	165
Deleting DPP (Uninstalling).....	165
Depth compositing.....	115
Detailed Setting Printing (Printing with Shooting Information).....	128
Digital Lens Optimizer.....	77
Digital Lens Optimizer mark.....	166
Display	
Before/After Comparison Display.....	24

Enlarged Display (Preview Window).....	18
Enlarged Display (Quick Check Window).....	31
Multi-Function Preview.....	25
Single Image Display.....	37
Synchronize Preview Window.....	99
Thumbnail Display (Main Window).....	13
Thumbnail Display and Enlarged Display (Edit Image Window).....	100
Displaying Image Properties.....	24
Displaying Shooting Information.....	24
Distortion Correction.....	74
Downloading an Image to Your Computer.....	11
Downloading Images from a Camera.....	11
Downloading Images from a Card Reader.....	11
Downloading Images.....	11
Downloading Images from a Camera.....	11
Dual Pixel RAW Optimizer.....	111
Dust Delete Data.....	85, 86
Dust Delete/Copy Stamp Tool Palette.....	85
Dust Erasure Processing	
Automatic Dust Erasure Processing.....	85
Dust Delete/Copy Stamp Tool Palette.....	85
Image Correction (Copy Stamp Function).....	89
Manual Dust Erasure (Repair Function).....	87
Dynamic Range.....	56, 65
E	
Edit Image Window.....	100
Editing.....	Adjusting
Enlarged Display (Preview Window).....	18
EOS Utility.....	11
Exiting DPP.....	29
F	
Filter Effect.....	56
G	
General Settings (Preferences).....	157
GPS mark.....	166
Grid Lines.....	22

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



H	
HDR (High Dynamic Range) Images	108
HDR PQ Mode	148
Highlight Area Warning Indicator	23
Histogram Palette	17
Hue	46, 66, 67
I	
ICC Profiles	167
Image Information	38
Image Marks (Image Frame Information)	166
Image processing (Preferences)	158
Image Quality	
Noise Reduction	68
J	
JPEG Image	45, 167
L	
Lens Aberration Correction	73
Lens aberration correction mark	166
Linear	57
Loading and Pasting (Applying) Recipes	98
Luminance Noise Reduction	68
M	
Main Window	13
Main Window (Multi-layout)	20
Main Window (Thumbnail Layout)	13
Manual Dust Erasure (Repair Function)	87
Monochrome	55
Filter Effect	56
Toning effect	56
Move or Copy Folders	40
Move or Copy Images	39
Movies	
Play Back	145
Save Still Photos	145
Split movie mark	166

Multi-Function Preview	25
Multi-layout	20
Multiple image display mark	166
N	
Navigator Palette	19
Noise Reduction	68
O	
Organize Images	39
Organizing Images	39
Delete Images	39
Move or Copy Folders	40
Move or Copy Images	39
Register Folders as Bookmarks	40
P	
Palettes	
Display Method of Palettes	28
Rearranging Palettes	28
Perceptual	168
Peripheral Illumination Correction	74
Personal White Balance	132
Picture Style	49
Picture Style File	51
Pin	21
Pinned image setting mark	166
Preferences	157
Color Management	160
General Settings	157
Image processing	158
Properties Display Settings	162
Survey	162
View Settings	161
Preview Control Panel	21
Preview Display Area	20
Preview Window	18
Printing	
Printing a Thumbnail List (Contact Sheet Printing)	129
Printing One Sheet of Paper	127

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Printing with Shooting Information (Detailed Setting Printing)....	128
Printing One Sheet of Paper	127
Printing with Shooting Information (Detailed Setting Printing)	128
Properties Display Settings (Preferences).....	162

Q

Quick Check Window.....	31
-------------------------	----

R

Rating.....	33, 34
Rating mark.....	166
RAW Burst Image Tool	120
RAW Image.....	44, 167
Re-Adjusting an Image	95
Recipe.....	96, 167
Recipe File	96
Re-Editing an Image	95
Registering Folders as Bookmarks	40
Remote Shooting	139
Rename Window.....	137
Rendering Intent (Matching Method)	168
Repair (Manual Dust Erasure)	87
Roll.....	120
Rotate Images.....	13

S

Saturation.....	46, 66, 67
Save	
Batch Convert/Save Images (Batch Process).....	134
Save	93
Save As	93
Save As.....	93
Saving Recipes	97
Second Windows	26
Select Images	13, 31, 100
Shadow Area Warning Indicator	23
Sharpness.....	59, 80
Shooting Information Display	24, 38

Single Image Display	37
Single Image Display of RAW and JPEG Image	37
Soft-Proof Colors Function	91
Sorting Images	
Check marks	33, 34
Ratings	33, 34
sRGB	168
Starting up DPP	10
Supported Images	4
Survey (Preferences).....	162
Synchronization (Preview Window)	99
Synchronize Images	99
Synchronize Preview Window	99
System Requirements	3

T

Thumbnail Display (Filter/Sort Function)	16
Thumbnail Display (Main Window)	13
Change the Display.....	14
Thumbnail Display (Multi-layout)	20
Thumbnail Display and Enlarged Display (Edit Image Window)	100
Thumbnail Display Area	20
Thumbnail Layout.....	13
Thumbnails Control Panel	15
TIFF Image	45, 167
Tone Curve.....	167
Toning effect.....	56
Tool Palette	46
Basic Adjustment Tool Palette	48
Color Adjustment Tool Palette	66
Detailed Adjustment Tool Palette.....	68
Dust Delete/Copy Stamp Tool Palette	85
Lens Correction Tool Palette	73
Partial Adjustment tool palette	81
Settings Tool Palette	90
Tone Adjustment Tool Palette.....	61
Trimming/Angle Adjustment Tool Palette.....	70

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences



Toolbar.....	13
Transfer	
Batch Transfer Images to Image Editing Software.....	136
Transfer an Image to Photoshop.....	124
Transfer an Image to Photoshop	124
Trimming (cropping) range.....	166
Trimming/Angle Adjustment Tool Palette.....	70
Trimming/Angle Adjustment Window	70
U	
Unsaved editing content mark	166
Unsharp Mask.....	60
V	
View Settings (Preferences)	161
Viewing Images in the Main Window (Thumbnail Layout)	13
W	
White Balance.....	51
Click White Balance	52, 62
Color Temperature	53
Personal White Balance	132
Wide Gamut RGB	168
Work Color Space.....	90
Color Management.....	160

About This Instruction Manual

- It is prohibited to reproduce, in whole or part, the contents of this Instruction Manual without permission.
- Canon may change without notice the software specifications and contents of this Instruction Manual.
- The software screens and displays printed in this Instruction Manual may differ slightly from the actual software.
- Please note that irrespective of the above-mentioned, Canon does not take responsibility for the outcome of the operation of the software.

Trademarks

- Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Adobe and Photoshop are registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- All other trademarks are the property of their respective owners.

Introduction/
Contents

Downloading
Images

Viewing
Images

Sorting
Images

Editing
Images

Printing
Images

Processing
Large Numbers
of RAW Images

Remote
Shooting

Playing Back
Movies and Saving
Still Photos

HDR PQ
Mode

Specifying
Preferences

