


Kids Camera Instruction Manual
((For reference only))

Product Description

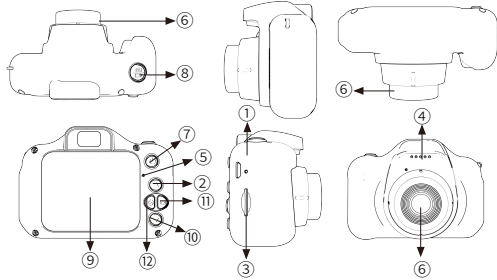

- 1.USB interface

2. UP

3. SD card slot

4. Speakers

5. Charging indicator

6. Front Camera
7. Power switch

8. Shutter button / "Confirm" button

9. Screen Display

10. Screen reduction button

11. Camera switching

12. Timer shooting button

Button Functions

- 1.With USB interface

①Connects to PC and transfers data.

②Connect an external power source to charge the battery or provide operating power.
- 2.Zoom-in function

①In take photo mode, press and hold this button to zoom in of the screen. Press briefly to select the filter type.

Select 'up' of the button in the menu options.
- 3.SD card slot

• It supports different capacity of sd card.
- 4.Speakers

• It is equipped with high quality speakers.
- 5.Charging indicator

• When charging, the light will turn red.
- 6.Front Camera
- 7.Power switch

①Turns the power on and off.

②Exit button in menu mode
8. Shutter button / "Confirm" button

①In video mode, press this button to start recording. Press again to stop recording. (Note: The video recording function is available when an SD card is inserted.)

②Press this button in photo mode to take a picture.

③In Menu mode, this is the "Confirm" button.
9. Display Screen

•HD Display

10. Screen reduction button

①In take picture mode, press and hold this button to change the screen magnification. Short press this button to select a filter type.

②In menu options, this is the function button to select down.
11. Switch camera button (right)

①This is the function button to select to the right in the menu options.

②In shooting mode, short press this button to switch between the front-camera and rear camera.
12. Timer taking button (left)

①This is the function button selected to the left in the menu options.

②In shooting mode, press this button briefly to shoot with a timer.
- Operation Explanation

1.Power ON/OFF
Press and hold the power switch for about 3 seconds, the screen will turn on. Press and hold this button again for about 3 seconds to turn off the indicator light and turn off the main menu.


2.Mode setting
Short press on the"Up, Down, Right, Left" button selects the corresponding mode.

3.Video Recording Mode
Short press on the "shutter button" starts recording. Short press again will stop recording.

4.Picture taking mode
Short press on the "shutter release button" takes a picture.

5.Game Mode
After selecting a game with the "Left/Right" buttons, press the "Shutter" button briefly to enter the game. Short press the "Power Switch" to exit the game.

How to use the battery:
Refer to the figure below for an indication of the battery status.



- 1.USB mode
Connect the cable to a computer to read and save videos and photos.
- 2.There are three ways to charge the battery. During charging, the indicator light turns red. After the light goes out, the charge is complete.

①Charge the battery with the power adapter.

②Charging via PC-USB

③Charging with the vehicle power supply.

Caution: When using this product, improper operation may cause a crash phenomenon, so first turn off the product, then turn it on again to get back to normal.


Product Specifications

Model No.	GC0308
Features	Photo, Video, Games
Display	2.0 inches
Lens	1080P
Languages	Russian, English, Simplified Chinese, Traditional Chinese, Korean, Japanese, etc.
Expanded memory	SD card, can support up to 32G
Photo Format	JPEG
Shooting Format	AVI
Photo Resolution	20M、12M、8M、5M、3M
Shooting Resolution	1080P:1440*1080 720P:1280*720
Battery Capacity	600mAh
Charging Time	2 hours
Charging Voltage	DC-5V
Games	five available
Main unit weight	57.8G

Warranty Card

Thank you for purchasing our products, please fill in the following contents when purchasing and save this card properly.

User profile	
Contact	
contact number	
Order ID	
Address	
Remarks	

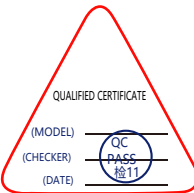

01

02

03

04


05

06

07

子供用カメラ 取扱説明書
(参照用)

各部の名所と機能

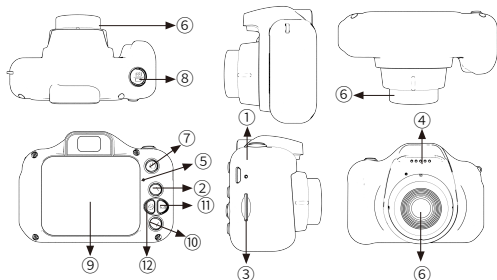

- 1.USBポート

2. 画面拡大機能ボタン

3. SDカードスロット

4. スピーカー

5. 充電指示ライト

6. レンズ
7. 電源スイッチ

8. シャッターボタン/「確認」ボタン

9. ディスプレイ

10. 画面縮小機能ボタン

11. インカメラボタン

12. タイマー撮るボタン

機能ボタンの説明

- 1.USBポーと

•PCを接続してデータを転送します。

•外部電源を接続してバッテリーに充電したり、動作電力を供給したりします。
- 2.画面拡大ボタン

•写真を撮るモードで、このボタンを長押しして、画面を拡大変更します。短押しすると、フィルタータイプを選択できます。

•メニューオプションで、上へ選択する機能ボタンです。
- 3.SDカードスロット

•SDカードを入れるスロットです。
- 4.スピーカー

•高音質スピーカーを搭載しています。
- 5.充電指示ライト

•充電する時、ライトが赤くなります。
- 6.フロントカメラ
7. 電源スイッチ

•本体の電源をON/OFFします。

•メニューオプションを「終了」するボタンです。
8. シャッターボタン/「確認」ボタン

•録画モードで、このボタンを押すと、録画開始します。再度押すと、録画停止します。

(注: SDカードが入っているとき、録画機能を使用できます。)

•撮るモードでこのボタンを押すと、写真を撮ります。

•メニューモードで、これは「確認」ボタンです。
9. レンズ

•ファインダー窓

10. 画面縮小ボタン

•写真を撮るモードで、このボタンを長押しして、画面を拡大変更します。短押しすると、フィルタータイプを選択できます。

•メニューオプションで、下へ選択する機能ボタンです。
11. インカメラボタン (右)

•メニューオプションで、右へ選択する機能ボタンです。

•撮影モードで、このボタンを短押しすると、インカメラとリアカメラを切り替えることができます。
12. タイマー撮るボタン (左)

•メニューオプションで、右へ選択する機能ボタンです。

•撮影モードで、このボタンを短押しすると、タイマー撮ることができます。
- 操作説明

1.ON/OFF
電源スイッチを3秒ぐらい長押しすると、指くなり、本体がONします。このボタンを再度3秒ぐらい長押しすると、指示ライトが消えて、本体がOFFします。

2.モードの設定
「上、下、右、左」ボタンを短押しすると、必要なモードを選択できます。

3.録画モード
「シャッターボタン」を短押しすると、録画を開始します。再度短押しすると、録画が停止になります。

4.写真を撮るモード
「シャッターボタン」を短押しすると、写真が撮れます。

5.ゲームモード
「右、左」ボタンでゲームを選択された後、「シャッターボタン」を短押しして、ゲームに入ります。「電源スイッチ」を短押しして、ゲームが終了します。

バッテリーの使い方:

バッテリー残量の表示について、下記の図を参照してください:



- 1.USBモード
ケーブルをコンピューターに接続して、ビデオと写真を読み取ることや保存することができます。
- 2.バッテリーに充電する方法が三つあります。充電中、指示ライトが赤く点灯します。ライトが消えた後、充電完了することになります。

1.電源アダプターで充電する。

2.PC-USBで充電する。

3.車両用電源で充電する。

注意:本製品を使用する場合、不適切な操作によりクラッシュする現象が発生する可能性がありますので、まず製品をOFFして、その後再度ONしてから正常に戻ります。

製品仕様

型番	GC0308
機能	写真、ビデオ、ゲーム
ディスプレイ	2.0インチ
レンズ	1080P
言語	ロシア語、英語、中国語(簡体字)、中国語(繁体字)、韓国語、日本語など
拡張メモリ	SDカード、最大32Gまでサポートできる
写真フォーマット	JPEG
撮影フォーマット	AVI
写真解像度	20M、12M、8M、5M、3M
撮影解像度	1080P:1440*1080 720P:1280*720
バッテリー容量	600mAh
充電時間	2時間
充電電圧	DC-5V
ゲーム	五つあり
本体重量	57.8G

01

02

03

04

05

06

07