




Content

EN	-----	01
JP	-----	07
RU	-----	13

Product Introduction

EN

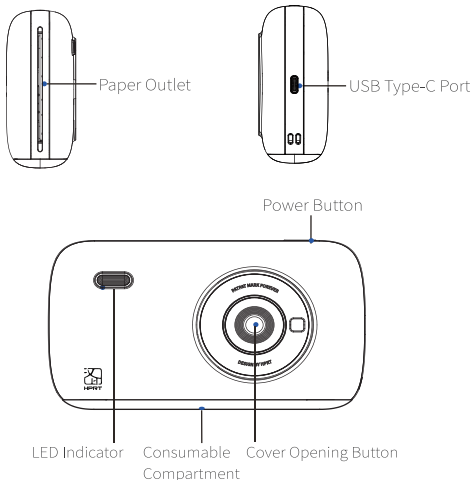

Accessories



USB Cable



Quick Start Guide



Consumable



If there is a paper jam or ribbon jam and cannot be solved, please contact the after-sales service and do not remove it violently.

LED Indicator Status

● Red LED

ON: Paper jam/Paper end/Printed photo not taken away/Ribbon end/Ribbon abnormal

Slow Flash: Low power

Quick Flash: Printer is over temperature

● Blue LED

ON: Charging finished/Printer is ready/Printing

Slow Flash: Charging

Quick Flash: Turning on

●Red and Blue LED ----- Alternant Flash: Firmware upgrade



Please check the Bluetooth connection status of the printer through the APP.

Consumable Installation Instructions


01

Press the cover opening button to open the consumable compartment;




02

Take out a consumable, put it into the compartment according to the direction shown below, place your finger in the "Push" position and press it into place until it makes a "click" sound;

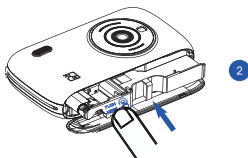

03


Close the consumable compartment.

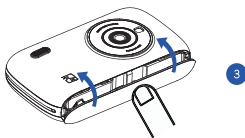

-  1. The photo paper is susceptible to moisture, please use it as soon as possible after opening.
2. This device only supports official photo paper that comes with the ribbon, please do not replace it by yourself.
3. Avoid excessive direct sunlight and low temperature.
4. If the consumable is damaged or deformed by external force, please do not insert it into the device by force.

Printing Instructions

- 1 Press and hold the power button for 3 seconds until the blue light flashes quickly, then release it to turn on the printer;



- 2 Scan the QR code to download the APP. Open APP, click "Add Device", and "Connect" with "CP2100-XXXX" (XXXX are last four digits of Bluetooth address);



- 3 Choose the photo you want to print and adjust it in Preview;



- 4 Click "Print" to print it.



1. After the first connection, you just need to click the print icon for subsequent use, the printer will be automatically connected and print.
2. Do not exit the APP during the printing process, this may cause printing failure.

Precautions


1. The best working temperature of the printer is 5°C~40°C.
If the ambient temperature is too high, the printing quality may be affected;
2. Please use official ribbon and photo paper to ensure print quality;
3. Avoid disassembling the ribbon and photo paper by yourself.
If the glossy surface of the photo paper is polluted, the printing quality will be affected;
4. Do not pull out the consumable forcibly during printing,
this may damage the printer;
5. When not in use for a long time, close the consumable compartment
to keep things like dust out;
6. After printing multiple photos in a row, the device may activate
overtemperature protection, which is normal, and the current task
will continue to be printed after cooling;
7. Do not perform any operations while the device is turning on.

Operating Environment

1. Place the printer on a desktop or other flat, stable surface;
2. Please make sure that there is more than 10 cm space in the paper
outlet of the printer.

Battery Charging


1. When the battery power is low, the red LED indicator will flash slowly. Please charge it by the equipped USB cable in time. If you continue printing, it may power off automatically.
2. Plug one end of the USB cable into the printer's port, and connect the other end to the power adapter. After connecting, the blue LED indicator will flash slowly.
3. The charging time is about 90-120 minutes. When charging is complete, the blue LED indicator will always be on.

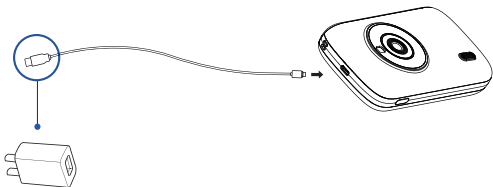

Charge via Adapter

- ⚠** 1. The printer can be charged via computer or adapter with USB cable. Please note that the adapter is not equipped with the printer. Users who use power adapters for charging should purchase and use power adapters that are certified for safety and meet the requirements of the standard.
2. Users are prohibited from disassembling the machine by themselves, if replacing the wrong model of battery will be at risk of explosion. Please be sure to dispose of the used battery according to the instructions.
3. When the printer is low power, please charge it for a period of time before using it, so as to avoid interrupting printing due to insufficient power during use.

WARNING: Operating this device may cause radio interference in a residential environment.

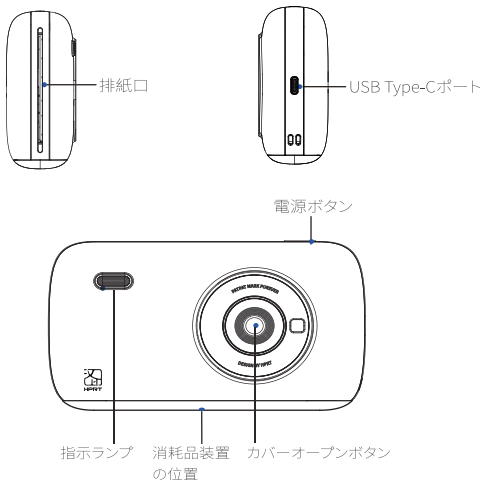

アクセサリ



USBケーブル



取扱説明書



消耗品



紙詰まりやリボン詰まりが発生して解決できない場合は、暴力的に除去しないで、アフターサービスに連絡してください。

指示ランプ状態

● 赤ランプ

ON: 紙詰まり/紙不足/印刷された写真は持ち去られて
いません/リボン切れ/リボン異常

スローフラッシュ: 電力不足

クイックフラッシュ: プリンターが過熱している

● 青ランプ

ON: 充電完了/プリンタ準備完了/印刷中

スローフラッシュ: 充電

クイックフラッシュ: 電源入れ

● 赤ランプと青ランプ

赤青に交互点滅: ファームウェアアップ
グレード



プリンタのBluetooth接続状態をAPPで確認してください。

リボン・写真用紙の取り付け説明


01

カバーオープンボタンを押して、
カバーを開ける；




02

消耗品を取り出し、下図の方向に従ってフ
ォトプリンタの中に入れ、「PUSH」位置
に指を置き、カチッと音がするまで
押し込む；

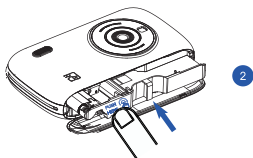

03


カバーを閉じる。

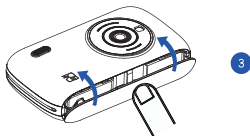

- !** 1. 写真用紙は湿気に弱いので、開封後はなるべく早くお使いください。
2. 本機はリボンに付属の公式の写真用紙にしか対応していませんので、ご自身で交換しないでください。
3. 過度の直射日光や低温を避けてください。
4. 消耗品が外力により破損、変形した場合、無理に本機に挿入しないでください。

印刷説明

- 1 青ランプが素早く点滅するまで電源ボタンを3秒間長押しし、離すとプリンターの電源が入ります；



- 2 QRコードをスキャンしてAPPをダウンロードください。APPを開き、「デバイスを接続」をクリックし、「CP2100-XXXX」（XXXXはBluetoothアドレスの下4桁）と「接続」します；



- 3 印刷する写真を選択し、プレビューで調整します；



- 4 「印刷」をクリックして印刷します。



-  1. 初回接続後、次回以降は印刷アイコンをクリックするだけで、プリンターが自動的に接続され印刷されます。
2. 印刷中にAPPを終了しないでください、印刷に失敗する可能性があります。

注意事項


1. プリンターの最適な使用温度は5℃～40℃です。周囲温度が高すぎる場合、印刷品質に影響が出ることがあります；
2. 印刷品質を確保するために、公式なリボンとフォトペーパーを使用してください；
3. リボンやフォトペーパーをご自身で取り外さないでください。
写真用紙の光沢面が汚れていると、印刷品質に影響が出ます；
4. 印刷中に消耗品を無理に引き抜かないでください、プリンターを損傷する恐れがあります；
5. 長時間使用しないときは、カバーを閉じて、ほこりのようなものが入らないようにします；
6. 複数の写真を連続して印刷した後、デバイスが過熱保護を起動することがありますが、これは正常であり、冷却後に現在のタスクは印刷を続行します；
7. デバイスは起動中なら、何もしないでください。

使用環境

1. デスクトップなど、平らで安定した場所にプリンターを置きます；
2. プリンターの排紙口に10cm以上の空間があることを確認してください。

バッテリーの充電


1. 電池残量が少なくなると、赤ランプがゆっくり点滅します。
付属のUSBケーブルで充電してください。印刷を続けると、自動的に電源が切れることがあります。
2. USBケーブルの一端をプリンターのポートに差し込み、もう一端を電源アダプターに接続します。接続後、青ランプがゆっくり点滅します。
3. 充電時間は約90～120分です。充電が完了すると、青ランプが常に点灯します。

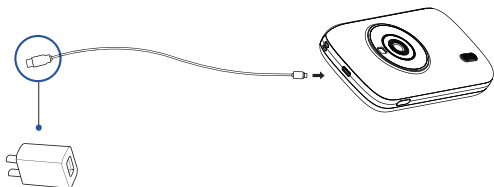

アダプターで充電

- ⚠** 1. プリンターの充電は、パソコンまたはアダプターを経由して、USBケーブルで行います。アダプターはプリンターに付属していませんので、ご注意ください。充電に電源アダプターを使用するユーザーは、安全性が確認され、規格の要件を満たした電源アダプターを購入し、使用してください。
2. ユーザー自身による機械の分解は禁止されています。もし間違ったモデルのバッテリーを交換した場合、爆発の危険があります。使用済みの電池は、必ず説明書に従って廃棄してください。
3. プリンターが低電力である場合、使用中に電力不足で印刷が中断するのを避けるため、しばらく充電してから使用してください。

警告：住宅環境でこのデバイス进行操作すると、電波干渉が発生する可能性があります。

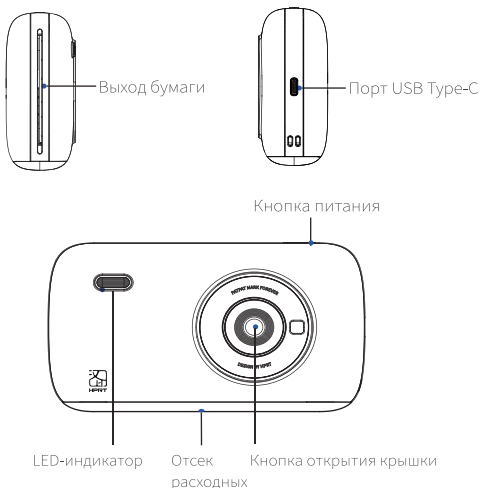

Аксессуары



USB-кабель



Краткое руководство
по запуску



Расходные

! Если произошло замятие бумаги или ленты и его не удастся устранить, обратитесь в службу послепродажного обслуживания и не извлекайте его насильно.

Состояние LED индикатора

● Красный LED

Горит постоянно: Замятие бумаги/Кончилась бумага /Отпечатанная фотография не удалена/Лента закончилась/Лента не в порядке

Медленное мигание: низкий заряд батареи

Быстрое мигание: принтер перегрелся

● Синий LED

Горит постоянно: Зарядка завершена /Принтер готов/Печатает

Медленное мигание: Заряжается

Быстрое мигание: Включение

- Красный и Синий LED Альтернативная вспышка:
Обновление прошивки



Пожалуйста, проверьте состояние Bluetooth-подключения принтера через приложение.

Инструкции по установке ленты и фотобумаги

01


Нажмите кнопку открытия крышки, чтобы открыть расходный отсек.



1

02


Выньте расходный материал, поместите его в отсек в соответствии с направлением, показанным ниже, поместите палец в положение «Нажать» и нажмите на него до щелчка.

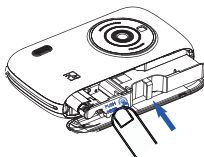

2

03

Закрыть расходный отсек.

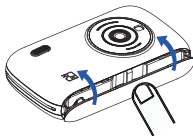


3



1. Фотобумага чувствительна к влаге, используйте ее как можно скорее после вскрытия.
2. Это устройство поддерживает только официальную фотобумагу, поставляемую с лентой, не заменяйте ее самостоятельно.
3. Избегайте прямых солнечных лучей и низких температур.
4. Если расходный материал поврежден или деформирован нешной силой, пожалуйста, не вставляйте его в устройство с силой.

Инструкции по печати

- 1 Нажмите и удерживайте кнопку питания в течение 3 секунд, пока синий свет не начнет быстро мигать, затем отпустите ее, чтобы включить принтер;



- 2 Сканируйте QR-код для загрузки приложения. Откройте приложение, нажмите «Добавить устройство» и «Подключитесь» к «CP2100-XXXX» (XXXX — последние четыре цифры адреса Bluetooth);



- 3 Выберите фотографию, которую хотите распечатать, и настройте ее в режиме предварительного просмотра;



- 4 Нажмите «Печать», чтобы распечатать его.



1. После первого подключения вам достаточно нажать на иконку печати для последующего использования, принтер автоматически подключится и начнет печатать.
2. Не выходите из приложения во время печати, это может привести к сбою печати.

Меры предосторожности


1. Оптимальная рабочая температура принтера составляет 5°C~40°C. Если температура окружающей среды слишком высока, это может повлиять на качество печати;
2. Пожалуйста, используйте официальную ленту и фотобумагу для обеспечения качества печати;
3. Не разбирайте ленту и фотобумагу самостоятельно. Если глянцевая поверхность фотобумаги загрязнена, это повлияет на качество печати;
4. Не вытягивайте расходный материал силой во время печати, это может привести к повреждению принтера;
5. Если устройство не используется в течение длительного времени, закройте отсек для расходных материалов, чтобы внутрь не попали такие предметы, как пыль;
6. После печати нескольких фотографий подряд устройство может активировать защиту от перегрева, что является нормальным явлением, и текущая задача продолжит печать после охлаждения;
7. Не выполняйте никаких действий во время включения устройства.

Рабочая среда

1. Поместите принтер на стол или другую плоскую устойчивую поверхность;
2. Убедитесь, что в выходном отверстии для бумаги в принтере есть свободное пространство более 10 см.

Зарядка батареи

1. Когда заряд батареи низкий, красный светодиодный индикатор будет медленно мигать. Пожалуйста, вовремя заряжайте его с помощью USB-кабеля. Если вы продолжите печать, он может автоматически отключиться.
2. Вставьте один конец USB-кабеля в порт принтера, а другой конец подключите к адаптеру питания. После подключения синий светодиод будет медленно мигать.
3. Время зарядки около 90-120 минут. Когда зарядка завершена, синий светодиодный индикатор всегда будет гореть.

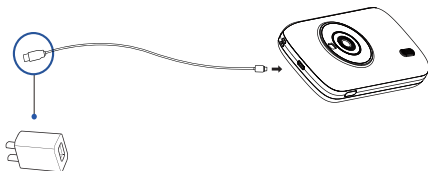

Зарядка через адаптер

- ⚠ 1.** Принтер можно заряжать через компьютер или адаптер с помощью USB-кабеля. Обратите внимание, что адаптер не входит в комплект поставки принтера. Пользователи, использующие адаптеры питания для зарядки, должны приобретать и использовать адаптеры питания, сертифицированные по безопасности и отвечающие требованиям стандарта.
- 2.** Пользователям запрещается самостоятельно разбирать машину, если замена батареи неправильной модели может привести к взрыву. Обязательно утилизируйте использованную батарею в соответствии с инструкциями.
- 3.** Когда принтер работает с низким энергопотреблением, зарядите его в течение определенного периода времени перед использованием, чтобы избежать прерывания печати из-за недостаточного питания во время использования.

ПРЕДУПРЕЖДЕНИЕ: Использование этого устройства может вызвать радиопомехи в жилых помещениях».

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

FCC ID: 2AUTE-2TS22H



Please Scan QR Code to Get 24h After-sales Technical Support Service



Search “HPRT Official ”on YouTube to Get Instruction Videos



HPRT YouTube Website

Search “HPRT Official ”on Facebook to Get Extra Consumables of Printer



HPRT Facebook Website

CP2100

Product Name: Portable Photo Printer

Print Method: Dye Sublimation

Print Area: 53*86 mm

Battery Capacity: 800 mAh

Dimensions: 146*83*34 mm

Weight: About 280 g(without accessories)

Executive Standard: GB4943.1-2011, GB/T9254.1-2021, GB17625.1-2012

Product Model: CP2100

Print Resolution: 300 DPI

Operating Temperature: 5°C~40°C

Charging Port: 5V/2A, Type-C

Manufacturer: Xiamen Hanin Electronic Technology Co.,Ltd.

Add: No.96, Rongyuan Road, Tong'an District, Xiamen, China, 361100

E-mail: support@hprrt.com

Web: www.hprrtprinter.com