MUNBYN

Thermal Receipt Printer

User Manual

MUNBYN

MORE CHOICE FOR YOUR
GROWING BUSINESS

MORE CHOICE FOR YOUR
GROWING BUSINESS

ITPP098PU

MUNBYN

Contents

1.0. Introduction

This document introduces the setup procedure for the ITPP098PU.

Please read the instructions before using the printer.

For further instructions, please refer to the ITPP098PU software manual: http://u.pc.cd/71dctaIK

ITPP098PU

2.0. Check the Packing List

Printer

User Manual

Roller

Roll Paper

USB Cable

Power Cord

In case of omission or damage, please contact us via the contact details below.

Scan the QR code for Facebook or WhatsApp online chat

3.0. Paper Loading

1.Press the cover opening button and then open the cover.

2.Insert a roll of paper in the direction shown in the illustration.

3.Pull the end of the paper out straight, and push down the printer cover to close.

4.0. Initial Setup

4.1. Set Up The ITPP098PU for First Use on Windows

4.1.1. Download Windows Driver

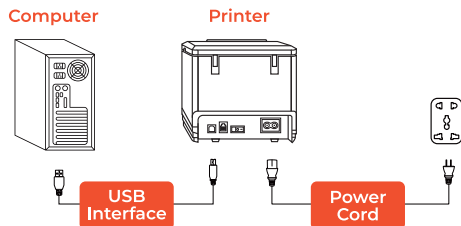Please download the driver from the MUNBYN website or the link below.
Driver download: http://u.pc.cd/UeTctaIK
MUNBYN website: munbyn.biz/hpDrivers

4.1.2. USB Interface

(1)Connect the printer to the power outlet via the power cord.
(2)Connect the printer to your Windows computer via USB cable.
(3)Place the thermal paper into the printer and power it on.

Open the downloaded Windows driver and install it.
Demo video: http://u.pc.cd/enX

4.2. Set Up The ITPP098PU for First Use on MacBook

4.2.1. Download MacBook Driver

Please download the driver from the MUNBYN website or the link below.
Driver download: http://u.pc.cd/5IHctaIK
MUNBYN website: munbyn.biz/hpDrivers

4.1.2. USB Interface

(1)Connect the printer to the power outlet via the power cord.
(2)Connect the printer to your MacBook computer via USB cable.
(3)Place the thermal paper into the printer and power it on.
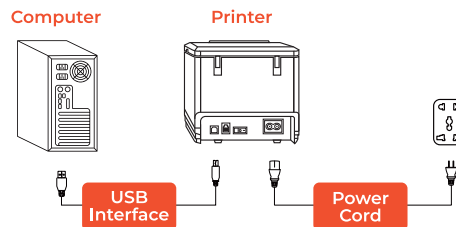
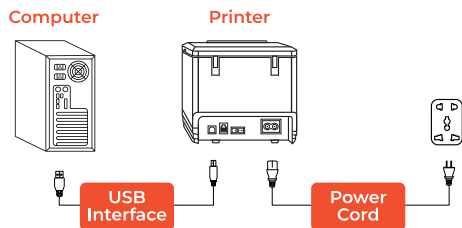Open the downloaded MacBook driver and install it.
Demo video: http://u.pc.cd/3sSrtaIK

4.3. Set Up the ITPP098PU for First Use on Linux/Raspberry Pi

4.3.1. Download Linux/Raspberry Pi Driver

Please download the driver from the MUNBYN website or the link below.
Linux driver download link: http://u.pc.cd/jxP7
Raspberry Pi driver download link: http://u.pc.cd/J6qrtaIK
MUNBYN website： munbyn.biz/hpDrivers

4.3.2. USB Interface

(1)Connect the printer to the power outlet via the power cord.
(2)Connect the printer to your Linux/Raspberry Pi devices via USB cable.
(3)Place the thermal paper into the printer and power it on.

Computer   Printer

USB Interface   Power Cord

Open the downloaded Linux/Raspberry Pi Driver and install it.
Demo video: http://u.pc.cd/RzjctaIK

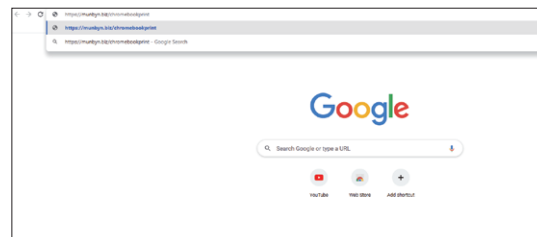**4.4. Set Up The ITPP098PU for First Use on Chromebook**

(1)Connect the printer to the power outlet via the power cord.
(2)Connect the printer to your Chromebook computer via USB cable.
(3)Place the thermal paper into the printer and power it on.

Computer   Printer

USB Interface   Power Cord

(4)Enter in Google Chrome: https://munbyn.biz/chromebookprint
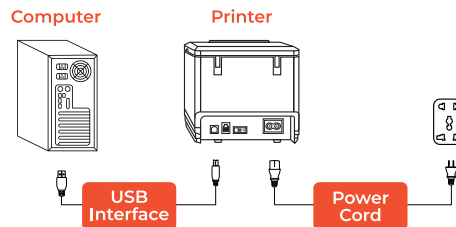
(5)Click "Add to Chrome" first, and then click "Add extension" to download and add the extension.
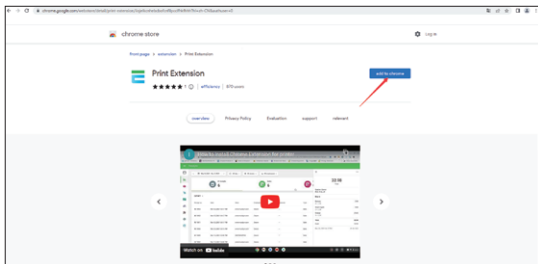
(6)Follow the demo video to add the printer.
Demo video: http://u.pc.cd/Bh3itaIK

5.0. Contact us

MUNBYN provides 18 months warranty and lifetime free service. If you encounter any issues with the product, please contact the MUNBYN team to promptly receive troubleshooting tips or a replacement.

Scan the QR code for Facebook or WhatsApp online chat

Email: support@munbyn.com (24-7 online support)

Website: www.support.munbyn.com
(how-to videos and online latest FAQ)

Whatsapp: +86-18144898200

Phone: +16502062250